



### **SPECIFICATIONS**

Model	Stroke mm	Max Absorption Energy J(kgf∙m)	Max Equivalent Mass kg(kgf)
FA-0805SB2-C	5	0.68(0.07)	5(5)

Max Drag N(kgf)	Absorption Energy per min. J/min(kgf·m/min)	Extension Force N(kgf)	Mass g
588 (60)	22.5(2.3)	4.9(0.5) or lower	8.8

<sup>■</sup> The thread pitch P1.0 is supplied as well

# **COMMON SPECIFICATIONS**

Range of Impact Rate	m/s	0.3~1
Maximum Cycle Rate	cycle/min	45
Operating Temperature	C°	-5~70


## **PRECAUTIONS FOR USE**


- Do not use this product without carefully reading the attached owner's manual.
- Ensure that an external stopper (Stopper nut OP-020SB) is also used.
- Do not turn the oil inlet screw located at the bottom of the main unit.
- Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- Do not use this product in a vacuum or a location where it may come in contact with oil.
- Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: within ±2.5°)

### **OPTIONAL PARTS**

#### **Eccentric angle adaptor OP-010MB**

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until it is secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is ±10°.
- The caps and the guides for inclined use are not unbundled.

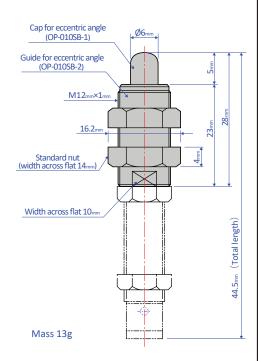


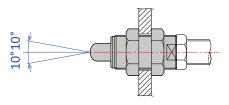


Note: Material of cap for eccentric angle: POM

#### **Stopper nut OP-020SB**

 Adjust so that it stops 1 mm before the stroke end, and fasten with the main unit's nut until secured.

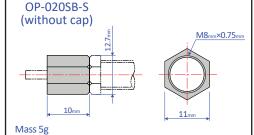

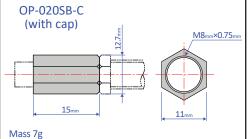


Note: When attaching, make sure that the side without a bearing chamfer is the impact surface.

Standard nuts are sold separately as well - M08 Nut

#### **Square flange OP-040SB**

 Once the attachment site is determined, use the main unit's nut to securely fasten in place.

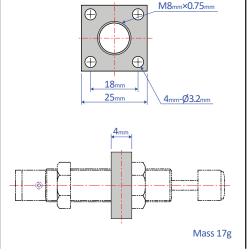

#### Holder with a switch OP-030SB-2

Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.

