



Features

- · Can be connected to both PV、battery and load
- · Supports multiple battery types
- MPPT with up to 99.9% efficiency
- · Support solar panel 2 in series/more in parallel
- Complete charge and discharge protection mechanism
- Natural cooling
- 3 years warranty












Applications

- · Home photovoltaic
- · Power for farms and ranches
- Communication base station
- · Power for rural
- · Island photovoltaic

Description

The PV-ML series is an MPPT solar controller that uses maximum power point tracking technology to optimize the power output of solar panels in real time. It automatically monitors changes in light conditions to ensure maximum energy extraction in all environments, increasing charging efficiency by 20% to 30%. The charger is widely used in home, commercial and portable solar systems and is compatible with a variety of battery types to ensure that users can charge quickly and efficiently, and promote the wider application of clean energy.

■ Model Encoding

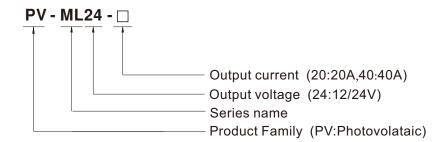

SPECIFICATION

| MODEL | | PV-ML24-20 PV-ML24-40 | | | -40 | | |
|--------------|--|--|------------------|---|---------------------------|--|--|
| BATTERY TYPE | | Lead-acid / Li-ion / User Defined | | | | | |
| | RATED BATTERY VOLTAGE | | | | | | |
| | NO LOAD POWER CONSUMPTION | 1.2W | | | | | |
| | BATTERY VOLTAGE RANGE | 9~35Vdc | | | | | |
| | RATED LOAD VOLTAGE | Egual to battery voltage 12V/24V | | | | | |
| OUTPUT | RATED CHARGING CURRENT | 20A | | 40A | | | |
| | RATED LOAD CURRENT | 20A | | | | | |
| | MAX. CAPACITIVE LOAD | 10000uF max | | | | | |
| | LOAD WORKING MODE | Light control, Light control + Time control, Manual control (default), Debugging mode, Normal open | | | | | |
| | MPPT CHARGING MODE | Buck | | | | | |
| | MAX.VOLTAGE OF OPEN CIRCUIT | 100Vdc | 100Vdc | | | | |
| INPUT | MPPT VOLTAGE RANGE | Battery voltage +2V ~75V | | | | | |
| | MAX.PV INPUT POWER | 260W/12 Battery;520W/24 Batte | ery | 550W/12V | Battery;1100W/24V Battery | | |
| | MAX. CHARGING CONVERSION EFFICIENCY | ≤98% | | | | | |
| | MPPT TRACKING EFFICIENCY | >99% | | | | | |
| PROTECTION | OVER DISCHARGE | 11.1V*N(N=1 for 12V Battery, N=2 for 24V Battery) | | | | | |
| PROTECTION | OVER DISCHARGE RESET | 12.6V*N(N=1 for 12V Battery, N=2 for 24V Battery) | | | | | |
| | OVER VOLTAGE | Protection type : Shut down, clamping by zener diode | | | | | |
| | BATTERY REVERSE CONNECTION | Protected internal reverse detection, No damage, re-power on to recover after fault condition is removed | | | | | |
| | PHOTOVOLTAIC INPUT REVERSE-CONNECTION | Protected internal reverse detection, No damage, re-power on to recover after fault condition is removed | | | | | |
| | REVERSE CHARGING | The internal circuit detects the current, Shut down, re-power on to recover after fault condition is removed | | | | | |
| FUNCTION | COMMUNICATION | RS232 | | | | | |
| | WORKING TEMP. | -35 ~ +45°C | | | | | |
| ENVIRONMENT | WATERPROOF LEVEL | IP32 | | | | | |
| | VIBRATION | 10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes | | | | | |
| | SAFETY STANDARDS | EN 62109-1:2010 | | | | | |
| | | Parameter | Standard | | Test Level / Note | | |
| SAFETY & | EMC EMISSION | Conducted | EN IEC 61000-6-3 | | Class A | | |
| | | Radiated | EN IEC 61000-6-4 | | Class B | | |
| | | arameter Standard Test Level / Note | | Test Level / Note | | | |
| | EMC IMMUNITY | ESD EN 61000-4-2 Lev | | Level 3, 8KV air ; Level 2, 4KV contact | | | |
| | | RF field susceptibility EN 61000-4-3 Level 2, 3V/m | | Level 2, 3V/m | | | |
| EMC | | EFT EN 61000-4-4 Level 1,0.5KV | | Level 1,0.5KV | | | |
| | | Surge EN 61000-4-5 Level 1,0.5KV Line-Line | | Level 1,0.5KV Line-Line | | | |
| | | Conducted EN 61000-4-6 | | Level 2,3V | | | |
| | | Magnetic Field | EN 61000-4-8 | | Level 2, 3A/m | | |
| OTHERS | DIMENSION | 1.4Kg | | 2Kg | | | |
| | PACKING | 210*151*59.5mm | | 238*173*72.5mm | | | |

■ LED Indicators

| 0# | | PV array indicator | Indicating the controller's current charging mode. | |
|------------|----------|--------------------|--|--|
| O = | | | Indicating the battery's current state. | |
| 0 9 | # | LOAD indicator | Indicating the loads' On/ Off and state. | |
| O A | Δ | ERROR indicator | Indicating whether the controller is functioning normally. | |

> PV array indicator:

| No. | Graph | Indicator state | Charging state |
|-----|-----------------|---|--------------------------|
| 1 | BULK | Steady on | MPPT charging |
| 2 | ACCEPTANCE | Slow flashing (a cycle of 2s with on and off each lasting for 1s) | Boost charging |
| 3 | FLOAT | Single flashing (a cycle of 2s with on and off lasting respectively for 0.1s and 1.9s) | Floating charging |
| 4 | EQUALIZE | Quick flashing (a cycle of 0.2s with on and off each lasting for 0.1s) | Equalizing charging |
| (5) | CURRENT-LIMITED | Double flashing (a cycle of 2s with on for 0.1s, off for 0.1s, on again for 0.1s, and off again for 1.7s) | Current-limited charging |
| 6 | | Off | No charging |

▶BAT indicator:

| Indicator state | Battery state |
|--|-------------------------|
| Steady on | Normal battery voltage |
| Slow flashing (a cycle of 2s with on and off each lasting for 1s) | Battery over-discharged |
| Quick flashing (a cycle of 0.2s with on and off each lasting for 0.1s) | Battery over-voltage |

> LOAD indicator:


| Indicator state | Load state |
|--|----------------------------------|
| Off | Load turned off |
| Quick flashing (a cycle of 0.2s with on and off each lasting for 0.1s) | Load overloaded/ short-circuited |
| Steady on | Load functioning normally |

▶ERROR indicator:

| Indicator state | Abnormality indication | |
|-----------------|---------------------------|--|
| Off | System operating normally | |
| Steady on | System malfunctioning | |


■ Key Operations


| ▲ Up Page up; increase the parameter value in setting | | Page up; increase the parameter value in setting | |
|--|--|--|---|
| ▼ Down Page down; decrease the parameter value in se | | Page down; decrease the parameter value in setting | |
| Return Return to previous menu (exit without s | | Return to previous menu (exit without saving) | |
| Enter into sub-menu; set/ Turn on/ off loads (in mani | | Set | Enter into sub-menu; set/ save Turn on/ off loads (in manual mode) |

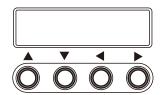



■ Mechanical Specification

PV-ML24-40:

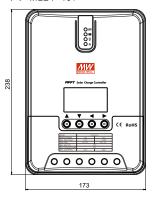


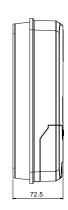


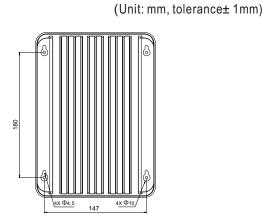


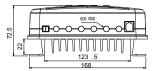


PV-ML24-20:

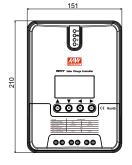

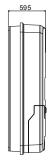

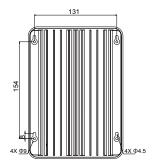



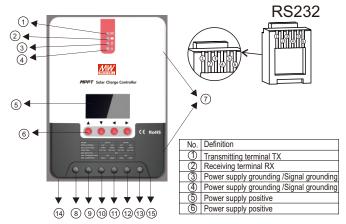

Product appearance and interfaces

| The state of the s | | | | | |
|--|---------------------------|-----|---|--|--|
| No. | Item | No. | Item | | |
| 1 | Charging indicator | 10 | Battery "+" interface | | |
| 2 | Battery indicator | 11) | Battery "-" interface | | |
| 3 | Load indicator | 12 | Load "+" interface | | |
| 4 | Abnormality indicator | 13 | Load "-" interface | | |
| (5) | LCD screen | 13 | External temperature sampling interface | | |
| 6 | Operating keys | 15 | RS232/RS485 communication interface | | |
| 7 | Installation hole | | | | |
| 8 | Solar panel "+" interface | | | | |
| 9 | Solar panel "-" interface | | | | |