




Accessories

Nut Spanner Wrenches

Nut Spanner Wrenches


Nut Spanner Wrenches

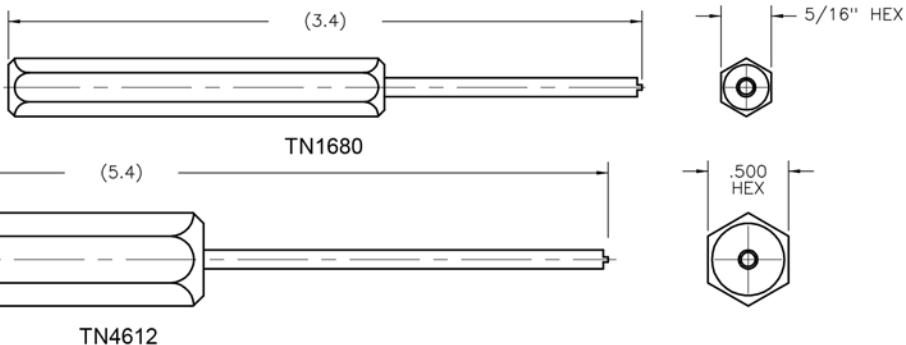

USING EITHER OF THE SPANNER WRENCHES SHOWN ABOVE, GUIDE SETS MAY BE REMOVED AND REPOSITIONED IN ANY OF THE 64 POLARIZING POSITIONS. REFER TO PAGE WA-18 FOR POLARIZATION CHART.

CAUTION: WHEN POLARIZED POSITIONS ARE CHANGED, APPLY LOCTITE 242 ® TO THREADS.


IF SPANNER NUTS ARE DIFFICULT TO REMOVE DUE TO HARDENED LOCTITE ®, APPLY HEAT (300° F) TO NUT AREA FOR ONE HOUR AND REPEAT REMOVAL OPERATION.

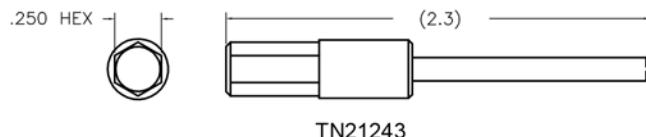

THE 1/4" DRIVE SPANNER WRENCH ABOVE IS DESIGNED FOR USE IN TORQUE WRENCHES

Accessories

Insertion & Removal Tools

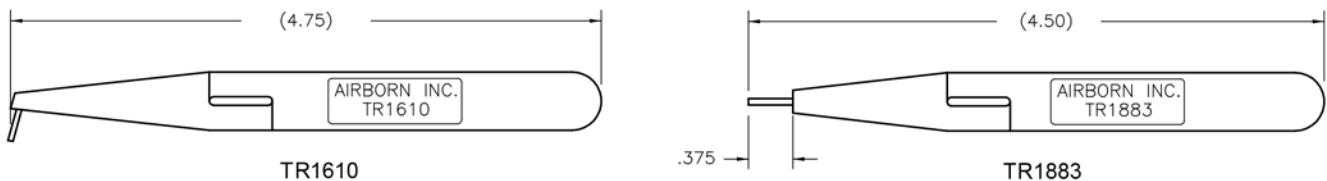

Accessories


Crimp Tools & Positioners

TC1652 - CRIMP TOOL

REF M22520/2-01

TP1653 - POSITIONER

REF M22520/2-06

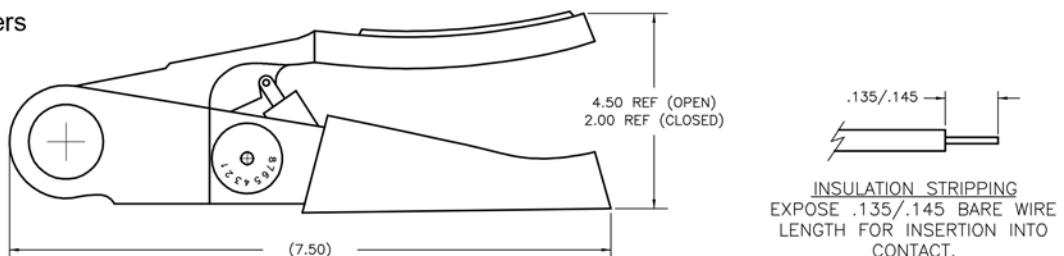

TOOL SELECTION TABLE		
CONTACT	TOOL NO.	POSITIONER
WTK2222P	TC1652	TP1985
WTK2222S		TP1653
WTK2220S657		TP2435
WTK2220P657		TP13784