

BG600L-M3

Hardware Design

LPWA Module Series

Version: 1.2

Date: 2022-08-18

Status: Released



At Quectel, our aim is to provide timely and comprehensive services to our customers. If you require any assistance, please contact our headquarters:

Quectel Wireless Solutions Co., Ltd.

Building 5, Shanghai Business Park Phase III (Area B), No.1016 Tianlin Road, Minhang District, Shanghai 200233, China

Tel: +86 21 5108 6236

Email: info@quectel.com

Or our local offices. For more information, please visit:

<http://www.quectel.com/support/sales.htm>.

For technical support, or to report documentation errors, please visit:

<http://www.quectel.com/support/technical.htm>.

Or email us at: support@quectel.com.

Legal Notices

We offer information as a service to you. The provided information is based on your requirements and we make every effort to ensure its quality. You agree that you are responsible for using independent analysis and evaluation in designing intended products, and we provide reference designs for illustrative purposes only. Before using any hardware, software or service guided by this document, please read this notice carefully. Even though we employ commercially reasonable efforts to provide the best possible experience, you hereby acknowledge and agree that this document and related services hereunder are provided to you on an “as available” basis. We may revise or restate this document from time to time at our sole discretion without any prior notice to you.

Use and Disclosure Restrictions

License Agreements

Documents and information provided by us shall be kept confidential, unless specific permission is granted. They shall not be accessed or used for any purpose except as expressly provided herein.

Copyright

Our and third-party products hereunder may contain copyrighted material. Such copyrighted material shall not be copied, reproduced, distributed, merged, published, translated, or modified without prior written consent. We and the third party have exclusive rights over copyrighted material. No license shall be granted or conveyed under any patents, copyrights, trademarks, or service mark rights. To avoid ambiguities, purchasing in any form cannot be deemed as granting a license other than the normal non-exclusive, royalty-free license to use the material. We reserve the right to take legal action for noncompliance with abovementioned requirements, unauthorized use, or other illegal or malicious use of the material.

Trademarks

Except as otherwise set forth herein, nothing in this document shall be construed as conferring any rights to use any trademark, trade name or name, abbreviation, or counterfeit product thereof owned by Quectel or any third party in advertising, publicity, or other aspects.

Third-Party Rights

This document may refer to hardware, software and/or documentation owned by one or more third parties ("third-party materials"). Use of such third-party materials shall be governed by all restrictions and obligations applicable thereto.

We make no warranty or representation, either express or implied, regarding the third-party materials, including but not limited to any implied or statutory, warranties of merchantability or fitness for a particular purpose, quiet enjoyment, system integration, information accuracy, and non-infringement of any third-party intellectual property rights with regard to the licensed technology or use thereof. Nothing herein constitutes a representation or warranty by us to either develop, enhance, modify, distribute, market, sell, offer for sale, or otherwise maintain production of any our products or any other hardware, software, device, tool, information, or product. We moreover disclaim any and all warranties arising from the course of dealing or usage of trade.

Privacy Policy

To implement module functionality, certain device data are uploaded to Quectel's or third-party's servers, including carriers, chipset suppliers or customer-designated servers. Quectel, strictly abiding by the relevant laws and regulations, shall retain, use, disclose or otherwise process relevant data for the purpose of performing the service only or as permitted by applicable laws. Before data interaction with third parties, please be informed of their privacy and data security policy.

Disclaimer

- a) We acknowledge no liability for any injury or damage arising from the reliance upon the information.
- b) We shall bear no liability resulting from any inaccuracies or omissions, or from the use of the information contained herein.
- c) While we have made every effort to ensure that the functions and features under development are free from errors, it is possible that they could contain errors, inaccuracies, and omissions. Unless otherwise provided by valid agreement, we make no warranties of any kind, either implied or express, and exclude all liability for any loss or damage suffered in connection with the use of features and functions under development, to the maximum extent permitted by law, regardless of whether such loss or damage may have been foreseeable.
- d) We are not responsible for the accessibility, safety, accuracy, availability, legality, or completeness of information, advertising, commercial offers, products, services, and materials on third-party websites and third-party resources.

Copyright © Quectel Wireless Solutions Co., Ltd. 2022. All rights reserved.

Safety Information

The following safety precautions must be observed during all phases of operation, such as usage, service or repair of any cellular terminal or mobile incorporating the module. Manufacturers of the cellular terminal should notify users and operating personnel of the following safety information by incorporating these guidelines into all manuals of the product. Otherwise, Quectel assumes no liability for customers' failure to comply with these precautions.



Full attention must be paid to driving at all times in order to reduce the risk of an accident. Using a mobile while driving (even with a handsfree kit) causes distraction and can lead to an accident. Please comply with laws and regulations restricting the use of wireless devices while driving.



Switch off the cellular terminal or mobile before boarding an aircraft. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communication systems. If there is an Airplane Mode, it should be enabled prior to boarding an aircraft. Please consult the airline staff for more restrictions on the use of wireless devices on an aircraft.



Wireless devices may cause interference on sensitive medical equipment, so please be aware of the restrictions on the use of wireless devices when in hospitals, clinics or other healthcare facilities.



Cellular terminals or mobiles operating over radio signal and cellular network cannot be guaranteed to connect in certain conditions, such as when the mobile bill is unpaid or the (U)SIM card is invalid. When emergency help is needed in such conditions, use emergency call if the device supports it. In order to make or receive a call, the cellular terminal or mobile must be switched on in a service area with adequate cellular signal strength. In an emergency, the device with emergency call function cannot be used as the only contact method considering network connection cannot be guaranteed under all circumstances.



The cellular terminal or mobile contains a transceiver. When it is ON, it receives and transmits radio frequency signals. RF interference can occur if it is used close to TV sets, radios, computers or other electric equipment.



In locations with explosive or potentially explosive atmospheres, obey all posted signs and turn off wireless devices such as mobile phone or other cellular terminals. Areas with explosive or potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust or metal powders.

About the Document

Revision History

Version	Date	Author	Description
1.0	2020-03-30	Speed SUN/ Watt ZHU	Initial
1.1	2021-01-08	Jake JIANG/ Watt ZHU/ Hyman DING	<ol style="list-style-type: none"> 1. Removed B14 for LTE Cat M1 and B26 for LTE Cat NB2. 2. Updated GNSS function into a standard configuration. 3. Updated the dimensional tolerance of the module in Table 2 and Chapter 7. 4. Enabled fast shutdown interface (realized through pin 11 GPIO3) and added the description thereof in Chapter 3.6.3. 5. Updated the reference design of PON_TRIG in Figure 14. 6. Updated the current consumption values in Table 36. 7. Updated the GNSS current consumption values in Table 37. 8. Updated the electrostatic discharge characteristics in Table 40. 9. Updated the floor life into 168 hours in Chapter 8.1. 10. Updated the cooling down slope in Chapter 8.2.
1.2	2022-08-18	Lex LI/ Pearl GUO/ Matt YE	<ol style="list-style-type: none"> 1. Updated the USB serial driver information (Table 2). 2. Added the high-speed operation mode of the USB interface (Table 2 and Chapter 3.10). 3. Updated the minimum width of VBAT_RF trace from 2 mm to 2.7 mm and the minimum supply current from 2 A to 2.7 A, updated the reference design of power supply (Chapter 3.5.2). 4. Updated the note about protecting data and the note of PWRKEY in turn-off procedure (Chapter 3.6.2.2).

-
5. Updated the active condition and reference design of PON_TRIG (Chapter 3.8).
 6. Updated supported baud rates of main UART interface (Chapter 3.11).
 7. Updated the introduction of USB_BOOT interface (Chapter 3.16).
 8. Updated the typical resolution of ADC interface (Table 23).
 9. Updated the typical TTFF value under open sky cold start XTRA enabled condition and accuracy (Table 27).
 10. Updated the max. I_{VBAT} value (Table 34).
 11. Deleted the peak value of the module's power consumption (Table 36 and 37).
 12. Updated Rx sensitivity data (Table 39).
 13. Updated the max. slope parameter in the reflow zone (Chapter 8.2).
-

Contents

Safety Information.....	3
About the Document.....	4
Contents.....	6
Table Index	8
Figure Index.....	10
1 Introduction	12
2 Product Overview.....	13
2.1. General Description.....	13
2.2. Key Features	14
2.3. Functional Diagram	16
2.4. EVB Kit.....	17
3 Application Interfaces.....	18
3.1. Pin Assignment	19
3.2. Pin Description	20
3.3. Operating Modes.....	27
3.4. Power Saving	28
3.4.1. Airplane Mode.....	28
3.4.2. Power Saving Mode (PSM).....	28
3.4.3. Extended Idle Mode DRX (e-I-DRX)	29
3.4.4. Sleep Mode.....	29
3.4.4.1. UART Application	29
3.5. Power Supply	30
3.5.1. Power Supply Pins.....	30
3.5.2. Decrease Voltage Drop	31
3.5.3. Power Supply Voltage Monitoring.....	32
3.6. Turn On and Off Scenarios.....	32
3.6.1. Turn On with PWRKEY.....	32
3.6.2. Turn Off	34
3.6.2.1. Turn Off with PWRKEY.....	35
3.6.2.2. Turn off with AT Command.....	35
3.6.3. Fast Shutdown.....	35
3.7. Reset.....	36
3.8. PON_TRIG Interface	38
3.9. (U)SIM Interface	39
3.10. USB Interface	41
3.11. UART Interfaces.....	43
3.12. PCM and I2C Interfaces	45
3.13. Network Status Indication.....	46
3.14. STATUS	48
3.15. MAIN_RI.....	48

3.16.	USB_BOOT Interface	49
3.17.	ADC Interface	50
3.18.	GPIO Interfaces.....	51
3.19.	GRFC Interfaces	52
4	GNSS.....	54
4.1.	General Description.....	54
4.2.	GNSS Performance.....	54
4.3.	Layout Guidelines.....	55
5	Antenna Interfaces.....	56
5.1.	Main Antenna Interface	56
5.1.1.	Pin Definition.....	56
5.1.2.	Operating Frequency	56
5.1.3.	Reference Design	57
5.2.	GNSS Antenna Interface	58
5.2.1.	Pin Definition.....	58
5.2.2.	GNSS Operating Frequency	58
5.2.3.	Reference Design	59
5.3.	Reference Design Guidelines	59
5.4.	Antenna Installation	61
5.4.1.	Antenna Design Requirements	61
5.4.2.	RF Connector Recommendation	62
6	Electrical Characteristics and Reliability	64
6.1.	Absolute Maximum Ratings.....	64
6.2.	Power Supply Ratings	64
6.3.	Operating and Storage Temperatures	65
6.4.	Power Consumption	65
6.5.	Tx Power	69
6.6.	Rx Sensitivity	70
6.7.	ESD Protection	71
7	Mechanical Information	72
7.1.	Mechanical Dimensions.....	72
7.2.	Recommended Footprint.....	74
7.3.	Top and Bottom Views	75
8	Storage, Manufacturing and Packaging.....	76
8.1.	Storage Conditions	76
8.2.	Manufacturing and Soldering.....	77
8.3.	Packaging Specifications.....	78
8.3.1.	Carrier Tape.....	79
8.3.2.	Plastic Reel.....	79
8.3.3.	Packaging Process	80
9	Appendix References	82

Table Index

Table 1: Frequency Bands and GNSS Types of BG600L-M3 Module.....	13
Table 2: Key Features	14
Table 3: Definition of I/O Parameters	20
Table 4: Pin Description	21
Table 5: Overview of Operating Modes	27
Table 6: VBAT and GND Pins	30
Table 7: Pin Definition of PWRKEY	32
Table 8: Pin Definition of Fast Shutdown Interface.....	36
Table 9: Pin Definition of RESET_N.....	36
Table 10: Pin Definition of PON_TRIG Interface	38
Table 11: Pin Definition of (U)SIM Interface	39
Table 12: Pin Definition of USB Interface	41
Table 13: Pin Definition of Main UART Interface	43
Table 14: Pin Definition of Debug UART Interface	44
Table 15: Pin Definition of GNSS UART Interface.....	44
Table 16: Pin Definition of PCM and I2C Interfaces	45
Table 17: Pin Definition of NET_STATUS	46
Table 18: Working State of NET_STATUS.....	47
Table 19: Pin Definition of STATUS	48
Table 20: Default Behaviors of MAIN_RI.....	48
Table 21: Pin Definition of USB_BOOT Interface	49
Table 22: Pin Definition of ADC Interface	51
Table 23: Characteristics of ADC Interface	51
Table 24: Pin Definition of GPIO Interfaces.....	51
Table 25: Pin Definition of GRFC Interfaces	52
Table 26: Truth Table of GRFC Interfaces	52
Table 27: GNSS Performance.....	54
Table 28: Pin Definition of Main Antenna Interface	56
Table 29: BG600L-M3 Operating Frequency	56
Table 30: Pin Definition of GNSS Antenna Interface	58
Table 31: GNSS Operating Frequency.....	58
Table 32: Antenna Requirements.....	61
Table 33: Absolute Maximum Ratings.....	64
Table 34: Power Supply Ratings	64
Table 35: Operating and Storage Temperatures	65
Table 36: BG600L-M3 Power Consumption	65
Table 37: GNSS Power Consumption (3.8 V Power Supply, Room Temperature)	69
Table 38: BG600L-M3 Tx Power	69
Table 39: BG600L-M3 Conducted Rx Sensitivity (25 °C, 3.8 V).....	70
Table 40: Electrostatic Discharge Characteristics (25 °C, 45 % Relative Humidity)	71
Table 41: Recommended Thermal Profile Parameters	78

Table 42: Carrier Tape Dimension Table (Unit: mm).....	79
Table 43: Plastic Reel Dimension Table (Unit: mm).....	80
Table 44: Related Documents.....	82
Table 45: Terms and Abbreviations.....	82

Figure Index

Figure 1: Functional Diagram	16
Figure 2: Pin Assignment (Top View)	19
Figure 3: Sleep Mode Application via UART	30
Figure 4: Power Supply Limits during Burst Transmission	31
Figure 5: Reference Design of the Power Supply	32
Figure 6: Turn On the Module with a Driving Circuit.....	33
Figure 7: Turn On the Module with a Button.....	33
Figure 8: Power-up Timing	34
Figure 9: Power-down Timing.....	35
Figure 10: Fast Shutdown Timing.....	36
Figure 11: Reference Circuit of RESET_N with a Driving Circuit.....	37
Figure 12: Reference Circuit of RESET_N with a Button	37
Figure 13: Reset Timing	37
Figure 14: Reference Circuit of PON_TRIG	38
Figure 15: Reference Circuit of (U)SIM Interface with an 8-Pin (U)SIM Card Connector	39
Figure 16: Reference Circuit of (U)SIM Interface with a 6-Pin (U)SIM Card Connector	40
Figure 17: Reference Design of USB PHY	41
Figure 18: Reference Design of USB Interface	42
Figure 19: Main UART Reference Design (IC Solution)	44
Figure 20: Main UART Reference Design (Transistor Solution)	45
Figure 21: Reference Circuit of PCM and I2C Application with Audio Codec.....	46
Figure 22: Reference Design of the NET_STATUS	47
Figure 23: Reference Design of STATUS	48
Figure 24: Reference Design of USB_BOOT Interface	49
Figure 25: Timing of Turning on Module with USB_BOOT	50
Figure 26: Reference Design of Main Antenna Interface.....	57
Figure 27: Reference Design of GNSS Antenna Interface	59
Figure 28: Microstrip Design on a 2-layer PCB	59
Figure 29: Coplanar Waveguide Design on a 2-layer PCB	60
Figure 30: Coplanar Waveguide Design on a 4-layer PCB (Layer 3 as Reference Ground)	60
Figure 31: Coplanar Waveguide Design on a 4-layer PCB (Layer 4 as Reference Ground)	60
Figure 32: Dimensions of the Receptacle (Unit: mm)	62
Figure 33: Specifications of Mated Plugs	62
Figure 34: Space Factor of Mated Connectors (Unit: mm)	63
Figure 35: Module Top and Side Dimensions	72
Figure 36: Module Bottom Dimensions (Bottom View)	73
Figure 37: Recommended Footprint (Top View).....	74
Figure 38: Top and Bottom Views	75
Figure 39: Recommended Reflow Soldering Thermal Profile.....	77
Figure 40: Carrier Tape Dimension Drawing.....	79
Figure 41: Plastic Reel Dimension Drawing.....	79

Figure 42: Packaging Process.....	81
-----------------------------------	----

1 Introduction

This document defines BG600L-M3 module and describes its air interface and hardware interfaces which connect to your applications.

This document helps you quickly understand the interface specifications, electrical and mechanical details, as well as other related information of BG600L-M3. To facilitate application designs, it also includes some reference designs. The document, coupled with application notes and user guides, makes it easy to design and set up mobile applications with the module.

2 Product Overview

2.1. General Description

BG600L-M3 is an embedded IoT (LTE Cat M1, LTE Cat NB2 and EGPRS) wireless communication module. It provides data connectivity on GPRS/EGPRS and LTE HD-FDD networks, and supports half-duplex FDD operation on LTE network. It also provides GNSS and voice ¹ functionality to meet your specific application demands.

BG600L-M3 is an industrial-grade module for industrial and commercial applications only.

The module is based on an architecture in which WWAN (LTE) and GNSS Rx chains share certain hardware blocks. However, the module does not support concurrent operation of WWAN and GNSS. The solution adopted in the module is a form of coarse time-division multiplexing (TDM) between WWAN and GNSS Rx chains. Given the relaxed latency requirements of most LPWA applications, time-division sharing of resources can be made largely transparent to applications. For more details, see [document \[1\]](#).

Table 1: Frequency Bands and GNSS Types of BG600L-M3 Module

Supported Bands	Power Class	GNSS
Cat M1: LTE HD-FDD: B1/B2/B3/B4/B5/B8/B12/B13/B18/B19/B20/B25/B26/B27/B28/B66/B85 Cat NB2 ²: LTE HD-FDD: B1/B2/B3/B4/B5/B8/B12/B13/B18/B19/B20/B25/B28/B66/B71/B85 EGPRS: GSM850/EGSM900/DCS1800/PCS1900	Power Class 5 (21 dBm)	GPS GLONASS BDS Galileo QZSS

With a compact profile of 18.7 mm × 16.0 mm × 2.1 mm, the module meets most requirements for M2M applications such as security, smart metering, tracking system and wireless POS.

¹ BG600L-M3 supports VoLTE (Voice over LTE) under LTE Cat M1 and CS voice under GSM. For specific information about software version of VoLTE and CS voice, contact Quectel Technical Support.

² LTE Cat NB2 is backward compatible with LTE Cat NB1.

BG600L-M3 is an SMD type module which can be embedded into applications through its 68 LGA pins. It supports internet service protocols like TCP, UDP and PPP. Based on extended AT commands developed by Quectel, you can use these internet service protocols easily.

2.2. Key Features

Table 2: Key Features

Features	Details
Power Supply	<ul style="list-style-type: none"> Supply voltage: 3.3–4.3 V Typical supply voltage: 3.8 V
Transmitting Power	<ul style="list-style-type: none"> Class 5 (21 dBm + 1.7/-3 dB) for LTE HD-FDD bands Class 4 (33 dBm ±2 dB) for GSM850 Class 4 (33 dBm ±2 dB) for EGSM900 Class 1 (30 dBm ±2 dB) for DCS1800 Class 1 (30 dBm ±2 dB) for PCS1900 Class E2 (27 dBm ±3 dB) for GSM850 8-PSK Class E2 (27 dBm ±3 dB) for EGSM900 8-PSK Class E2 (26 dBm ±3 dB) for DCS1800 8-PSK Class E2 (26 dBm ±3 dB) for PCS1900 8-PSK
LTE Features	<ul style="list-style-type: none"> Supports 3GPP Rel-14 Supports LTE Cat M1 and LTE Cat NB2 Supports 1.4 MHz RF bandwidth for LTE Cat M1 Supports 200 kHz RF bandwidth for LTE Cat NB2 Cat M1: Max. 588 kbps (DL)/1119 kbps (UL) Cat NB2: Max. 127 kbps (DL)/158.5 kbps (UL)
GSM Features	<p>GPRS:</p> <ul style="list-style-type: none"> Supports GPRS multi-slot class 33 (33 by default) Coding scheme: CS 1–4 Max. 107 kbps (DL)/85.6 kbps (UL) <p>EDGE:</p> <ul style="list-style-type: none"> Supports EDGE multi-slot class 33 (33 by default) Supports GMSK and 8-PSK for different MCS (Modulation and Coding Scheme) Downlink coding schemes: MCS 1–9 Uplink coding schemes: MCS 1–9 Max. 296 kbps (DL)/236.8 kbps (UL)
Internet Protocol Features	<ul style="list-style-type: none"> Supports PPP/TCP/UDP/SSL/TLS/FTP(S)/HTTP(S)/NITZ/PING /MQTT/LwM2M/CoAP/IPv6 protocols Supports PAP and CHAP for PPP connections

SMS	<ul style="list-style-type: none"> ● Text and PDU mode ● Point-to-point MO and MT ● SMS cell broadcast ● SMS storage: ME by default
(U)SIM Interface	Supports 1.8 V USIM/SIM card only
PCM Interface	Supports one digital audio interface: PCM interface for VoLTE or GSM CS voice only
USB Interface	<ul style="list-style-type: none"> ● Compliant with USB 2.0 specification (slave mode only) ● Supports operations at high-speed, full-speed and low-speed modes ● Used for AT command communication, data transmission, GNSS NMEA sentences output, software debugging and firmware upgrade ● Supports USB serial drivers for Windows 7/8/8.1/10/11, Linux 2.6–5.18, Android 4.x–12.x
UART Interfaces	<p>Main UART:</p> <ul style="list-style-type: none"> ● Used for data transmission and AT command communication ● 115200 bps baud rate by default ● The default frame format is 8N1 (8 data bits, no parity, 1 stop bit) ● Supports RTS and CTS hardware flow control <p>Debug UART:</p> <ul style="list-style-type: none"> ● Used for software debugging and log output ● Supports 115200 bps baud rate <p>GNSS UART:</p> <ul style="list-style-type: none"> ● Used for GNSS data and NMEA sentences output ● 115200 bps baud rate by default
GNSS	<ul style="list-style-type: none"> ● GPS, GLONASS, BDS, Galileo and QZSS ● 1 Hz data update rate by default
AT Commands	<ul style="list-style-type: none"> ● 3GPP TS 27.007 and 3GPP TS 27.005 AT commands ● Quectel enhanced AT commands
Network Indication	One NET_STATUS pin for network connectivity status indication
Antenna Interfaces	Main antenna (ANT_MAIN) and GNSS antenna (ANT_GNSS) interfaces
Physical Characteristics	<ul style="list-style-type: none"> ● Dimensions: (18.7 ±0.2) mm × (16.0 ±0.2) mm × (2.1 ±0.2) mm ● Weight: approx. 1.25 g
Temperature Range	<ul style="list-style-type: none"> ● Operating temperature range: -35 to +75 °C ³ ● Extended temperature range: -40 to +85 °C ⁴ ● Storage temperature range: -40 to +90 °C
Firmware Upgrade	USB interface and DFOTA
RoHS	All hardware components are fully compliant with EU RoHS directive

³ Within the operating temperature range, the module meets 3GPP specifications.

⁴ Within the extended temperature range, the module remains the ability to establish and maintain functions such as voice, SMS and data transmission, without any unrecoverable malfunction. Radio spectrum and radio network are not influenced, while one or more specifications, such as P_{out}, may exceed the specified tolerances of 3GPP. When the temperature returns to the operating temperature range, the module meets 3GPP specifications again.

2.3. Functional Diagram

The following figure shows a block diagram of BG600L-M3 and illustrates the major functional parts.

- Power management
- Baseband
- Radio frequency
- Peripheral interfaces

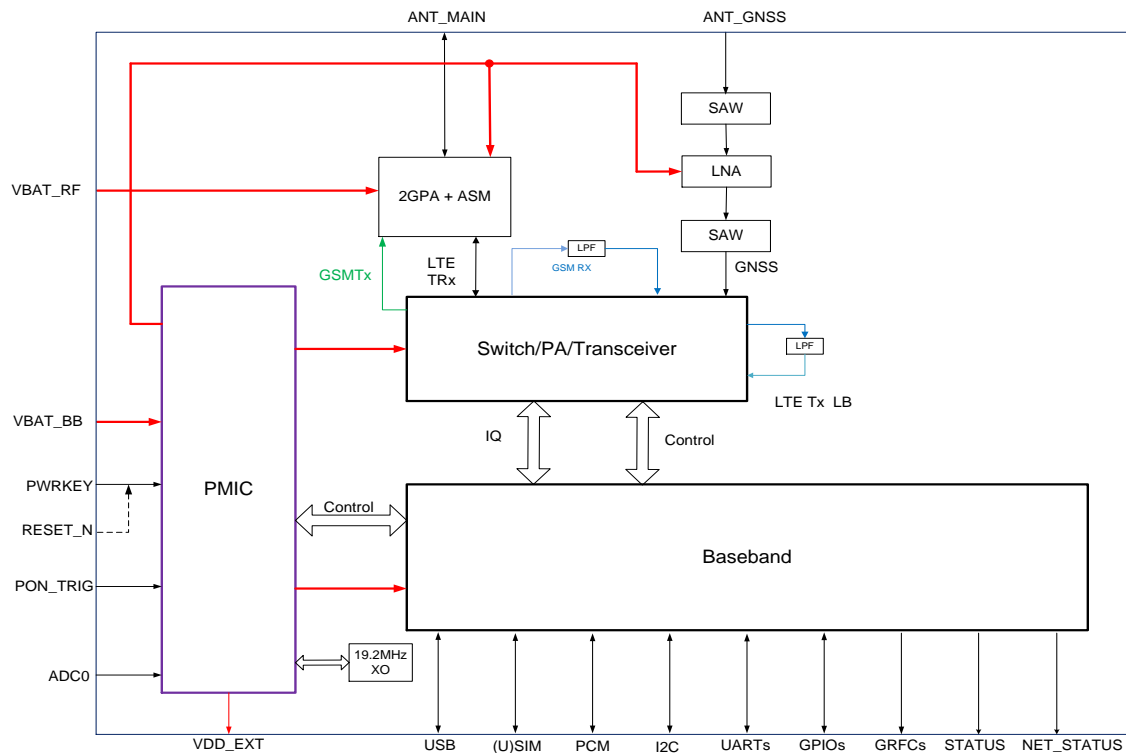


Figure 1: Functional Diagram

NOTE

1. The output voltage of PWRKEY is 1.5 V because of the voltage drop inside the chipset. Due to platform limitations, the chipset has integrated the reset function into PWRKEY. Therefore, never pull down PWRKEY to GND permanently.
2. RESET_N connects directly to PWRKEY inside the module.

2.4. EVB Kit

To help you develop applications with the module, Quectel supplies an evaluation board (UMTS & LTE EVB) with accessories to control or test the module. For more details, see **document [2]**.

3 Application Interfaces

BG600L-M3 is equipped with 68 LGA pins for connection to various cellular application platforms. The subsequent chapters provide detailed description of interfaces listed below:

- Power supply
- PON_TRIG interface
- (U)SIM interface
- USB interface
- UART interfaces
- PCM and I2C interfaces
- Status indication interfaces
- USB_BOOT interface
- ADC interface
- GPIO interfaces
- GRFC interfaces

3.1. Pin Assignment

The following figure shows the pin assignment of BG600L-M3.

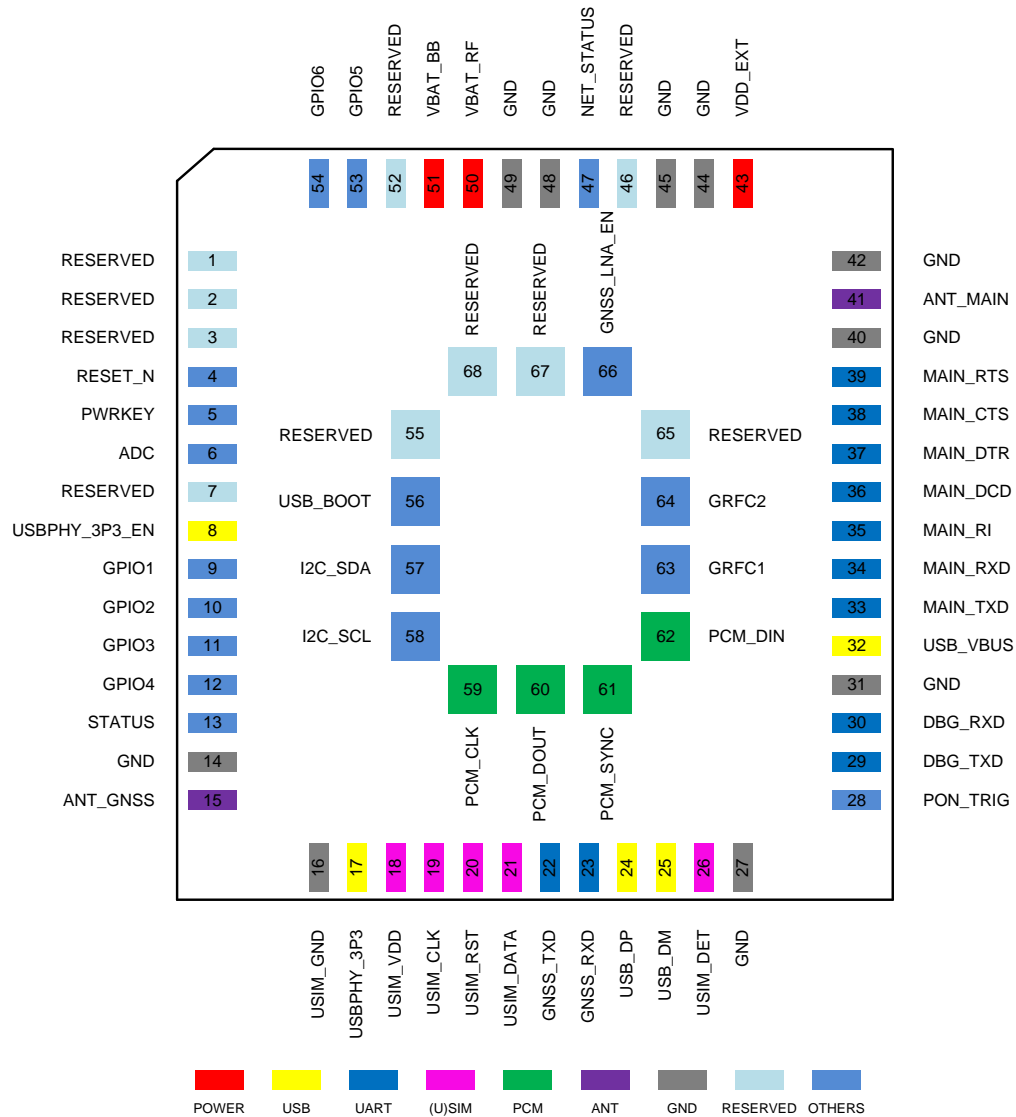


Figure 2: Pin Assignment (Top View)

NOTE

1. The output voltage of PWRKEY is 1.5 V because of the voltage drop inside the chipset. Due to platform limitations, the chipset has integrated the reset function into PWRKEY. Therefore, never pull down PWRKEY to GND permanently.
2. RESET_N connects directly to PWRKEY inside the module.
3. ADC input voltage must not exceed 1.8 V.

4. The input voltage range of USB_VBUS is 1.3–1.8 V.
5. GPIO1 (pin 9), NET_STATUS (pin 47), GRFC1 (pin 63) and GNSS_LNA_EN (pin 66) are BOOT_CONFIG pins. Never pull them up before startup, otherwise the module cannot power on normally.
6. GPIO3 (pin 11) supports fast shutdown function. This function is disabled by default. See **Chapter 3.6.3** for more details.
7. PCM and I2C interfaces are used for VoLTE or GSM CS voice only.
8. Keep all RESERVED pins and unused pins unconnected.
9. Connect GND pins to ground in the design.

3.2. Pin Description

The following tables show the pin definition and description of BG600L-M3.

Table 3: Definition of I/O Parameters

Type	Description
AI	Analog Input
AO	Analog Output
AIO	Analog Input/Output
DI	Digital Input
DO	Digital Output
DIO	Digital Input/Output
OD	Open Drain
PI	Power Input
PO	Power Output

Table 4: Pin Description

Power Supply					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
VBAT_BB	51	PI	Power supply for the module's baseband part	Vmax = 4.3 V Vmin = 3.3 V Vnom = 3.8 V	-
VBAT_RF	50	PI	Power supply for the module's RF part	Vmax = 4.3 V Vmin = 3.3 V Vnom = 3.8 V	-
VDD_EXT	43	PO	Provide 1.8 V for external circuits	Vnom = 1.8 V Iomax = 50 mA	If unused, keep this pin open.
GND	14, 27, 31, 40, 42, 44, 45, 48, 49				
Turn On/Off					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
PWRKEY	5	DI	Turn on/off the module	Vnom = 1.5 V VILmax = 0.45 V	Never pull down PWRKEY to GND permanently.
Reset					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
RESET_N	4	DI	Reset the module	Vnom = 1.5 V VILmax = 0.45 V	Multiplexed from PWRKEY (connected directly to PWRKEY inside the module).
Status Indication					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
STATUS	13	DO	Indicate the module's operation status	VOHmin = 1.35 V VOLmax = 0.45 V	1.8 V power domain. If unused, keep this pin open.
NET_STATUS	47	DO	Indicate the module's network activity status	VOHmin = 1.35 V VOLmax = 0.45 V	BOOT_CONFIG. Do not pull it up before startup. 1.8 V power domain. If unused, keep this pin open.

USB Interface					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
USB_VBUS	32	AI	USB connection detect	$V_{IHmax} = 1.8\text{ V}$ $V_{IHmin} = 1.3\text{ V}$	-
USB_DP	24	AIO	USB differential data (+)	-	Compliant with USB 2.0 standard specification. Differential impedance of 90 Ω required.
USB_DM	25	AIO	USB differential data (-)	-	
USBPHY_3P3	17	PI	Power supply for USB PHY circuit	$V_{nom} = 3.3\text{ V}$	-
USBPHY_3P3_EN	8	DO	External LDO enable control for USB	$V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$	1.8 V power domain.
(U)SIM Interface					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
USIM_DET	26	DI	(U)SIM card hot-plug detect	$V_{ILmin} = -0.3\text{ V}$ $V_{ILmax} = 0.6\text{ V}$ $V_{IHmin} = 1.2\text{ V}$ $V_{IHmax} = 2.0\text{ V}$	1.8 V power domain. If unused, keep this pin open.
USIM_VDD	18	PO	(U)SIM card power supply	$V_{max} = 1.9\text{ V}$ $V_{min} = 1.7\text{ V}$	Only 1.8 V (U)SIM card is supported.
USIM_RST	20	DO	(U)SIM card reset	$V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$	1.8 V power domain.
USIM_DATA	21	DIO	(U)SIM card data	$V_{ILmin} = -0.3\text{ V}$ $V_{ILmax} = 0.6\text{ V}$ $V_{IHmin} = 1.2\text{ V}$ $V_{IHmax} = 2.0\text{ V}$ $V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$	
USIM_CLK	19	DO	(U)SIM card clock	$V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$	
USIM_GND	16		Specified ground for (U)SIM card		
Main UART Interface					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
MAIN_DTR	37	DI	Main UART data terminal ready	$V_{ILmin} = -0.3\text{ V}$ $V_{ILmax} = 0.6\text{ V}$	1.8 V power domain. If unused, keep these

				$V_{IHmin} = 1.2\text{ V}$ $V_{IHmax} = 2.0\text{ V}$	pins open.
MAIN_RXD	34	DI	Main UART receive	$V_{ILmin} = -0.3\text{ V}$ $V_{ILmax} = 0.6\text{ V}$ $V_{IHmin} = 1.2\text{ V}$ $V_{IHmax} = 2.0\text{ V}$	
MAIN_TXD	33	DO	Main UART transmit	$V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$	
MAIN_CTS	38	DO	CTS: DTE clear to send signal from DCE	$V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$	1.8 V power domain. If unused, keep this pin open. CTS: Connected to DTE's CTS
MAIN_RTS	39	DI	RTS: DTE request to send signal to DCE	$V_{ILmin} = -0.3\text{ V}$ $V_{ILmax} = 0.6\text{ V}$ $V_{IHmin} = 1.2\text{ V}$ $V_{IHmax} = 2.0\text{ V}$	1.8 V power domain. If unused, keep this pin open. RTS: Connected to DTE's RTS
MAIN_DCD	36	DO	Main UART data carrier detect	$V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$	1.8 V power domain. If unused, keep these pins open.
MAIN_RI	35	DO	Main UART ring indication	$V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$	

Debug UART Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
DBG_RXD	30	DI	Debug UART receive	$V_{ILmin} = -0.3\text{ V}$ $V_{ILmax} = 0.6\text{ V}$ $V_{IHmin} = 1.2\text{ V}$ $V_{IHmax} = 2.0\text{ V}$	1.8 V power domain. If unused, keep these pins open.
DBG_TXD	29	DO	Debug UART transmit	$V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$	

GNSS UART Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
GNSS_TXD	22	DO	GNSS UART transmit	$V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$	1.8 V power domain. If unused, keep these pins open.
GNSS_RXD	23	DI	GNSS UART receive	$V_{ILmin} = -0.3\text{ V}$ $V_{ILmax} = 0.6\text{ V}$ $V_{IHmin} = 1.2\text{ V}$ $V_{IHmax} = 2.0\text{ V}$	

PCM Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
PCM_CLK	59	DO	PCM clock	$V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$	1.8 V power domain. If unused, keep these pins open.
PCM_SYNC	61	DO	PCM data frame sync	$V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$	
PCM_DIN	62	DI	PCM data input	$V_{ILmin} = -0.3\text{ V}$ $V_{ILmax} = 0.6\text{ V}$ $V_{IHmin} = 1.2\text{ V}$ $V_{IHmax} = 2.0\text{ V}$	
PCM_DOUT	60	DO	PCM data output	$V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$	

I2C Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
I2C_SCL	58	OD	I2C serial clock (for external codec)	-	External pull-up resistor required. 1.8 V only. If unused, keep these pins open.
I2C_SDA	57	OD	I2C serial data (for external codec)	-	

Antenna Interfaces

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
ANT_MAIN	41	AIO	Main antenna interface	-	50 Ω impedance
ANT_GNSS	15	AI	GNSS antenna interface	-	50 Ω impedance. If unused, keep this pin open.

GPIO Interfaces

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
GPIO1	9	DIO	General-purpose input/output	$V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$ $V_{ILmin} = -0.3\text{ V}$ $V_{ILmax} = 0.6\text{ V}$ $V_{IHmin} = 1.2\text{ V}$ $V_{IHmax} = 2.0\text{ V}$	BOOT_CONFIG. Do not pull it up before startup. 1.8 V power domain. If unused, keep this pin open.
GPIO2	10	DIO	General-purpose input/output	$V_{OLmax} = 0.45\text{ V}$ $V_{OHmin} = 1.35\text{ V}$	1.8 V power domain. If unused, keep these pins open.
GPIO3	11	DIO	General-purpose input/output	$V_{ILmin} = -0.3\text{ V}$ $V_{ILmax} = 0.6\text{ V}$	

GPIO4	12	DIO	General-purpose input/output	V _{IH} min = 1.2 V V _{IH} max = 2.0 V	
GPIO5	53	DIO	General-purpose input/output		
GPIO6	54	DIO	General-purpose input/output		
ADC Interface					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
ADC	6	AI	General-purpose ADC interface	Voltage range: 0.1–1.8 V	If unused, keep this pin open.
GRFC Interfaces					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
GRFC1	63	DO	Generic RF controller	V _{OL} max = 0.45 V V _{OH} min = 1.35 V	BOOT_CONFIG. Do not pull it up before startup. 1.8 V power domain. If unused, keep this pin open.
GRFC2	64	DO	Generic RF controller	V _{OL} max = 0.45 V V _{OH} min = 1.35 V	1.8 V power domain. If unused, keep this pin open.
PON_TRIG Interface					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
PON_TRIG	28	DI	Wake up the module from PSM	-	1.8 V power domain. Rising-edge triggered. If unused, keep this pin open.
Other Interfaces					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
USB_BOOT	56	DI	Force the module into emergency download mode	V _{IL} min = -0.3 V V _{IL} max = 0.6 V V _{IH} min = 1.2 V V _{IH} max = 2.0 V	1.8 V power domain. If unused, keep this pin open.
GNSS_LNA_EN	66	DO	External LNA enable control	V _{OL} max = 0.45 V V _{OH} min = 1.35 V	BOOT_CONFIG. Do not pull it up before startup.

1.8 V power domain.
If unused, keep this pin open.

RESERVED Pins

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
RESERVED	1–3, 7, 46, 52, 55, 65, 67, 68.				Keep these pins open.

NOTE

1. The output voltage of PWRKEY is 1.5 V because of the voltage drop inside the chipset. Due to platform limitations, the chipset has integrated the reset function into PWRKEY. Therefore, never pull down PWRKEY to GND permanently.
2. RESET_N connected directly to PWRKEY inside the module.
3. The input voltage range of USB_VBUS is 1.3–1.8 V.
4. USBPHY_3P3 and USBPHY_3P3_EN pins are used for USB PHY circuits.
5. GPIO1 (pin 9), NET_STATUS (pin 47), GRFC1 (pin 63) and GNSS_LNA_EN (pin 66) are BOOT_CONFIG pins. Never pull them up before startup, otherwise the module cannot power on normally.
6. GPIO3 (pin 11) supports fast shutdown function. The function is disabled by default. See **Chapter 3.6.3** for more details.
7. ADC input voltage must not exceed 1.8 V.
8. PCM and I2C interfaces are used for VoLTE or GSM CS voice only.
9. Keep all RESERVED pins and unused pins unconnected.
10. Connect GND pins to ground in the design.

3.3. Operating Modes

Table 5: Overview of Operating Modes

Mode	Details	
Full Functionality Mode	Connected	The module is connected to network. Its power consumption varies with the network setting and data transfer rate.
	Idle	The module remains registered on network, and is ready to send and receive data. In this mode, the software is active.
Extended Idle Mode DRX (e-I-DRX)	The module and the network may negotiate over non-access stratum signaling the use of e-I-DRX for reducing power consumption, while being available for mobile terminating data and/or network originated procedures within a certain delay dependent on the DRX cycle value.	
Airplane Mode	AT+CFUN=4 can set the module into airplane mode where the RF function is invalid.	
Minimum Functionality Mode	AT+CFUN=0 can set the module into a minimum functionality mode without removing the power supply. In this mode, both RF function and (U)SIM card are invalid.	
Sleep Mode	The module remains the ability to receive paging message, SMS and TCP/UDP data from the network normally. In this mode, the power consumption is reduced to a low level.	
Power Off Mode	The module's power supply is shut down by its power management unit. In this mode, the software is inactive, the serial interfaces are inaccessible, while the operating voltage (connected to VBAT) is still maintained.	
Power Saving Mode (PSM)	PSM is similar to power-off, but the module remains registered on the network and there is no need to re-attach or re-establish PDN connections. The power consumption is reduced to a minimized level.	

NOTE

1. During e-I-DRX, it is recommended to use UART interface for data communication, as the use of USB interface increases power consumption.
2. See **document [3]** for details about **AT+CFUN**.

3.4. Power Saving

3.4.1. Airplane Mode

When the module enters airplane mode, the RF function does not work, and all AT commands correlative with RF function are inaccessible.

The module can be set into airplane mode through **AT+CFUN=<fun>**. The command provides choice of the functionality level, through setting **<fun>** into 0, 1 or 4.

- **AT+CFUN=0**: Minimum functionality. Both (U)SIM and RF functions are disabled.
- **AT+CFUN=1**: Full functionality (by default).
- **AT+CFUN=4**: Airplane mode. RF function is disabled.

NOTE

The execution of **AT+CFUN** will not affect GNSS function.

3.4.2. Power Saving Mode (PSM)

The module minimizes its power consumption through entering PSM. The mode is similar to power-off, but the module remains registered on the network and there is no need to re-attach or re-establish PDN connections. Therefore, the module in PSM cannot immediately respond to users' requests.

When the module wants to use PSM, it shall request an Active Time value during every Attach and TAU procedures. If the network supports PSM use, it will allocate an Active Time value to the module to confirm PSM use. If the module wants to change the Active Time value, the module consequently requests the value it wants in the TAU procedure.

If PSM is supported by the network, then it can be enabled via **AT+CPSMS**.

Any of the following methods can wake up the module from PSM:

- Wake up the module from PSM through a rising edge on PON_TRIG (recommended).
- Wake up the module by driving PWRKEY low.
- When the TAU timer expires, the module wakes up from PSM automatically.

NOTE

See **document [3]** for details about **AT+CPSMS**.

3.4.3. Extended Idle Mode DRX (e-I-DRX)

The module (UE) and the network may negotiate over non-access stratum signalling the use of e-I-DRX for reducing its power consumption, while being available for mobile terminating data and/or network originated procedures within a certain delay dependent on the DRX cycle value.

Applications that want to use e-I-DRX need to consider specific handling of mobile terminating services or data transfers, and in particular they need to consider the delay tolerance of mobile terminated data.

In order to negotiate the use of e-I-DRX, the UE requests e-I-DRX parameters during Attach procedure and RAU/TAU procedure. The EPC may reject or accept the UE request for enabling e-I-DRX. In case the EPC accepts e-I-DRX, the EPC based on operator policies and, if available, the e-I-DRX cycle length value in the subscription data from the HSS, may also provide different values of the e-I-DRX parameters than what were requested by the UE. If the EPC accepts the use of e-I-DRX, the UE applies e-I-DRX based on the received e-I-DRX parameters. If the UE does not receive e-I-DRX parameters in the relevant accept message because the EPC rejected its request or because the request was received by EPC not supporting e-I-DRX, the UE shall apply its regular discontinuous reception.

If e-I-DRX is supported by the network, then it can be enabled by **AT+CEDRXS=1**.

NOTE

See **document [3]** for details about **AT+CEDRXS**.

3.4.4. Sleep Mode

The module is able to reduce its power consumption to a lower value during sleep mode. The following sub-chapters describe the power saving procedure of the module.

3.4.4.1. UART Application

If the host communicates with the module via UART interface, the following preconditions enable the module to enter sleep mode.

- Execute **AT+QSCLK=1** to enable sleep mode.
- Drive MAIN_DTR high.

The following figure shows the connection between the module and the host.

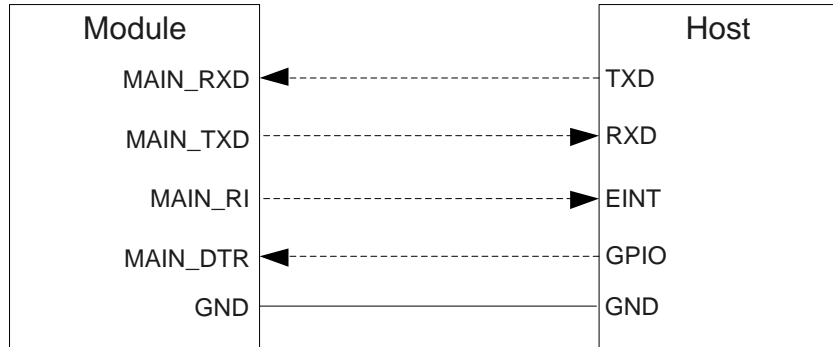


Figure 3: Sleep Mode Application via UART

- When the module has a URC to report, MAIN_RI will wake up the host. See **Chapter 3.15** for details about MAIN_RI behavior.
- Driving MAIN_DTR low will wake up the module.

3.5. Power Supply

3.5.1. Power Supply Pins

The module provides two VBAT pins for connection with an external power supply. There are two separate voltage domains for VBAT.

Table 6: VBAT and GND Pins

Pin Name	Pin No.	Description	Min.	Typ.	Max.	Unit
VBAT_RF	50	Power supply for the module's RF part	3.3	3.8	4.3	V
VBAT_BB	51	Power supply for the module's baseband part	3.3	3.8	4.3	V
GND	14, 27, 31, 40, 42, 44, 45, 48, 49.	Ground	-	-	-	-

3.5.2. Decrease Voltage Drop

The power supply range of the module is 3.3–4.3 V. Make sure that the input voltage never drops below 3.3 V.

The following figure shows the module's voltage drop during burst transmission in 2G network. The voltage drop is less in LTE Cat M1 and LTE Cat NB2 networks.

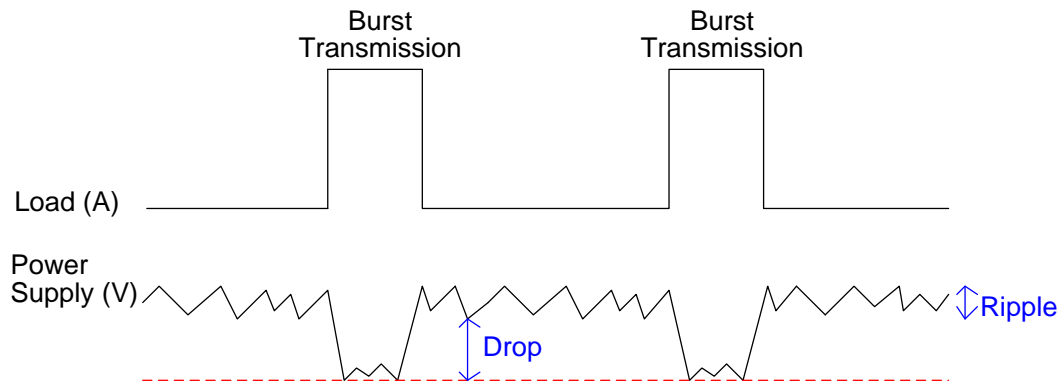


Figure 4: Power Supply Limits during Burst Transmission

To decrease voltage drop, a bypass capacitor of about 100 μF with low ESR should be used, and a multi-layer ceramic chip capacitor (MLCC) array should also be reserved due to its low ESR. It is recommended to use seven ceramic capacitors (220 nF, 47 nF, 150 pF, 100 pF, 68 pF, 33 pF, 10 pF) for composing the MLCC array, and place these capacitors close to VBAT pins. The main power supply from an external application has to be a single voltage source that can supply power along two star-structured sub paths. The width of VBAT_BB trace should be no less than 0.6 mm, and the width of VBAT_RF trace should be no less than 2.7 mm. In principle, the longer the VBAT trace is, the wider it will be.

To get a stable power source, it is suggested to use two TVSs with low leakage current and suitable reverse stand-off voltage, and it is recommended to place them as close to the VBAT pins as possible.

Inner layer design should be adopted for VBAT_BB and VBAT_RF trace. Place the ferrite bead at the closest position to VBAT_BB. Performance requirements for ferrite bead:

- Current Rating ≥ 600 mA and low DC resistance to avoid voltage drop during instantaneous high power consumption;
- $\geq 800 \Omega$ impedance @ 700–960 MHz.

The following figure shows the star structure of the power supply.

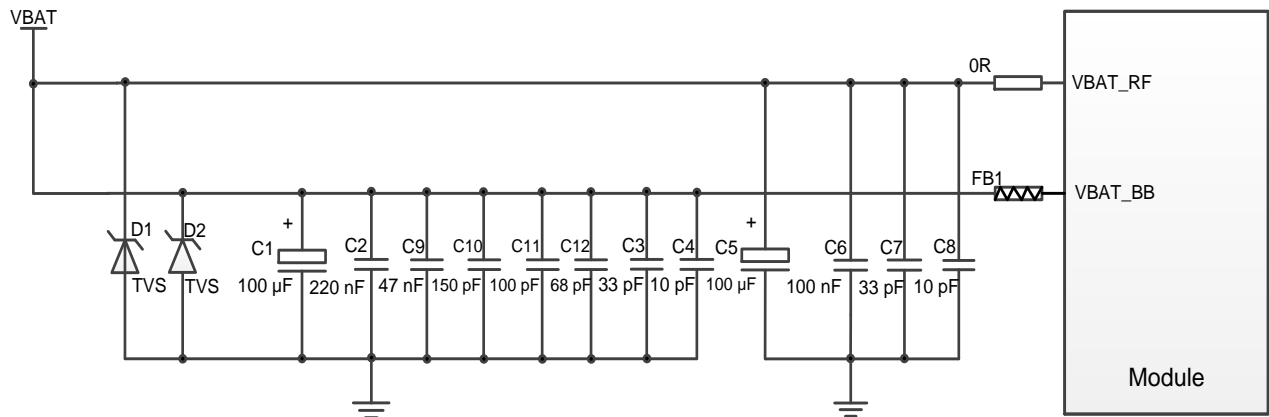


Figure 5: Reference Design of the Power Supply

Power design for a module is critical to its performance. The power supply of BG600L-M3 should be able to provide sufficient current of 2.7 A at least, and it is recommended to select a DC-DC converter chip or an LDO chip with ultra-low leakage current and current output no less than 2.7 A for the power supply design.

3.5.3. Power Supply Voltage Monitoring

AT+CBC can be used to monitor the VBAT_BB voltage value. For more details, see [document \[3\]](#).

3.6. Turn On and Off Scenarios

3.6.1. Turn On with PWRKEY

Table 7: Pin Definition of PWRKEY

Pin Name	Pin No.	IO	Description	DC Characteristics	Comment
PWRKEY	5	DI	Turn on/off the module	Vnom = 1.5 V VILmax = 0.45 V	The output voltage is 1.5 V because of the voltage drop inside the chipset.

When the module is in power-off mode, it can be turned on by driving PWRKEY low for 500–1000 ms. It is recommended to use an open drain/collector driver to control PWRKEY. A simple reference circuit is illustrated in the following figure.

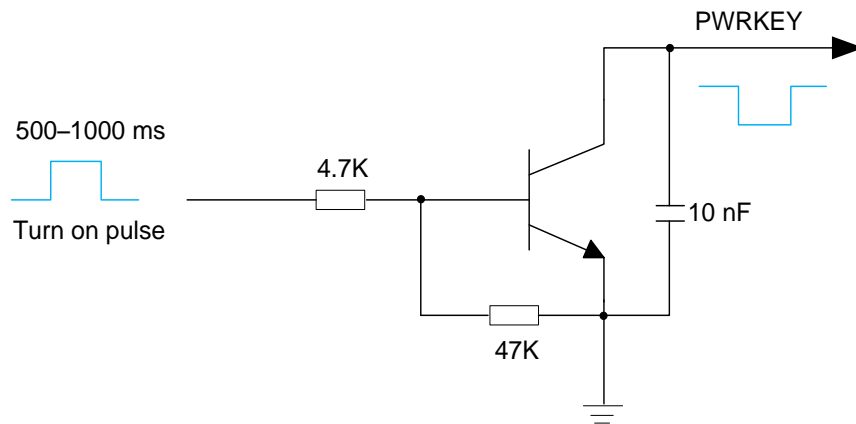


Figure 6: Turn On the Module with a Driving Circuit

Another way to control PWRKEY is using a button directly. When pressing the button, electrostatic strike may generate from the finger. Therefore, a TVS is indispensable to be placed nearby the button for ESD protection. A reference circuit is shown in the following figure.

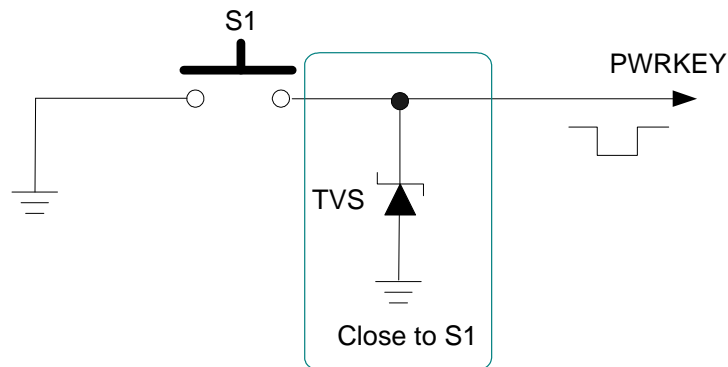


Figure 7: Turn On the Module with a Button

The power-up scenario is illustrated in the following figure.

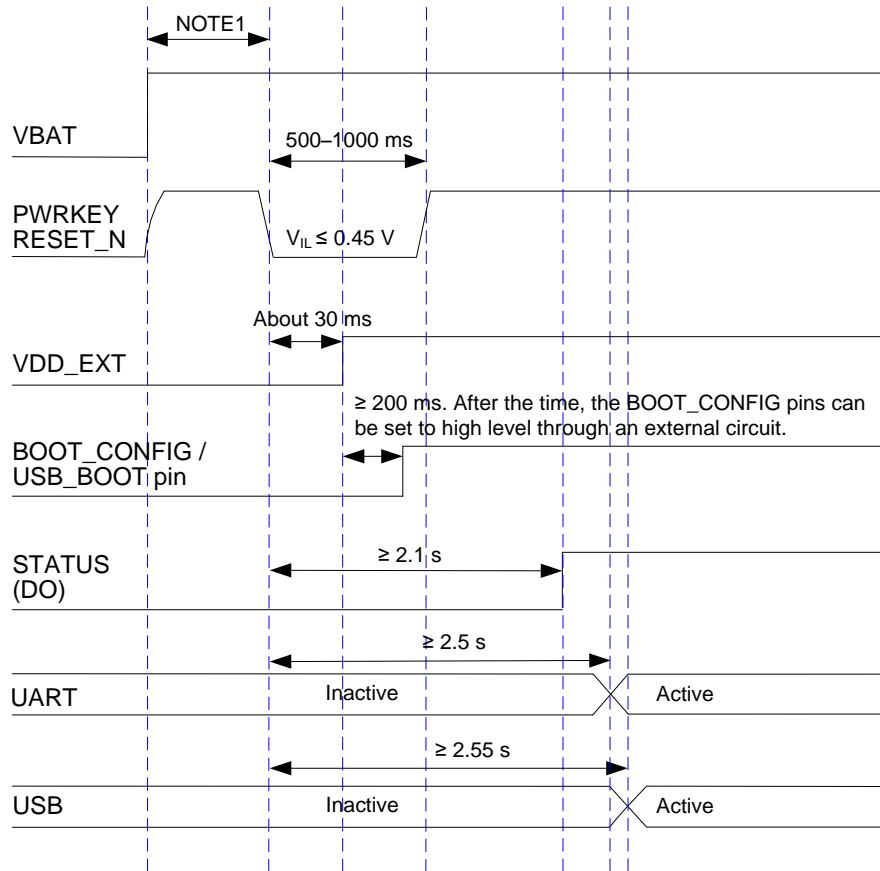


Figure 8: Power-up Timing

NOTE

1. Make sure that VBAT is stable before pulling down PWRKEY and keep the interval no less than 30 ms.
2. The output voltage of PWRKEY is 1.5 V because of the voltage drop inside the chipset. Due to platform limitations, the chipset has integrated the reset function into PWRKEY. Therefore, never pull down PWRKEY to GND permanently.

3.6.2. Turn Off

Either of the following methods can be used to turn off the module normally:

- Turn off the module with PWRKEY.
- Turn off the module with **AT+QPOWD**.

3.6.2.1. Turn Off with PWRKEY

Driving PWRKEY low for 650–1500 ms and then releasing it, the module will execute power-down procedure.

The power-down scenario is illustrated in the following figure.

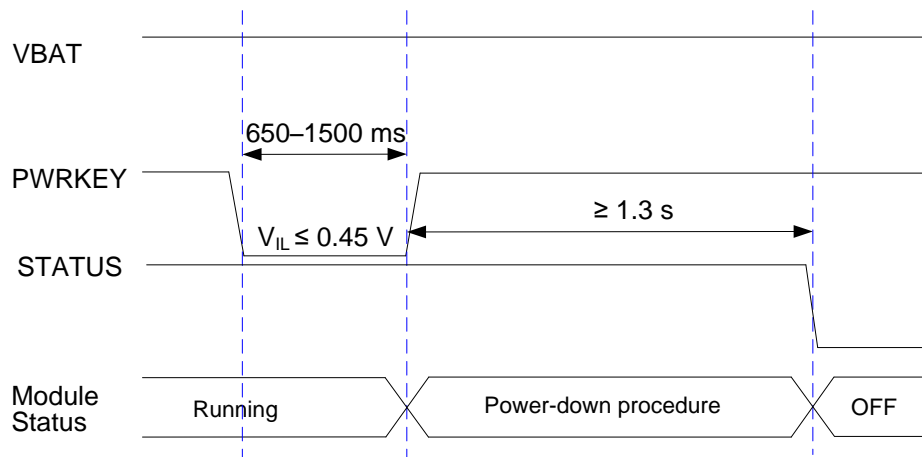


Figure 9: Power-down Timing

3.6.2.2. Turn off with AT Command

It is also a safe way to use **AT+QPOWD** to turn off the module, which is similar to turning off the module with PWRKEY.

See **document [3]** for details about **AT+QPOWD**.

NOTE

1. To avoid corrupting the data in the internal flash, do not switch off the power supply when the module works normally. Only after the module is shut down, the power supply can be cut off.
2. While turning off the module with an AT command, keep PWRKEY at a high level after the execution of power off command. Otherwise, the module will be turned on again after it turns off.

3.6.3. Fast Shutdown

The module supports fast shutdown function through the GPIO3 (pin 11) pin. When the pin detects a falling edge, the module powers off within 100 ms without damaging the file system, but the writing data may be lost. Fast shutdown is disabled by default.

For details, see **AT+QCFG="fast/poweroff"** in *document [4]*.

Table 8: Pin Definition of Fast Shutdown Interface

Pin Name	Pin No.	I/O	Description	Comment
GPIO3 ⁵	11	DI	When the pin detects a falling edge, the module powers off within 100 ms.	Falling-edge triggered. Pulled-up by default. 1.8 V power domain.

The fast shutdown timing is illustrated in the following figure.

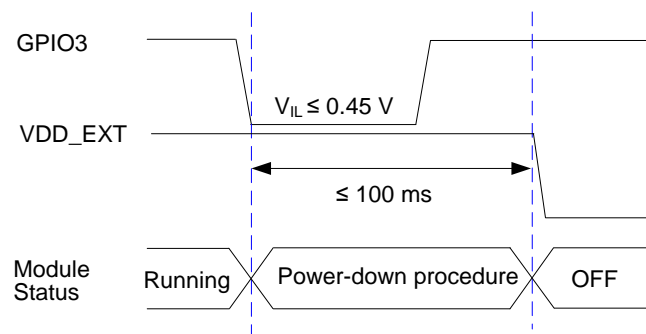


Figure 10: Fast Shutdown Timing

3.7. Reset

RESET_N is used to reset the module. Due to platform limitations, the chipset has integrated the reset function into PWRKEY, and RESET_N is connected directly to PWRKEY inside the module.

The module can be reset by driving RESET_N low for 2–3.8 s.

Table 9: Pin Definition of RESET_N

Pin Name	Pin No.	Description	DC Characteristics	Comment
RESET_N ⁵	4	Reset the module	$V_{ILmax} = 0.45\text{ V}$	Multiplexed from PWRKEY (connected directly to PWRKEY inside the module).

⁵ Pin 11 is a general-purpose GPIO by default. It can be multiplexed into a fast shutdown interface with **AT+QCFG="fast/poweroff"**.

The recommended circuit is similar to the PWRKEY control circuit. An open drain/collector driver or button can be used to control RESET_N.

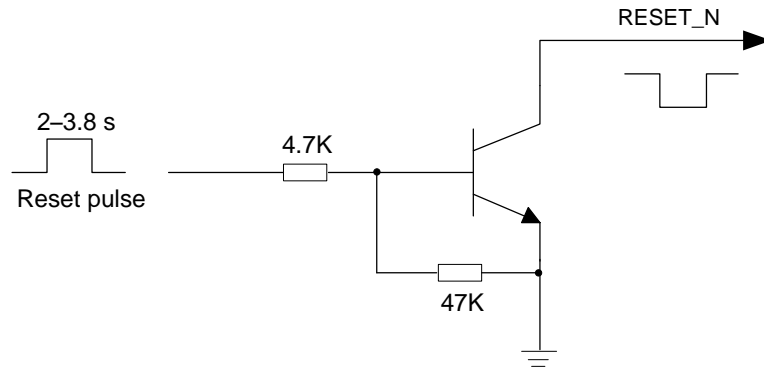


Figure 11: Reference Circuit of RESET_N with a Driving Circuit

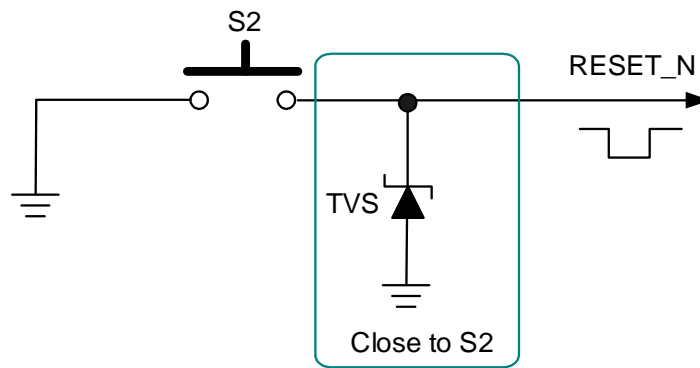


Figure 12: Reference Circuit of RESET_N with a Button

The reset scenario is illustrated in the following figure.

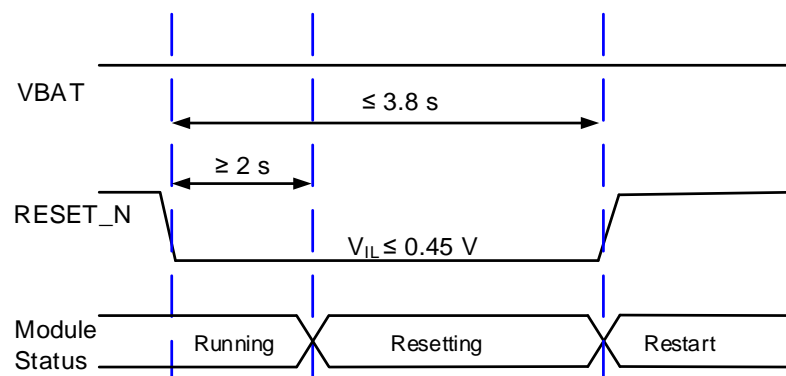


Figure 13: Reset Timing

NOTE

Ensure that there is no large capacitance on RESET_N.

3.8. PON_TRIG Interface

BG600L-M3 module provides one PON_TRIG pin to wake up the module from PSM. When the pin detects a rising edge and keeps at a high level for at least 30 ms, the module wakes up from PSM.

Table 10: Pin Definition of PON_TRIG Interface

Pin Name	Pin No.	I/O	Description	Comment
PON_TRIG	28	DI	Wake up the module from PSM	Rising-edge triggered. Pulled-down by default. 1.8 V power domain.

A reference circuit is shown in the following figure.

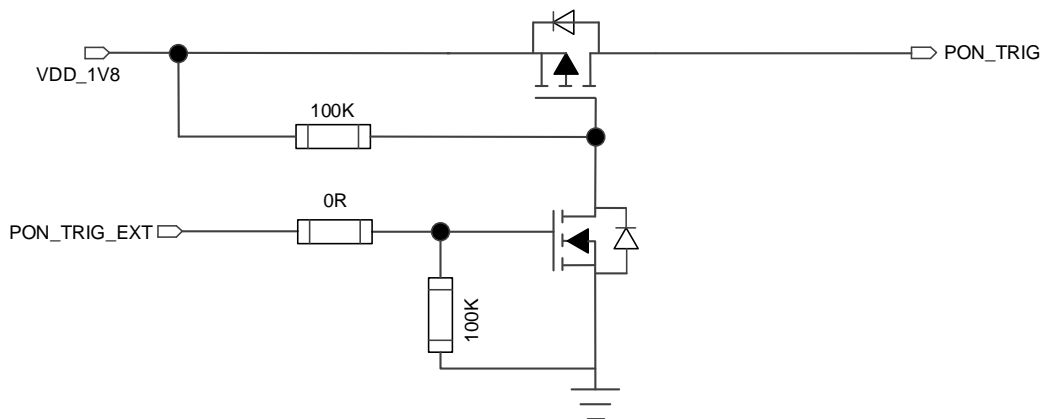


Figure 14: Reference Circuit of PON_TRIG

NOTE

VDD_1V8 is provided by an external LDO.

3.9. (U)SIM Interface

BG600L-M3 supports 1.8 V (U)SIM card only. The (U)SIM interface circuitry meets ETSI and IMT-2000 requirements.

Table 11: Pin Definition of (U)SIM Interface

Pin Name	Pin No.	I/O	Description	Comment
USIM_DET	26	DI	(U)SIM card hot-plug detect	1.8 V power domain.
USIM_VDD	18	PO	(U)SIM card power supply	Only 1.8 V (U)SIM card is supported.
USIM_RST	20	DO	(U)SIM card reset	1.8 V power domain.
USIM_DATA	21	DIO	(U)SIM card data	1.8 V power domain.
USIM_CLK	19	DO	(U)SIM card clock	1.8 V power domain.
USIM_GND	16		Specified ground for (U)SIM card	

BG600L-M3 supports (U)SIM card hot-plug via USIM_DET, and both high and low level detections are supported. The function is disabled by default, and see **AT+QSIMDET** in **document [3]** for more details.

The following figure shows a reference design of (U)SIM interface with an 8-pin (U)SIM card connector.

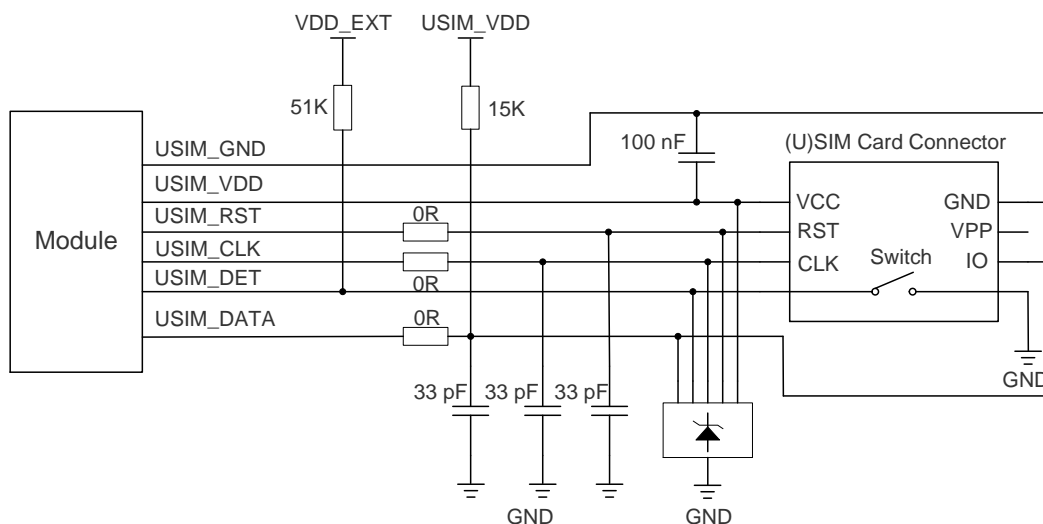


Figure 15: Reference Circuit of (U)SIM Interface with an 8-Pin (U)SIM Card Connector

If (U)SIM card detection function is not needed, keep USIM_DET unconnected. A reference circuit for (U)SIM interface with a 6-pin (U)SIM card connector is illustrated in the following figure.

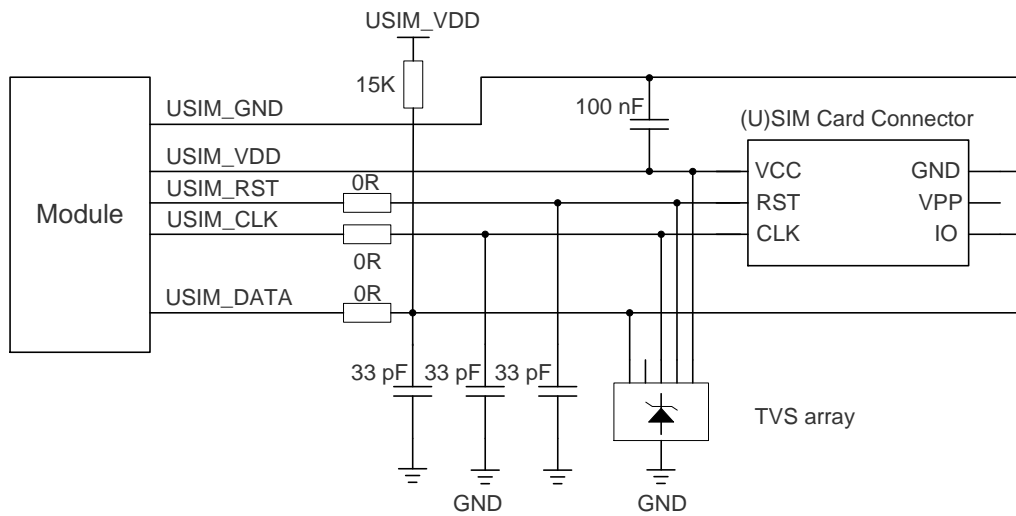


Figure 16: Reference Circuit of (U)SIM Interface with a 6-Pin (U)SIM Card Connector

To enhance the reliability and availability of the (U)SIM card in applications, follow the criteria below in (U)SIM circuit design:

- Keep the placement of (U)SIM card connector as close to the module as possible. Keep the trace length as less than 200 mm as possible.
- Keep (U)SIM card signals away from RF and VBAT traces.
- Assure the ground trace between the module and the (U)SIM card connector short and wide. Keep the trace width of ground and USIM_VDD no less than 0.5 mm to maintain the same electric potential. Make sure the bypass capacitor between USIM_VDD and USIM_GND is less than 1 μ F, and place it as close to (U)SIM card connector as possible. If the system ground plane is complete, USIM_GND can be connected to the system ground directly.
- To avoid cross-talk between USIM_DATA and USIM_CLK, keep their traces away from each other and shield them with ground. USIM_RST should also be shielded with ground.
- To offer good ESD protection, it is recommended to add a TVS array with parasitic capacitance not exceeding 15 pF. To facilitate debugging, it is recommended to reserve series resistors for the (U)SIM signals of the module. The 33 pF capacitors are used for filtering interference of EGSM900. Note that the (U)SIM peripheral circuit should be close to the (U)SIM card connector.
- The pull-up resistor on USIM_DATA line can improve anti-jamming capability, and should be placed close to the (U)SIM card connector.

3.10. USB Interface

BG600L-M3 provides one integrated Universal Serial Bus (USB) interface which complies with the USB 2.0 specification. The USB interface only supports slave mode and supports operation at low-speed (1.5 Mbps), full-speed (12 Mbps) and high-speed (480 Mbps) modes. The USB interface is used for AT command communication, data transmission, GNSS NMEA sentences output, software debugging and firmware upgrade. The following table shows the pin definition of USB interface.

Table 12: Pin Definition of USB Interface

Pin Name	Pin No.	I/O	Description	Comment
USB_VBUS	32	AI	USB connection detect	Input range: 1.3–1.8 V
USB_DP	24	AIO	USB differential data (+)	Differential impedance of 90 Ω required
USB_DM	25	AIO	USB differential data (-)	
USBPHY_3P3	17	PI	Power supply for USB PHY circuit	Vnom = 3.3 V
USBPHY_3P3_EN	8	DO	External LDO enable control for USB	1.8 V power domain
GND	31		Ground	

For more details about USB 2.0 specification, visit <http://www.usb.org/home>.

The USB interface is recommended to be reserved for firmware upgrade and software debugging in application designs. It is not recommended to use USB interface for data communication, as this will increase the power consumption. The following figures illustrate reference designs of USB PHY and USB interface.

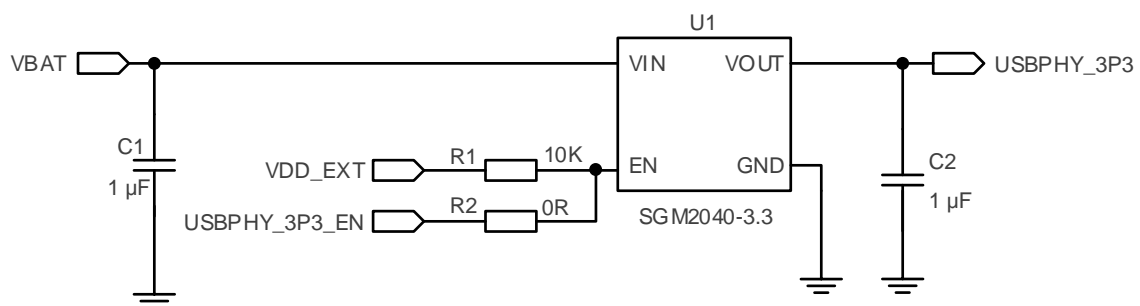


Figure 17: Reference Design of USB PHY

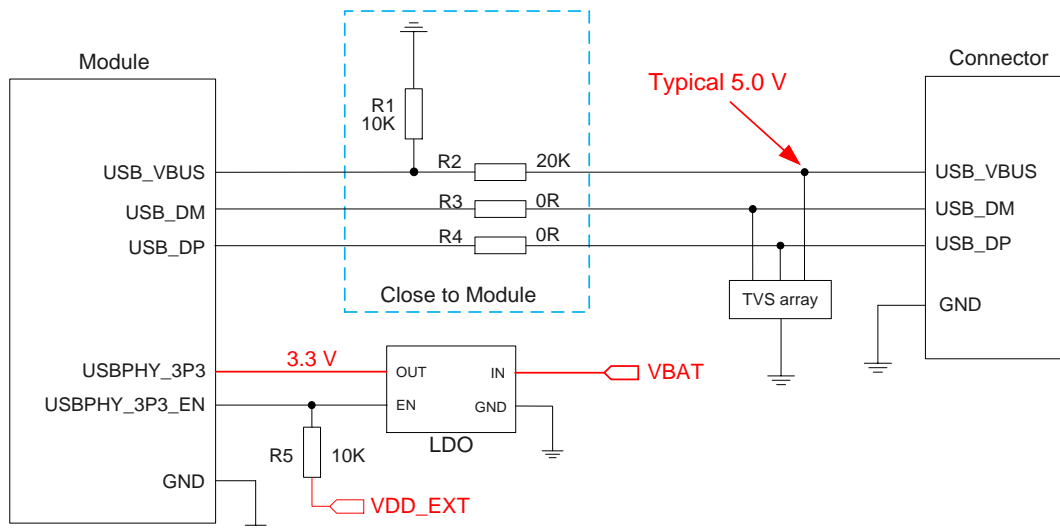


Figure 18: Reference Design of USB Interface

To ensure the integrity of USB data line signal, resistors R3 and R4 should be placed close to the module, and also these resistors should be placed close to each other. The extra stubs of trace must be as short as possible.

To meet USB 2.0 specification, comply with the following principles in the USB interface designing .

- It is important to route the USB signal traces as differential pairs with ground. The impedance of USB differential trace is 90 Ω .
- Do not route signal traces under crystals, oscillators, magnetic devices and RF signal traces. It is important to route the USB differential traces in inner-layer of the PCB, and surround the traces with ground on that layer and with ground planes above and below.
- Junction capacitance of the ESD protection components might influence USB data traces, so pay attention to device selection. Typically, the stray capacitance should be less than 2 pF.
- Keep the ESD protection devices as close to the USB connector as possible.

NOTE

1. The USB interface supports slave mode only.
2. The input voltage range of USB_VBUS is 1.3–1.8 V.

3.11. UART Interfaces

The module provides three UART interfaces: the main UART, debug UART and the GNSS UART interfaces. Features of them are illustrated below:

- The main UART interface supports baud rates of 9600, 19200, 38400, 57600, 115200, 230400, 460800, 921600, 2000000, 2900000, 3000000, 3200000, 3686400 and 4000000 bps with a default baud rate of 115200 bps. It is used for data transmission and AT command communication, and supports RTS and CTS hardware flow control. The default frame format is 8N1 (8 data bits, no parity, 1 stop bit).
- The debug UART interface supports a fixed baud rate of 115200 bps, and is used for software debugging and log output.
- The GNSS UART interface supports 115200 bps baud rate by default, and is used for GNSS data and NMEA sentences output.

Table 13: Pin Definition of Main UART Interface

Pin Name	Pin No.	I/O	Description	Comment
MAIN_DTR	37	DI	Main UART data terminal ready	1.8 V power domain
MAIN_RXD	34	DI	Main UART receive	1.8 V power domain
MAIN_TXD	33	DO	Main UART transmit	1.8 V power domain
MAIN_CTS	38	DO	CTS: DTE clear to send signal from DCE	1.8 V power domain. CTS: Connect to DTE's CTS
MAIN_RTS	39	DI	RTS: DTE request to send signal to DCE	1.8 V power domain. RTS: Connect to DTE's RTS
MAIN_DCD	36	DO	Main UART data carrier detect	1.8 V power domain
MAIN_RI	35	DO	Main UART ring indication	1.8 V power domain

NOTE

AT+IPR can be used to set the baud rate of the main UART interface, and **AT+IFC** can be used to enable/disable the hardware flow control (the function is disabled by default). See **document [3]** for more details about these AT commands.

Table 14: Pin Definition of Debug UART Interface

Pin Name	Pin No.	I/O	Description	Comment
DBG_TXD	29	DO	Debug UART transmit	1.8 V power domain
DBG_RXD	30	DI	Debug UART receive	1.8 V power domain

Table 15: Pin Definition of GNSS UART Interface

Pin Name	Pin No.	I/O	Description	Comment
GNSS_TXD	22	DO	GNSS UART transmit	1.8 V power domain
GNSS_RXD	23	DI	GNSS UART receive	1.8 V power domain

The module provides 1.8 V UART interfaces. A voltage-level translator should be used if your application is equipped with a 3.3 V UART interface. The voltage-level translator TXS0108EPWR provided by Texas Instruments is recommended. The following figure shows a reference design of the main UART interface:

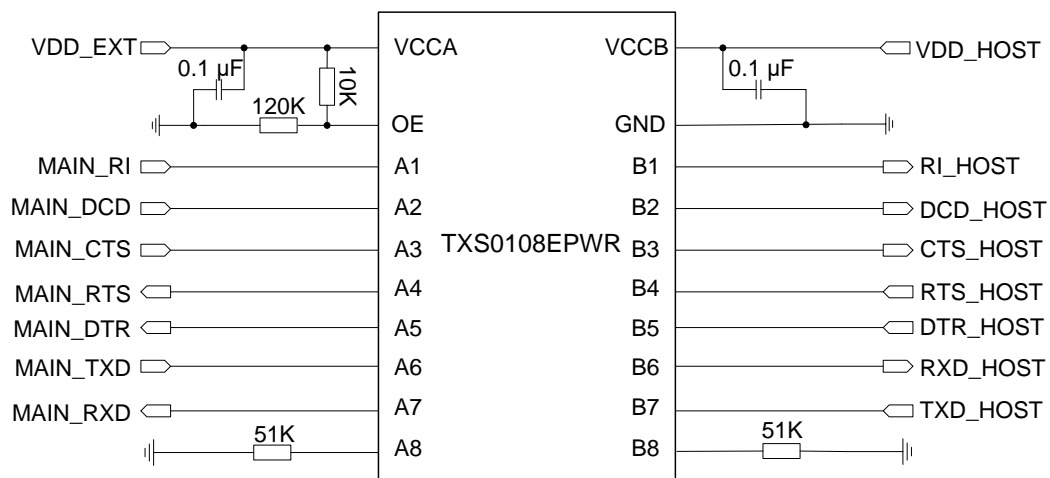


Figure 19: Main UART Reference Design (IC Solution)

Visit <http://www.ti.com> for more information.

Another example with transistor circuit is shown as below. For the design of circuits in dotted lines, see that of circuits in solid lines, but pay attention to the direction of connection.

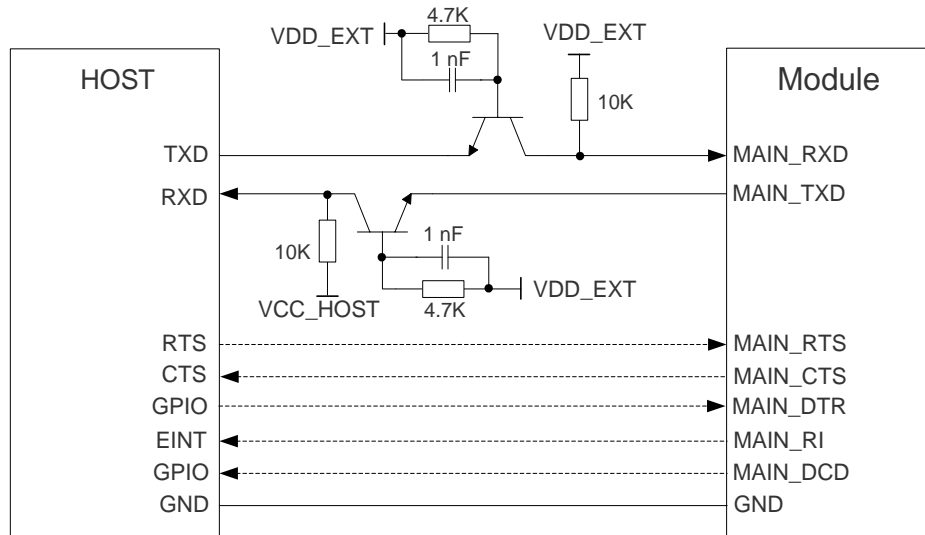


Figure 20: Main UART Reference Design (Transistor Solution)

NOTE

1. Transistor solution is not suitable for applications with high baud rates exceeding 460 kbps.
2. Please note that the module CTS is connected to the host CTS, and the module RTS is connected to the host RTS.

3.12. PCM and I2C Interfaces

BG600L-M3 provides one Pulse Code Modulation (PCM) digital interface and one I2C interface which are used for VoLTE or GSM CS voice only. The following table shows the pin definition of the two interfaces which can be applied on audio codec design.

Table 16: Pin Definition of PCM and I2C Interfaces

Pin Name	Pin No.	I/O	Description	Comment
PCM_CLK	59	DO	PCM clock	1.8 V power domain
PCM_SYNC	61	DO	PCM data frame sync	1.8 V power domain
PCM_DIN	62	DI	PCM data input	1.8 V power domain
PCM_DOUT	60	DO	PCM data output	1.8 V power domain

I2C_SCL	58	OD	I2C serial clock (for external codec)	External pull-up to 1.8 V required
I2C_SDA	57	OD	I2C serial data (for external codec)	External pull-up to 1.8 V required

The following figure shows a reference design of PCM and I2C interfaces with an external codec IC.

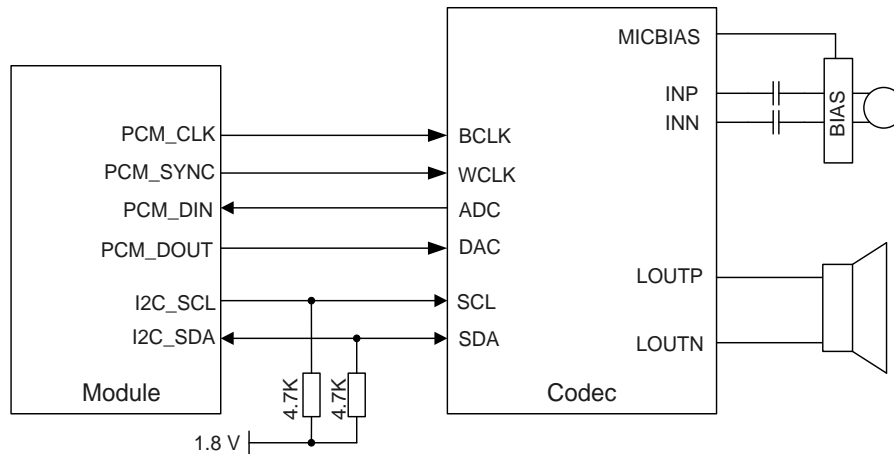


Figure 21: Reference Circuit of PCM and I2C Application with Audio Codec

3.13. Network Status Indication

BG600L-M3 provides one network status indication pin: NET_STATUS. The pin is used to drive a network status indication LED. The following tables describe the pin definition and logic level changes of NET_STATUS in different network activity status.

Table 17: Pin Definition of NET_STATUS

Pin Name	Pin No.	I/O	Description	Comment
NET_STATUS	47	DO	Indicate the module's network activity status	BOOT_CONFIG. Do not pull it up before startup. 1.8 V power domain.

Table 18: Working State of NET_STATUS

Pin Name	Logic Level Changes	Network Status
NET_STATUS	Flicker slowly (200 ms High/1800 ms Low)	Network searching
	Flicker slowly (1800 ms High/200 ms Low)	Idle
	Flicker quickly (125 ms High/125 ms Low)	Data transfer is ongoing
	Always high	Voice calling

A reference circuit is shown in the following figure.

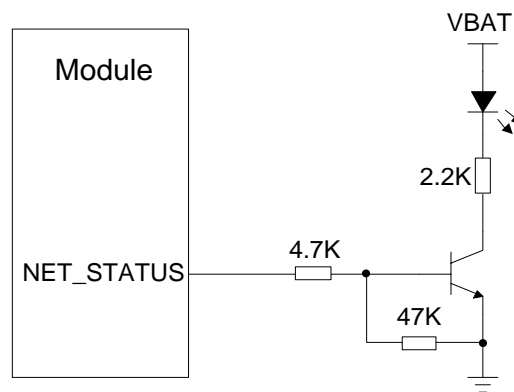


Figure 22: Reference Design of the NET_STATUS

NOTE

NET_STATUS is a BOOT_CONFIG pin. Do not pull it up before startup.

3.14. STATUS

The STATUS pin indicates the operation status of the module. It outputs a high level when the module powers on.

Table 19: Pin Definition of STATUS

Pin Name	Pin No.	I/O	Description	Comment
STATUS	13	DO	Indicate the module's operation status	1.8 V power domain

The following figure shows a reference circuit of STATUS.

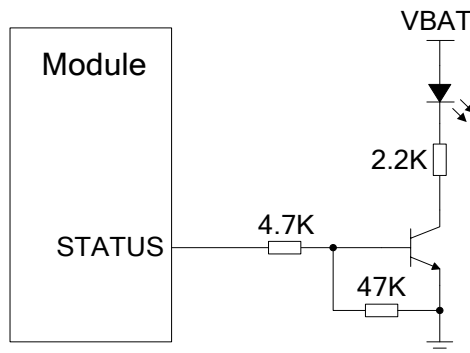


Figure 23: Reference Design of STATUS

3.15. MAIN_RI

AT+QCFG="risignalttype","physical" can be used to configure MAIN_RI behavior. No matter on which port a URC is presented, a URC will trigger the behavior of MAIN_RI.

The default behaviors of MAIN_RI are shown as below.

Table 20: Default Behaviors of MAIN_RI

State	Response
Idle	MAIN_RI keeps at a high level.
URC	MAIN_RI outputs a 120 ms low pulse when a new URC is returned.

The default MAIN_RI behaviors can be configured flexibly by **AT+QCFG="urc/ri/ring"**. For more details about **AT+QCFG**, see *document [4]*.

NOTE

A URC can be outputted from UART port and USB modem port (default) through configuration via **AT+QURCCFG**. For more details about the AT command, see *document [3]*.

3.16. USB_BOOT Interface

BG600L-M3 provides a USB_BOOT pin. You can pull up USB_BOOT to VDD_EXT before powering up the module, then the module will enter emergency download mode when powered up. In this mode, the module supports firmware upgrade over USB 2.0 interface. During development or factory production, USB_BOOT can force the module to boot from USB port for firmware upgrade.

Table 21: Pin Definition of USB_BOOT Interface

Pin Name	Pin No.	I/O	Description	Comment
USB_BOOT	56	DI	Force the module into emergency download mode	1.8 V power domain.Active high. If unused, keep it open.

The following figure shows a reference circuit of USB_BOOT interface.

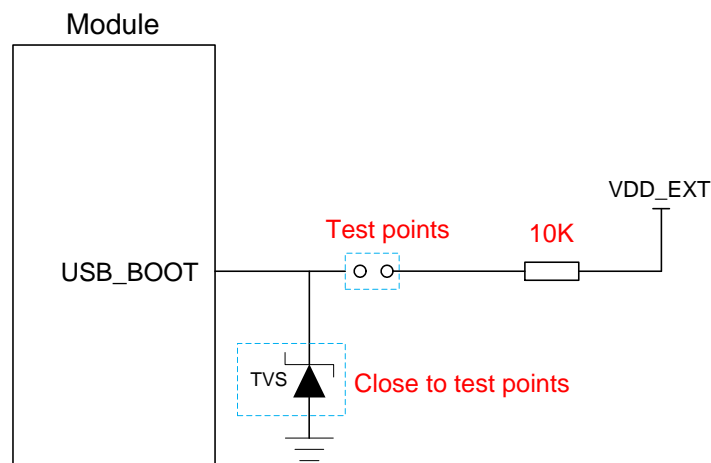


Figure 24: Reference Design of USB_BOOT Interface

The following figure shows the timing of USB_BOOT.

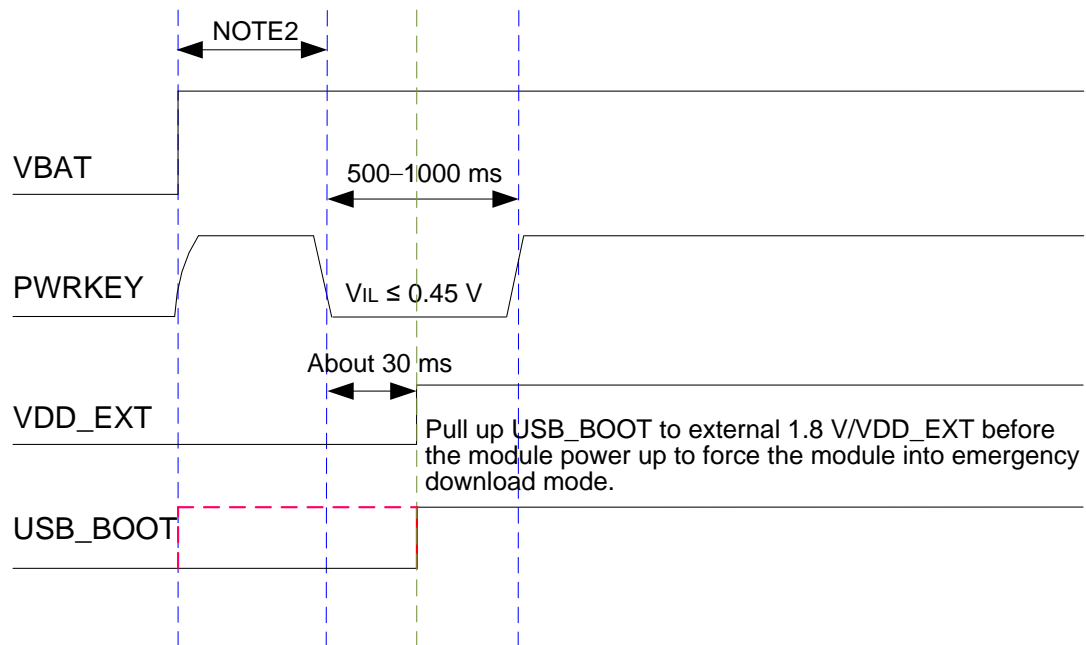


Figure 25: Timing of Turning on Module with USB_BOOT

NOTE

1. It is recommended to reserve the above circuit design during application design.
2. Ensure that VBAT is stable before pulling down PWRKEY. It is recommended that the time difference between powering up VBAT and pulling down PWRKEY is no less than 30 ms.
3. When using MCU to control the module entering emergency download mode, follow the above timing sequence. Connecting the test points as shown in **Figure 24** can manually force the module into download mode.

3.17. ADC Interface

The module provides one analog-to-digital converter (ADC) interface. **AT+QADC=0** can be used to read the voltage value on ADC. For more details about the AT command, see **document [3]**.

To improve the accuracy of ADC voltage values, the trace of ADC should be shielded with ground.

Table 22: Pin Definition of ADC Interface

Pin Name	Pin No.	I/O	Description	Comment
ADC	6	AI	General-purpose ADC interface	Voltage range: 0.1–1.8 V

Table 23: Characteristics of ADC Interface

Parameter	Min.	Typ.	Max.	Unit
Voltage Range	0.1	-	1.8	V
Resolution (LSB)	-	64.879	-	μV
Analog Bandwidth	-	500	-	kHz
Sample Clock	-	4.8	-	MHz
Input Resistance	10	-	-	MΩ

NOTE

1. ADC input voltage must not exceed 1.8 V.
2. It is prohibited to supply any voltage to ADC pin when VBAT is removed.
3. It is recommended to use resistor divider circuit for ADC application, and the divider resistor accuracy should be no less than 1 %.

3.18. GPIO Interfaces

The module provides six general-purpose input and output (GPIO) interfaces. **AT+QCFG="gpio"** can be used to configure the status of GPIO pins. For more details about the AT command, see **document [4]**.

Table 24: Pin Definition of GPIO Interfaces

Pin Name	Pin No.	I/O	Description	Comment
GPIO1 ⁶	9	DIO	General-purpose input/output	BOOT_CONFIG. Do not pull it up before startup. 1.8 V power domain.

⁶ GPIO1 (pin 9) is a BOOT_CONFIG pin. Never pull it up before startup, otherwise the module cannot power on normally.

				If unused, keep this pin open.
GPIO2	10	DIO	General-purpose input/output	1.8 V power domain. If unused, keep these pins open.
GPIO3 ⁷	11	DIO	General-purpose input/output	
GPIO4	12	DIO	General-purpose input/output	
GPIO5	53	DIO	General-purpose input/output	
GPIO6	54	DIO	General-purpose input/output	

3.19. GRFC Interfaces

The module provides two generic RF control interfaces for the control of external antenna tuners.

Table 25: Pin Definition of GRFC Interfaces

Pin Name	Pin No.	I/O	Description	Comment
GRFC1	63	DO	Generic RF controller	BOOT_CONFIG. Do not pull it up before startup. 1.8 V power domain. If unused, keep this pin open.
GRFC2	64	DO	Generic RF controller	1.8 V power domain. If unused, keep this pin open.

Table 26: Truth Table of GRFC Interfaces

GRFC1	GRFC2	Frequency Range (MHz)	Band
Low	Low	880–2200	B1, B2, B3, B4, B8, B25, B66
High	Low	791–894	B5, B18, B19, B20, B26, B27
Low	High	698–803	B12, B13, B28, B85
High	High	617–698	B71

⁷ GPIO3 (pin 11) is a general-purpose GPIO by default. It can be multiplexed into fast shutdown interface with **AT+QCFG="fast/poweroff"**. See **Chapter 3.6.3** for details.

NOTE

GRFC1 (pin 63) is a BOOT_CONFIG pin. Do not pull it up before startup.

4 GNSS

4.1. General Description

BG600L-M3 includes a fully integrated global navigation satellite system solution that supports GPS, GLONASS, BDS, Galileo and QZSS.

The module supports standard NMEA-0183 protocol, and outputs NMEA sentences at 1 Hz data update rate via USB interface by default.

By default, BG600L-M3 GNSS engine is switched off. It has to be switched on via AT command. The module does not support concurrent operation of WWAN and GNSS. For more details about GNSS engine technology and configurations, see **document [1]**.

4.2. GNSS Performance

Table 27: GNSS Performance

Parameter	Description	Conditions	Typ.	Unit
Sensitivity	Acquisition	Autonomous	-147	dBm
	Reacquisition	Autonomous	-160	dBm
	Tracking	Autonomous	-159	dBm
TTFF	Cold start @ open sky	Autonomous	30.53	s
		XTRA enabled	2.16	s
	Warm start @ open sky	Autonomous	25.61	s
		XTRA enabled	1.15	s
	Hot start	Autonomous	1.5	s

	@ open sky	XTRA enabled	1.10	s
Accuracy	CEP-50	Autonomous @ open sky	2.5	m

NOTE

1. Tracking sensitivity: the minimum GNSS signal power at which the module can maintain lock (keep positioning for at least 3 minutes continuously).
2. Reacquisition sensitivity: the minimum GNSS signal power required for the module to maintain lock within 3 minutes after loss of lock.
3. Acquisition sensitivity: the minimum GNSS signal power at which the module can fix position successfully within 3 minutes after executing cold start command.

4.3. Layout Guidelines

The following layout guidelines should be taken into account in application designs.

- Maximize the distance between GNSS antenna and Main antenna.
- Digital circuits such as (U)SIM card, USB interface, camera module, display connector and SD card should be kept away from the antennas.
- Use ground vias around the GNSS trace and sensitive analog signal traces to provide coplanar isolation and protection.
- Keep 50 Ω characteristic impedance for ANT_GNSS trace.

See **Chapter 5** for GNSS antenna reference design and antenna installation information.

5 Antenna Interfaces

BG600L-M3 includes a main antenna interface and a GNSS antenna interface. The impedance of antenna interfaces is 50 Ω .

5.1. Main Antenna Interface

5.1.1. Pin Definition

Table 28: Pin Definition of Main Antenna Interface

Pin Name	Pin No.	I/O	Description	Comment
ANT_MAIN	41	AIO	Main antenna interface	50 Ω impedance

5.1.2. Operating Frequency

Table 29: BG600L-M3 Operating Frequency

3GPP Band	Transmit	Receive	Unit
LTE HD-FDD B1	1920–1980	2110–2170	MHz
LTE HD-FDD B2, PCS1900	1850–1910	1930–1990	MHz
LTE HD-FDD B3, DCS1800	1710–1785	1805–1880	MHz
LTE HD-FDD B4	1710–1755	2110–2155	MHz
LTE HD-FDD B5, GSM850	824–849	869–894	MHz
LTE HD-FDD B8, EGSM900	880–915	925–960	MHz
LTE HD-FDD B12	699–716	729–746	MHz
LTE HD-FDD B13	777–787	746–756	MHz

LTE HD-FDD B18	815–830	860–875	MHz
LTE HD-FDD B19	830–845	875–890	MHz
LTE HD-FDD B20	832–862	791–821	MHz
LTE HD-FDD B25	1850–1915	1930–1995	MHz
LTE HD-FDD B26 ⁸	814–849	859–894	MHz
LTE HD-FDD B27 ⁸	807–824	852–869	MHz
LTE HD-FDD B28	703–748	758–803	MHz
LTE HD-FDD B66	1710–1780	2110–2180	MHz
LTE HD-FDD B71 ⁹	663–698	617–652	MHz
LTE HD-FDD B85	698–716	728–746	MHz

5.1.3. Reference Design

A reference design of Main antenna interface is shown as below. It is recommended to reserve a π -type matching circuit for better RF performance, and the π -type matching components (R1/C1/C2) should be placed as close to the antenna as possible. The capacitors are not mounted by default.

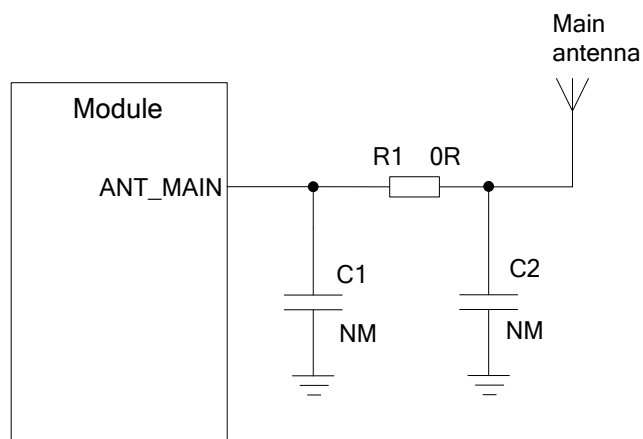


Figure 26: Reference Design of Main Antenna Interface

⁸ LTE HD-FDD B26 and B27 are supported by LTE Cat M1 only.

⁹ LTE HD-FDD B71 is supported by LTE Cat NB2 only.

5.2. GNSS Antenna Interface

5.2.1. Pin Definition

Table 30: Pin Definition of GNSS Antenna Interface

Pin Name	Pin No.	I/O	Description	Comment
ANT_GNSS	15	AI	GNSS antenna interface	50 Ω impedance

5.2.2. GNSS Operating Frequency

Table 31: GNSS Operating Frequency

Type	Frequency	Unit
GPS	1575.42 \pm 1.023	MHz
GLONASS	1597.5–1605.8	MHz
Galileo	1575.42 \pm 2.046	MHz
BDS	1561.098 \pm 2.046	MHz
QZSS	1575.42 \pm 1.023	MHz

5.2.3. Reference Design

A reference design of GNSS antenna interface is shown as below.

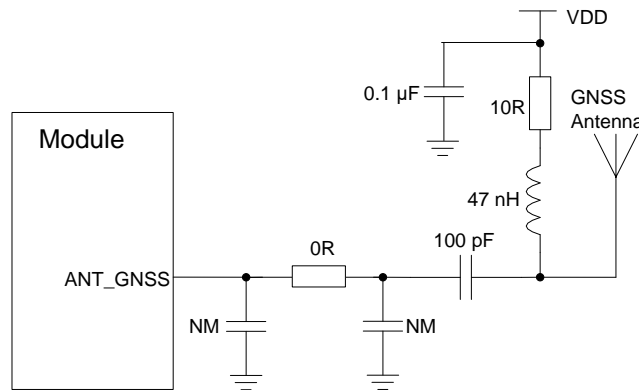


Figure 27: Reference Design of GNSS Antenna Interface

NOTE

1. An external LDO can be selected to supply power according to the active antenna requirement.
2. If the module is designed with a passive antenna, then the VDD circuit is not needed.

5.3. Reference Design Guidelines

For user's PCB, the characteristic impedance of all RF traces should be controlled to 50 Ω . The impedance of RF traces is usually determined by the trace width (W), the materials' dielectric constant, the height from the reference ground to the signal layer (H), and the spacing between RF traces and grounds (S). Microstrip or coplanar waveguide is typically used in RF layout to control characteristic impedance. The following are reference designs of microstrip or coplanar waveguide with different PCB structures.

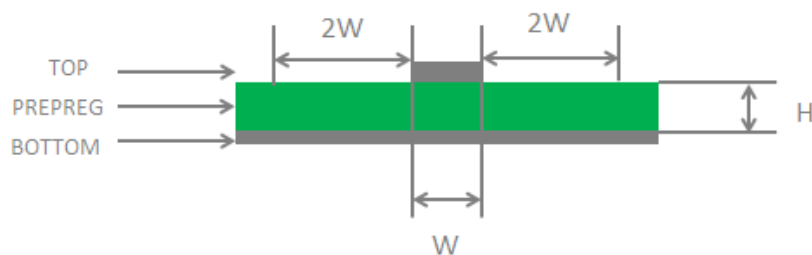


Figure 28: Microstrip Design on a 2-layer PCB

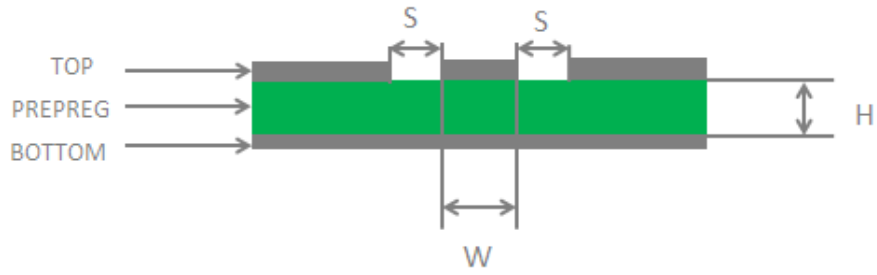


Figure 29: Coplanar Waveguide Design on a 2-layer PCB

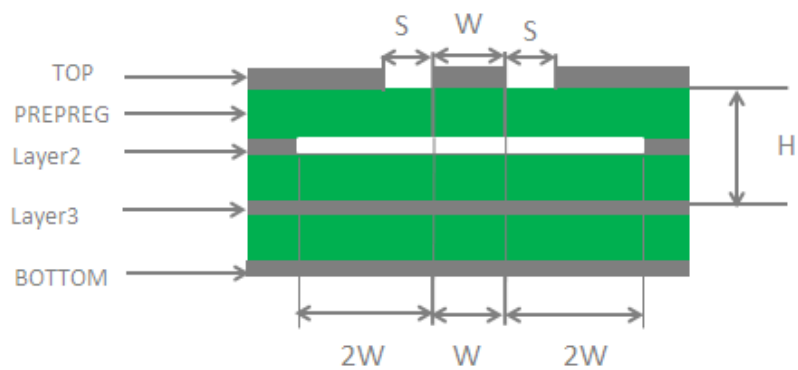


Figure 30: Coplanar Waveguide Design on a 4-layer PCB (Layer 3 as Reference Ground)

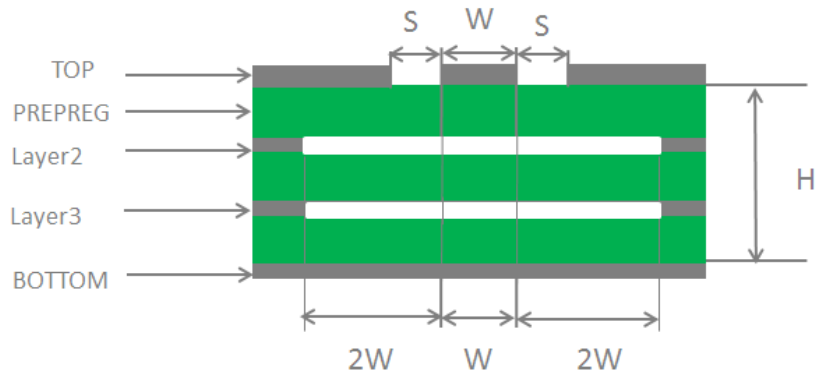


Figure 31: Coplanar Waveguide Design on a 4-layer PCB (Layer 4 as Reference Ground)

To ensure RF performance and reliability, the following principles should be complied with in RF layout design:

- Use an impedance simulation tool to accurately control the characteristic impedance of RF traces to 50 Ω .
- The GND pins adjacent to RF pins should not be designed as thermal relief pads, and should be fully

connected to ground.

- The distance between the RF pins and the RF connector should be as short as possible, and all the right-angle traces should be changed to curved ones. The recommended trace angle is 135°.
- There should be clearance under the signal pin of the antenna connector or solder joint.
- The reference ground of RF traces should be complete. Meanwhile, adding some ground vias around RF traces and the reference ground could help to improve RF performance. The distance between the ground vias and RF traces should be not less than twice the width of RF signal traces ($2 \times W$).
- Keep RF traces away from interference sources, and avoid intersection and paralleling between traces on adjacent layers.

For more details about RF layout, see **document [5]**.

5.4. Antenna Installation

5.4.1. Antenna Design Requirements

Table 32: Antenna Requirements

Antenna Type	Requirements
GNSS ¹⁾	Frequency range: 1559–1609 MHz Polarization: RHCP or linear VSWR: < 2 (Typ.) Passive antenna gain: > 0 dBi Active antenna noise figure: < 1.5 dB Active antenna gain: > 0 dBi Active antenna embedded LNA gain: < 17 dB
LTE/GSM	VSWR: ≤ 2 Efficiency: > 30 % Max Input Power: 50 W Input Impedance: 50 Ω Cable Insertion Loss: < 1 dB: LB (<1 GHz) < 1.5 dB: MB (1–2.3 GHz)

NOTE

It is recommended to use a passive GNSS antenna when LTE B13 is supported, as the use of active antenna may generate harmonics which will affect the GNSS performance.

5.4.2. RF Connector Recommendation

If RF connector is used for antenna connection, it is recommended to use the U.FL-R-SMT connectors provided by HIROSE.

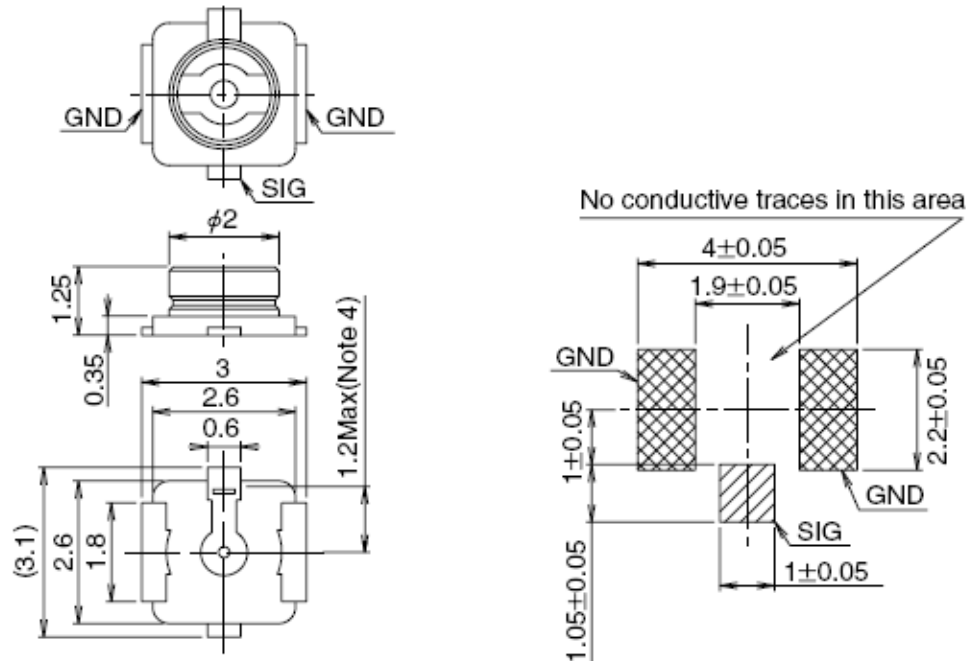


Figure 32: Dimensions of the Receptacle (Unit: mm)

U.FL-LP series mated plugs listed in the following figure can be used to match the U.FL-R-SMT.

Part No.	U.FL-LP-040	U.FL-LP-066	U.FL-LP(V)-040	U.FL-LP-062	U.FL-LP-088
Mated Height	2.5mm Max. (2.4mm Nom.)	2.5mm Max. (2.4mm Nom.)	2.0mm Max. (1.9mm Nom.)	2.4mm Max. (2.3mm Nom.)	2.4mm Max. (2.3mm Nom.)
Applicable cable	Dia. 0.81mm Coaxial cable	Dia. 1.13mm and Dia. 1.32mm Coaxial cable	Dia. 0.81mm Coaxial cable	Dia. 1mm Coaxial cable	Dia. 1.37mm Coaxial cable
Weight (mg)	53.7	59.1	34.8	45.5	71.7
RoHS	YES				

Figure 33: Specifications of Mated Plugs

The following figure describes the space factor of mated connectors.

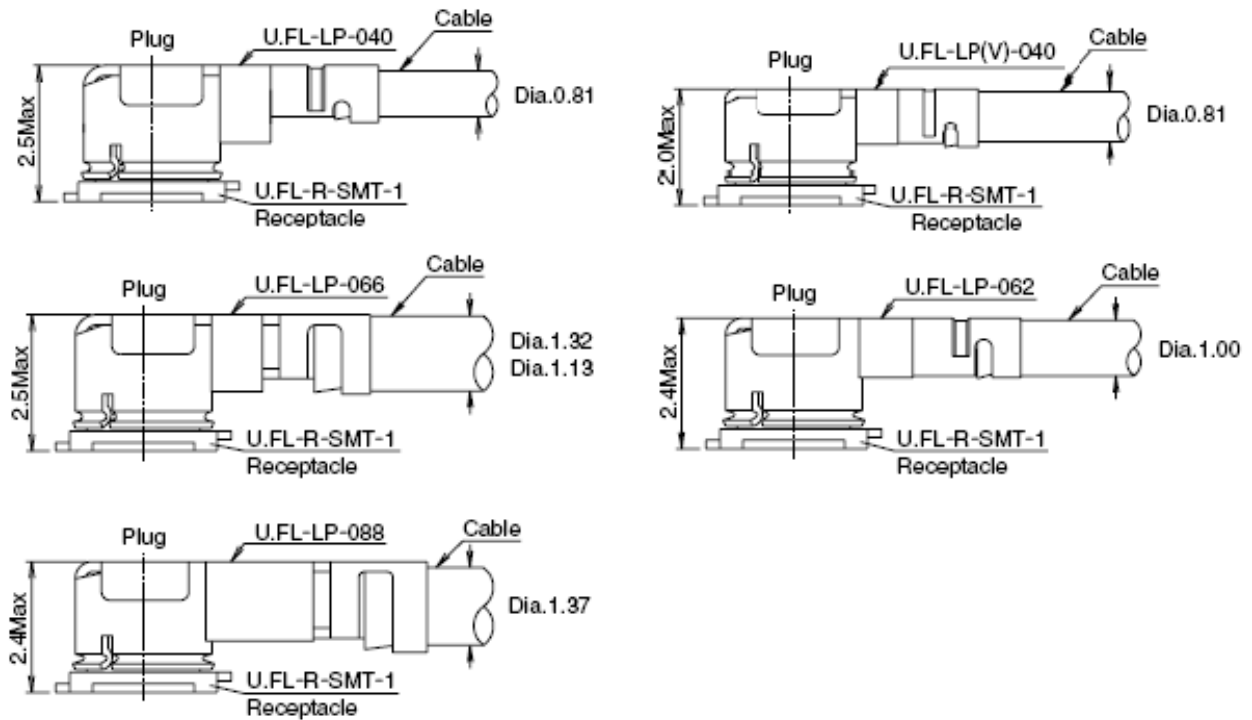


Figure 34: Space Factor of Mated Connectors (Unit: mm)

For more details, visit <http://www.hirose.com>.

6 Electrical Characteristics and Reliability

6.1. Absolute Maximum Ratings

Absolute maximum ratings for power supply and voltage on digital and analog pins of the module are listed in the following table.

Table 33: Absolute Maximum Ratings

Parameter	Min.	Max.	Unit
VBAT_BB	-0.5	6.0	V
VBAT_RF	-0.3	6.0	V
USB_VBUS	1.3	1.8	V
Voltage at Digital Pins	-0.3	2.09	V

6.2. Power Supply Ratings

Table 34: Power Supply Ratings

Parameter	Description	Conditions	Min.	Typ.	Max.	Unit
VBAT	VBAT_BB/ VBAT_RF	The actual input voltages must be kept between the minimum and maximum values.	3.3	3.8	4.3	V
I _{VBAT}	Peak supply current (during transmission slot)	Maximum power control level on EGSM900	-	1.8	2.7	A

USB_VBUS	USB connection detection	1.3	-	1.8	V
----------	--------------------------	-----	---	-----	---

6.3. Operating and Storage Temperatures

Table 35: Operating and Storage Temperatures

Parameter	Min.	Typ.	Max.	Unit
Operating Temperature Range ¹⁰	-35	+25	+75	°C
Extended Temperature Range ¹¹	-40	-	+85	°C
Storage Temperature Range	-40	-	+90	°C

6.4. Power Consumption

Table 36: BG600L-M3 Power Consumption

Description	Conditions	Typ.	Unit
Leakage ¹²	Power-off @ USB/UART disconnected	13.4	μA
PSM ¹³	PSM @ USB/UART disconnected	3.97	μA
Rock Bottom	AT+CFUN=0 @ Sleep Mode	0.6	mA
Sleep Mode (USB disconnected)	LTE Cat M1 DRX = 1.28 s	1.66	mA

¹⁰ Within the operating temperature range, the module meets 3GPP specifications.

¹¹ Within the extended temperature range, the module remains the ability to establish and maintain functions such as SMS, voice, data transmission, etc., without any unrecoverable malfunction. Radio spectrum and radio network are not influenced, while one or more specifications, such as P_{out}, may exceed the specified tolerances of 3GPP. When the temperature returns to the operating temperature range, the module meets 3GPP specifications again.

¹² The power consumption of the module in PSM is much lower than that in power-off mode, due to the following two designs:

- More internal power supplies are powered off in PSM.
- The internal clock frequency is reduced in PSM.

¹³ The module's USB and UART are disconnected and GSM network does not support PSM.

	LTE Cat NB1 DRX = 1.28 s	1.47	mA
	LTE Cat M1 e-I-DRX = 81.92 s @ PTW = 2.56 s, DRX = 1.28 s	0.66	mA
	LTE Cat NB1 e-I-DRX = 81.92 s @ PTW = 2.56 s, DRX = 1.28 s	0.69	mA
Idle Mode (USB disconnected)	LTE Cat M1 DRX = 2.56 s	18.14	mA
	LTE Cat NB1 DRX = 2.56 s	14.33	mA
	LTE Cat M1 e-I-DRX = 81.92 s @ PTW = 2.56 s, DRX = 1.28 s	17.8	mA
	LTE Cat NB1 e-I-DRX = 81.92 s @ PTW = 2.56 s, DRX = 1.28 s	14.15	mA
LTE Cat M1 data transfer (GNSS OFF)	LTE HD-FDD B1 @ 20.82 dBm	183.89	mA
	LTE HD-FDD B2 @ 20.9 dBm	186.91	mA
	LTE HD-FDD B3 @ 20.64 dBm	180.23	mA
	LTE HD-FDD B4 @ 20.85 dBm	182.41	mA
	LTE HD-FDD B5 @ 20.71 dBm	190.88	mA
	LTE HD-FDD B8 @ 20.41 dBm	185.95	mA
	LTE HD-FDD B12 @ 20.74 dBm	184.84	mA
	LTE HD-FDD B13 @ 20.69 dBm	198.6	mA
	LTE HD-FDD B18 @ 20.65 dBm	192.59	mA
	LTE HD-FDD B19 @ 20.68dBm	192.27	mA
	LTE HD-FDD B20 @ 20.4 dBm	191.52	mA
	LTE HD-FDD B25 @ 20.54 dBm	183.77	mA
	LTE HD-FDD B26 @ 20.73 dBm	189.34	mA
	LTE HD-FDD B27 @ 20.63 dBm	193.68	mA

	LTE HD-FDD B28A @ 20.69 dBm	184.34	mA
	LTE HD-FDD B28B @ 20.76 dBm	188.58	mA
	LTE HD-FDD B66 @ 20.95 dBm	183.03	mA
	LTE HD-FDD B85 @ 20.81 dBm	182.73	mA
LTE Cat NB1 data transfer (GNSS OFF)	LTE HD-FDD B1 @ 20.85 dBm	145.15	mA
	LTE HD-FDD B2 @ 20.75 dBm	147.67	mA
	LTE HD-FDD B3 @ 20.92 dBm	145.3	mA
	LTE HD-FDD B4 @ 21.09 dBm	146.31	mA
	LTE HD-FDD B5 @ 20.7 dBm	158.21	mA
	LTE HD-FDD B8 @ 20.56 dBm	152.29	mA
	LTE HD-FDD B12 @ 20.6 dBm	147.8	mA
	LTE HD-FDD B13 @ 20.81 dBm	163.15	mA
	LTE HD-FDD B18 @ 20.68 dBm	156.46	mA
	LTE HD-FDD B19 @ 20.56 dBm	155.17	mA
	LTE HD-FDD B20 @ 20.49 dBm	155.57	mA
	LTE HD-FDD B25 @ 20.78 dBm	147.64	mA
	LTE HD-FDD B28 @ 20.76 dBm	152.18	mA
	LTE HD-FDD B66 @ 20.89 dBm	145.63	mA
	LTE HD-FDD B71 @ 21.08 dBm	142.02	mA
	LTE HD-FDD B85 @ 20.73 dBm	146.11	mA
GPRS data transfer (GNSS OFF)	GSM850 4UL/1DL @ 30 dBm	598	mA
	GSM850 3UL/2DL @ 31 dBm	526	mA
	GSM850 2UL/3DL @ 33 dBm	434	mA
	GSM850 1UL/4DL @ 33 dBm	283	mA
	EGSM900 4UL/1DL @ 30 dBm	621	mA

	EGSM900 3UL/2DL @ 32 dBm	543	mA
	EGSM900 2UL/3DL @ 33 dBm	445	mA
	EGSM900 1UL/4DL @ 33 dBm	289	mA
	DCS1800 4UL/1DL @ 27 dBm	442	mA
	DCS1800 3UL/2DL @ 28 dBm	368	mA
	DCS1800 2UL/3DL @ 30 dBm	306	mA
	DCS1800 1UL/4DL @ 31 dBm	222	mA
	PCS1900 4UL/1DL @ 27 dBm	456	mA
	PCS1900 3UL/2DL @ 28 dBm	365	mA
	PCS1900 2UL/3DL @ 29 dBm	302	mA
	PCS1900 1UL/4DL @ 31 dBm	220	mA
EDGE data transfer (GNSS OFF)	GSM850 4UL/1DL @ 23 dBm	525	mA
	GSM850 3UL/2DL @ 24 dBm	424	mA
	GSM850 2UL/3DL @ 26 dBm	325	mA
	GSM850 1UL/4DL @ 26 dBm	216	mA
	EGSM900 4UL/1DL @ 23 dBm	527	mA
	EGSM900 3UL/2DL @ 24 dBm	425	mA
	EGSM900 2UL/3DL @ 26 dBm	329	mA
	EGSM900 1UL/4DL @ 27 dBm	217	mA
	DCS1800 4UL/1DL @ 22 dBm	461	mA
	DCS1800 3UL/2DL @ 23 dBm	373	mA
	DCS1800 2UL/3DL @ 25 dBm	295	mA
	DCS1800 1UL/4DL @ 26 dBm	210	mA
	PCS1900 4UL/1DL @ 22 dBm	462	mA
	PCS1900 3UL/2DL @ 23 dBm	370	mA

PCS1900 2UL/3DL @ 25 dBm	286	mA
PCS1900 1UL/4DL @ 26 dBm	196	mA

Table 37: GNSS Power Consumption (3.8 V Power Supply, Room Temperature)

Description	Conditions	Typ.	Unit
Acquisition (AT+CFUN=0)	Cold start @ Instrument	66.51	mA
	Hot start @ Instrument	65.9	mA
	Warm start @ Instrument	66.73	mA
	Lost state @ Instrument	66.89	mA
Tracking (AT+CFUN=0)	Instrument Environment @ Passive Antenna	20.8	mA
	Open Sky @ Real network, Passive Antenna	22.74	mA
	Open Sky @ Real network, Active Antenna	23.77	mA

6.5. Tx Power

Table 38: BG600L-M3 Tx Power

Frequency	Max.	Min.
LTE HD-FDD B1/B2/B3/B4/B5/B8/B12/B13/ B18/B19/B20/B25/B26 ¹⁴ /B27 ¹⁴ /B28/B66/B71 ¹⁵ /B85	21 dBm +1.7/-3 dB	< -39 dBm
GSM850/EGSM900	33 dBm ±2 dB	5 dBm ±5 dB
DCS1800/PCS1900	30 dBm ±2 dB	0 dBm ±5 dB
GSM850/EGSM900 (8-PSK)	27 dBm ±3 dB	5 dBm ±5 dB
DCS1800/PCS1900 (8-PSK)	26 dBm ±3 dB	0 dBm ±5 dB

¹⁴ LTE HD-FDD B26 and B27 are supported by LTE Cat M1 only.

¹⁵ LTE HD-FDD B71 is supported by LTE Cat NB2 only.

6.6. Rx Sensitivity

Table 39: BG600L-M3 Conducted Rx Sensitivity (25 °C, 3.8 V)

Mode	Band	Primary	Diversity	Rx Sensitivity (dBm)	
				Cat M1/3GPP	Cat NB2 ¹⁶ / 3GPP
LTE	LTE HD-FDD B1	Supported	Not Supported	-105 /-102.3	-115/-107.5
	LTE HD-FDD B2			-107/-100.3	-115/-107.5
	LTE HD-FDD B3			-104.8/-99.3	-115/-107.5
	LTE HD-FDD B4			-105.6/-102.3	-115/-107.5
	LTE HD-FDD B5			-105/-100.8	-115/-107.5
	LTE HD-FDD B8			-106/-99.8	-115/-107.5
	LTE HD-FDD B12			-105.5/-99.3	-115/-107.5
	LTE HD-FDD B13			-105.8/-99.3	-115/-107.5
	LTE HD-FDD B18			-106/-102.3	-115/-107.5
	LTE HD-FDD B19			-106/-102.3	-115/-107.5
	LTE HD-FDD B20			-105/-99.8	-115/-107.5
	LTE HD-FDD B25			-108/-100.3	-114/-107.5
	LTE HD-FDD B26			-106/-100.3	Not Supported
	LTE HD-FDD B27			-106/-100.8	Not Supported
	LTE HD-FDD B28			-107/-100.8	-115/-107.5
	LTE HD-FDD B66			-106/-101.8	-115/-107.5
	LTE HD-FDD B71			Not Supported	-115/-107.5
	LTE HD-FDD B85			-106/-99.3	-115/-107.5
Mode	Band	Primary	Diversity	Rx Sensitivity (dBm)	

¹⁶ 3GPP has made no demand for LTE Cat NB Rx Sensitivity repetition.

GSM/3GPP				
GSM	GSM850/EGSM900	Supported	Not Supported	-107/-102
	DCS1800/PCS1900			-107/-102

6.7. ESD Protection

Static electricity occurs naturally and it may damage the module. Therefore, applying proper ESD countermeasures and handling methods is imperative. For example, wear anti-static gloves during the development, production, assembly and testing of the module; add ESD protection components to the ESD sensitive interfaces and points in the product design.

Table 40: Electrostatic Discharge Characteristics (25 °C, 45 % Relative Humidity)

Tested Interfaces	Contact Discharge	Air Discharge	Unit
VBAT, GND	±6	±8	kV
Main/GNSS Antenna Interfaces	±5	±6	kV

7 Mechanical Information

This chapter describes the mechanical dimensions of the module. All dimensions are measured in millimeter (mm), and the dimensional tolerances are ± 0.2 mm unless otherwise specified.

7.1. Mechanical Dimensions

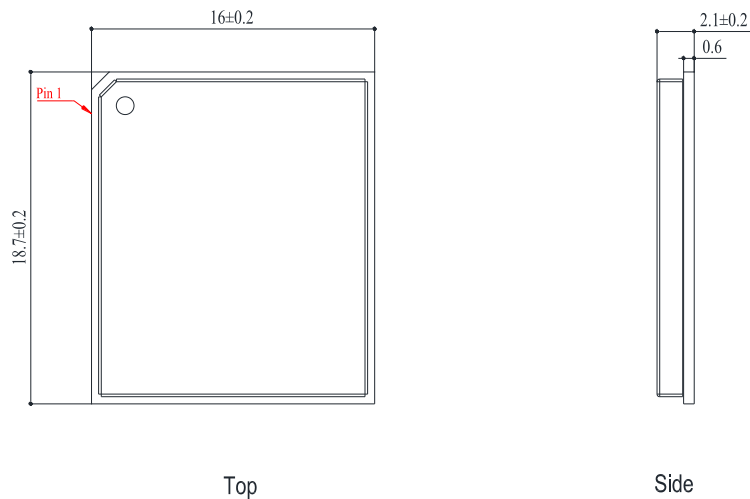


Figure 35: Module Top and Side Dimensions

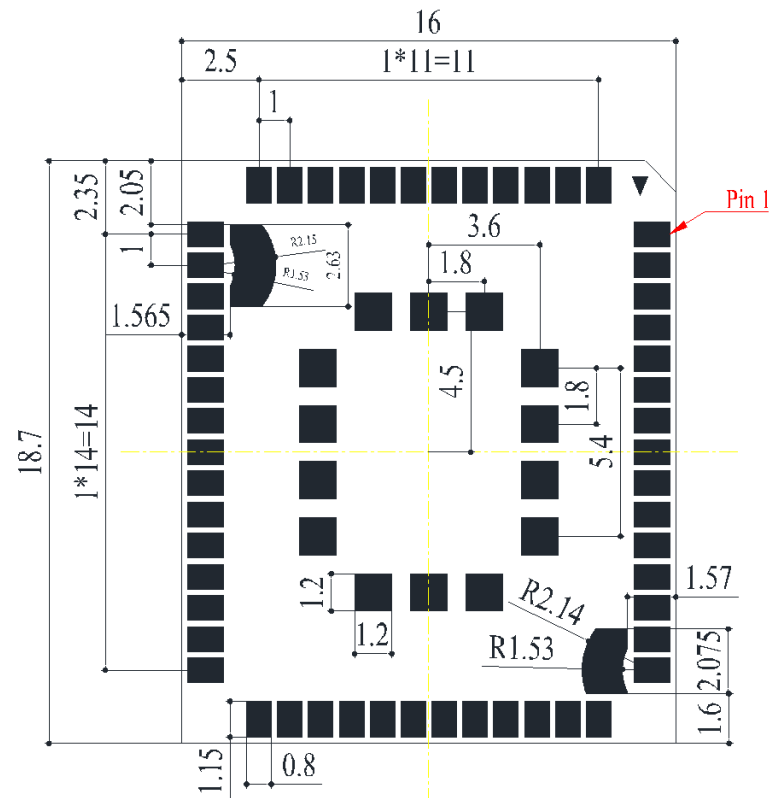


Figure 36: Module Bottom Dimensions (Bottom View)

NOTE

The package warpage level of the module conforms to *JEITA ED-7306* standard.

7.2. Recommended Footprint

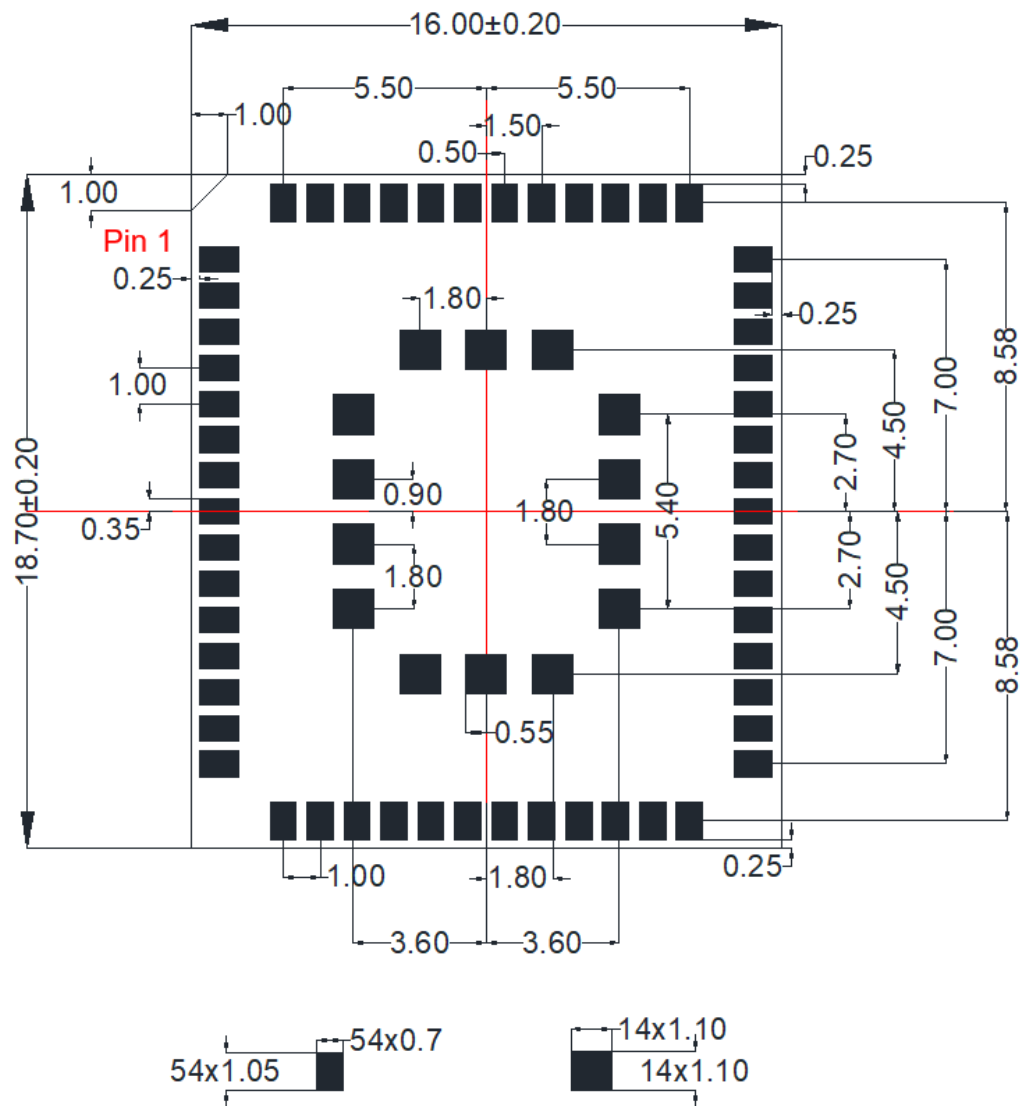


Figure 37: Recommended Footprint (Top View)

NOTE

1. For easy maintenance of the module, keep a distance of about 3 mm between the module and other components on the motherboard.
2. All reserved pins must be kept open.

7.3. Top and Bottom Views

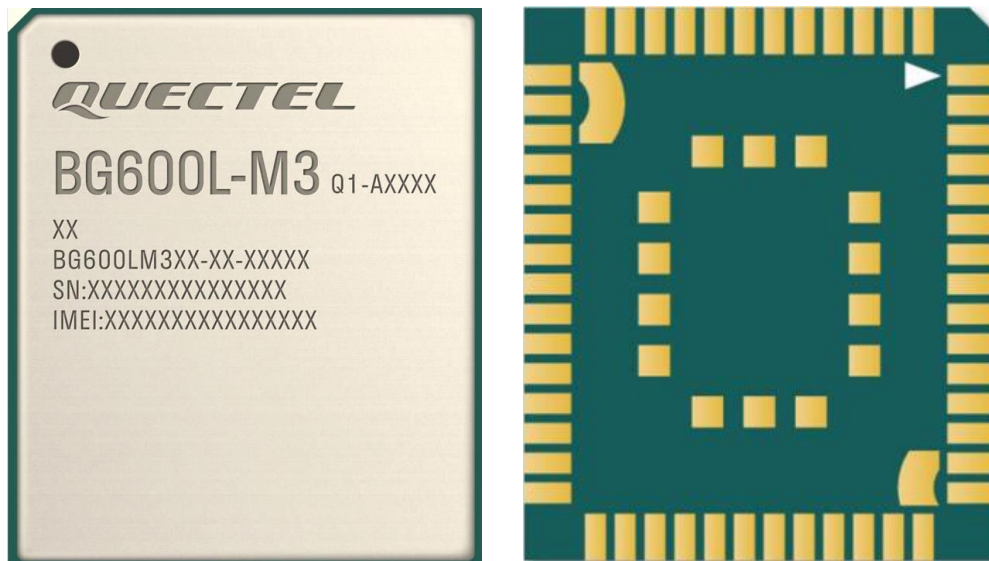


Figure 38: Top and Bottom Views

NOTE

Images above are for illustration purpose only and may differ from the actual module. For authentic appearance and label, please refer to the module received from Quectel.

8 Storage, Manufacturing and Packaging

8.1. Storage Conditions

The module is provided with vacuum-sealed packaging. MSL of the module is rated as 3. The storage requirements are shown below.

1. Recommended Storage Condition: the temperature should be 23 ± 5 °C and the relative humidity should be 35–60 %.
2. Shelf life (in a vacuum-sealed packaging): 12 months in Recommended Storage Condition.
3. Floor life: 168 hours ¹⁷ in a factory where the temperature is 23 ± 5 °C and relative humidity is below 60 %. After the vacuum-sealed packaging is removed, the module must be processed in reflow soldering or other high-temperature operations within 168 hours. Otherwise, the module should be stored in an environment where the relative humidity is less than 10 % (e.g., a dry cabinet).
4. The module should be pre-baked to avoid blistering, cracks and inner-layer separation in PCB under the following circumstances:
 - The module is not stored in Recommended Storage Condition;
 - Violation of the third requirement mentioned above;
 - Vacuum-sealed packaging is broken, or the packaging has been removed for over 24 hours;
 - Before module repairing.
5. If needed, the pre-baking should follow the requirements below:
 - The module should be baked for 8 hours at 120 ± 5 °C;
 - The module must be soldered to PCB within 24 hours after the baking, otherwise it should be put in a dry environment such as in a dry cabinet.

¹⁷ This floor life is only applicable when the environment conforms to *IPC/JEDEC J-STD-033*. It is recommended to start the solder reflow process within 24 hours after the package is removed if the temperature and moisture do not conform to, or are not sure to conform to *IPC/JEDEC J-STD-033*. And do not remove the packages of tremendous modules if they are not ready for soldering.

NOTE

1. To avoid blistering, layer separation and other soldering issues, extended exposure of the module to the air is forbidden.
2. Take out the module from the package and put it on high-temperature-resistant fixtures before baking. If shorter baking time is desired, see *IPC/JEDEC J-STD-033* for the baking procedure.
3. Pay attention to ESD protection, such as wearing anti-static gloves, when touching the modules.

8.2. Manufacturing and Soldering

Push the squeegee to apply the solder paste on the surface of stencil, thus making the paste fill the stencil openings and then penetrate to the PCB. Apply proper force on the squeegee to produce a clean stencil surface on a single pass. To guarantee module soldering quality, the thickness of stencil for the module is recommended to be 0.13–0.15 mm. For more details, see **document [6]**.

The peak reflow temperature should be 235–246 °C, with 246 °C as the absolute maximum reflow temperature. To avoid damage to the module caused by repeated heating, it is strongly recommended that the module should be mounted only after reflow soldering for the other side of PCB has been completed. The recommended reflow soldering thermal profile (lead-free reflow soldering) and related parameters are shown below.

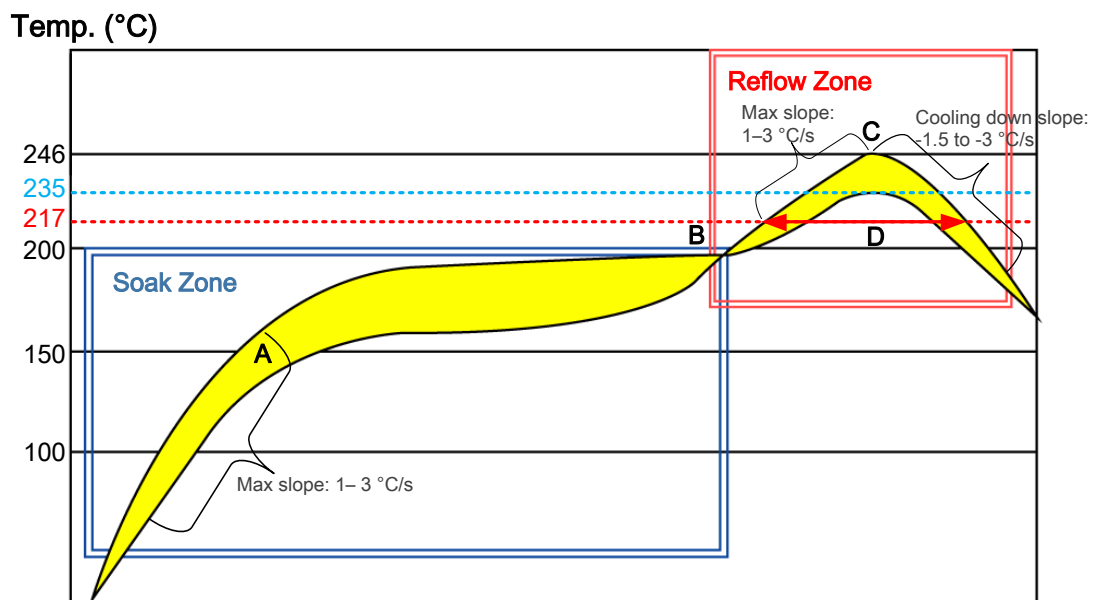


Figure 39: Recommended Reflow Soldering Thermal Profile

Table 41: Recommended Thermal Profile Parameters

Factor	Recommendation
Soak Zone	
Max slope	1–3 °C/s
Soak time (between A and B: 150 °C and 200 °C)	70–120 s
Reflow Zone	
Max slope	1–3 °C/s
Reflow time (D: over 217 °C)	40–70 s
Max temperature	235–246 °C
Cooling down slope	-1.5 to -3 °C/s
Reflow Cycle	
Max. reflow cycle	1

NOTE

1. If a conformal coating is necessary for the module, do NOT use any coating material that may chemically react with the PCB or shielding cover, and prevent the coating material from flowing into the module.
2. Avoid using ultrasonic technology for module cleaning since it can damage crystals inside the module. Due to the complexity of the SMT process, please contact Quectel Technical Supports in advance for any situation that you are not sure about, or any process (e.g. selective soldering, ultrasonic soldering) that is not mentioned in **document [6]**.

8.3. Packaging Specifications

This chapter describes only the key parameters and process of packaging. All figures below are for reference only. The appearance and structure of the packaging materials are subject to the actual delivery.

The module adopts carrier tape packaging and details are as follow:

8.3.1. Carrier Tape

Dimension details are as follow:

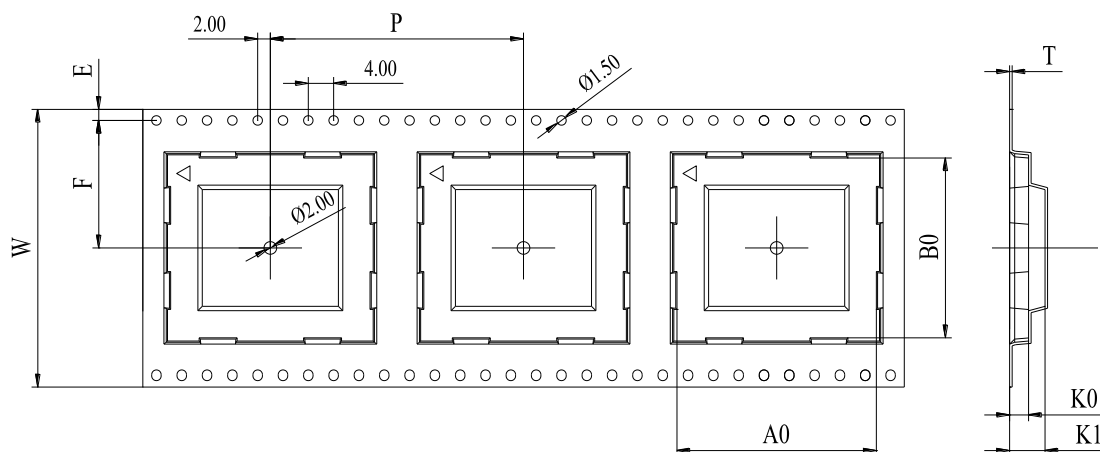


Figure 40: Carrier Tape Dimension Drawing

Table 42: Carrier Tape Dimension Table (Unit: mm)

W	P	T	A0	B0	K0	K1	F	E
32	24	0.4	16.4	19.0	2.9	7.9	14.2	1.75

8.3.2. Plastic Reel


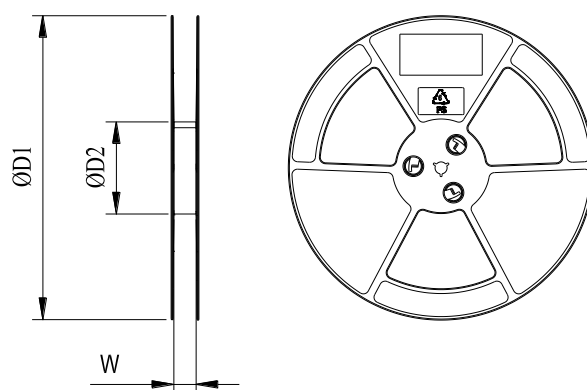


Figure 41: Plastic Reel Dimension Drawing

Table 43: Plastic Reel Dimension Table (Unit: mm)



øD1	øD2	W
330	100	32.5

8.3.3. Packaging Process

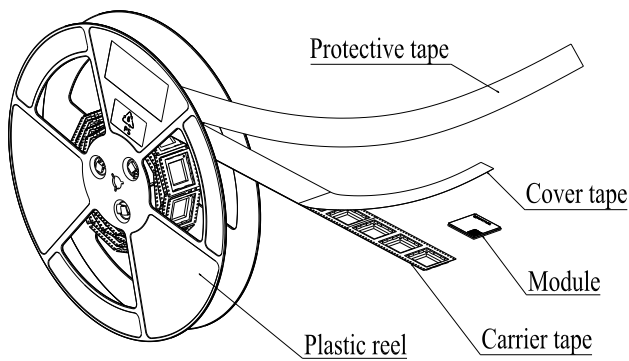

Place the module into the carrier tape and use the cover tape to cover it; then wind the heat-sealed carrier tape to the plastic reel and use the protective tape for protection. 1 plastic reel can load 250 modules.

Place the packaged plastic reel, 1 humidity indicator card and 1 desiccant bag into a vacuum bag, vacuumize it.

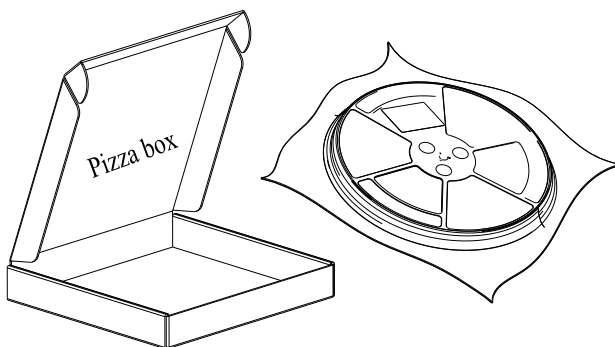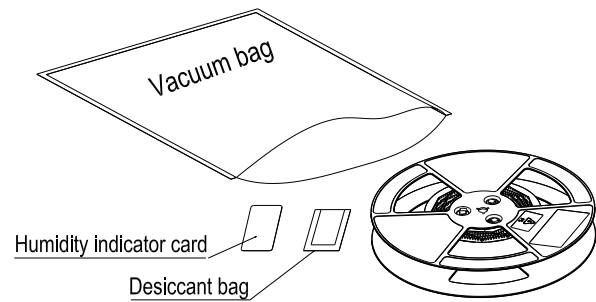

Place the vacuum-packed plastic reel into the pizza box.

Put 4 packaged pizza boxes into 1 carton box and seal it. 1 cartoon box can pack 1000 modules.

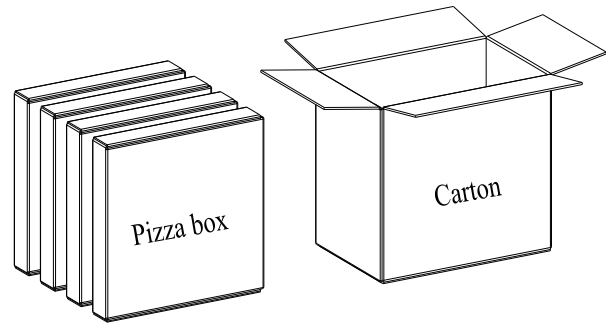


Figure 42: Packaging Process

9 Appendix References

Table 44: Related Documents

Document Name
[1] Quectel_BG95&BG77&BG600L_Series_GNSS_Application_Note
[2] Quectel_UMTS<E_EVB_User_Guide
[3] Quectel_BG95&BG77&BG600L_Series_AT_Commands_Manual
[4] Quectel_BG95&BG77&BG600L_Series_QCFG_AT_Commands_Manual
[5] Quectel_RF_Layout_Application_Note
[6] Quectel_Module_Secondary_SMT_Application_Note

Table 45: Terms and Abbreviations

Abbreviation	Description
ADC	Analog-to-Digital Converter
bps	bit(s) per second
CHAP	Challenge Handshake Authentication Protocol
CS	Coding Scheme
CTS	Clear To Send
DFOTA	Delta Firmware Upgrade Over The Air
DL	Downlink
DTX	Discontinuous Transmission
e-I-DRX	Extended Idle Mode Discontinuous Reception
EPC	Evolved Packet Core

ESD	Electrostatic Discharge
FDD	Frequency Division Duplex
FR	Full Rate
GMSK	Gaussian Minimum Shift Keying
GSM	Global System for Mobile Communications
HD-FDD	Half-duplex FDD
HSS	Home Subscriber Server
I2C	Inter-Integrated Circuit
I/O	Input/Output
LED	Light Emitting Diode
LNA	Low Noise Amplifier
LTE	Long Term Evolution
MO	Mobile Originated
MS	Mobile Station (GSM engine)
MT	Mobile Terminated
PAP	Password Authentication Protocol
PCB	Printed Circuit Board
PDN	Packet Data network
PDU	Protocol Data Unit
PPP	Point-to-Point Protocol
PSM	Power Saving Mode
RF	Radio Frequency
RHCP	Right Hand Circularly Polarized
Rx	Receive
SISO	Single Input Single Output

SMS	Short Message Service
TAU	Tracking Area Update
TCP	Transmission Control Protocol
TDM	Time-Division Multiplexing
TVS	Transient Voltage Suppressor
UL	Uplink
UE	User Equipment
URC	Unsolicited Result Code
(U)SIM	(Universal) Subscriber Identity Module
V _{max}	Maximum Voltage
V _{nom}	Nominal Voltage
V _{min}	Minimum Voltage
V _{IHmax}	Maximum High-level Input Voltage
V _{IHmin}	Minimum High-level Input Voltage
V _{ILmax}	Maximum Low-level Input Voltage
V _{ILmin}	Minimum Low-level Input Voltage
V _{imax}	Absolute Maximum Input Voltage
V _{imin}	Absolute Minimum Input Voltage
V _{OHmax}	Maximum High-level Output Voltage
V _{OHmin}	Minimum High-level Output Voltage
V _{OLmax}	Maximum Low-level Output Voltage
V _{OLmin}	Minimum Low-level Output Voltage
VSWR	Voltage Standing Wave Ratio
WWAN	Wireless Wide Area Network