

PN5190

Instruction layer

Rev. 3.6 — 11 January 2023

Product data sheet addendum

Document information

Information	Content
Keywords	PN5190, NFC, NFC frontend, controller, Instruction layer
Abstract	<p>This document describes the instruction layer commands and responses to work from a host controller, for evaluating the operation of NXP PN5190 NFC frontend controller. PN5190 is a next generation NFC frontend controller.</p> <p>The scope of this document is to describe the interface commands to work with PN5190 NFC frontend controller. For more information on the operation of PN5190 NFC frontend controller, refer to the data sheet and its complementary information.</p>



Revision history

Revision history

Rev	Date	Description
3.6	20230111	Enhanced Check Integrity response description in Section 5.6.6
3.5	20221104	Section 4.4.6.3 "Event" : added
3.4	20220701	<ul style="list-style-type: none">Added command CONFIGURE_MULTIPLE_TESTBUS_DIGITAL in Table 1Updated Section 4.9.2.2
3.3	20220329	Hardware description improved in Section 4.12.2.1 "Command" and Section 4.12.2.2 "Response"
3.2	20210910	Firmware version numbers updated from 2.1 to 2.01 and 2.3 to 2.03
3.1	20210527	RETRIEVE_RF_FELICA_EMD_DATA command description added
3.0	20210118	First official released version

1 Introduction

1.1 Introduction

This document describes the PN5190 Host Interface and the API. The physical host interface used in the documentation is SPI. SPI physical characteristic is not considered in the document.

Frame separation and flow control are part of this document.

1.1.1 Scope

The document describes the logical layer and all instruction code which are relevant for the customer.

The document is based on the PN5190 system architecture where the physical layer SPI is described.

1.1.2 Not in Scope

1.2 Host Communication Overview

PN5190 has two main modes of operation to communicate with the host controller.

1. TLV-command response-based communication
2. HDLL-based communication used when device is triggered to enter the “download mode”, to update its firmware.


The description of the transport layer in the next chapters is limited to TLV-based command-response communication. For further information on the HDLL-based communications, refer to [Section 5](#)

2 Logical Layer

2.1 Frame definition

A SPI frame starts with the falling edge of NSS and ends with the rising edge of NSS. SPI is per physical definition full duplex but PN5190 uses SPI in a half-duplex mode. SPI mode is limited to CPOL 0 and CPHA 0 with a max clock speed as specified in [Section 10](#). Every SPI frame is composed of a 1-byte header and n-bytes of body.

2.2 Flow Indication

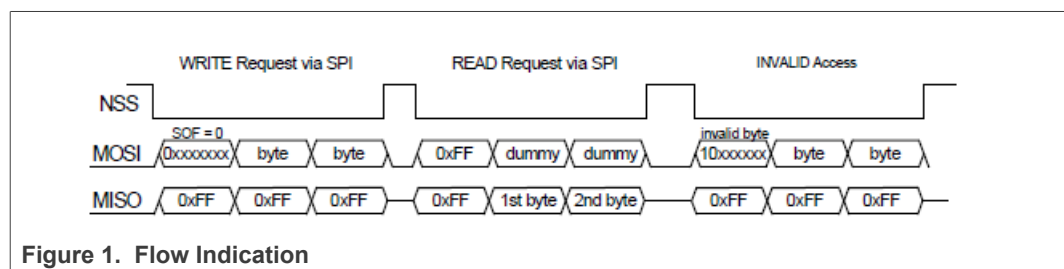

The HOST always sends as a first byte the flow indication byte whether it wants to write or read data from the PN5190.

In case of a read request and no data is available, the response contains 0xFF.

The data after the flow indication byte is one or several messages.

For every NSS assertion, the first byte is always a HEADER (flow indication byte), it can be either 0x7F/0xFF with respect to write/read operation.


2.3 Message Type

A host controller shall communicate with PN5190 using messages which are transported within SPI frames.

There are three different message types:

- Command
- Response
- Event

The communication diagram below shows the allowed directions for the different message types.

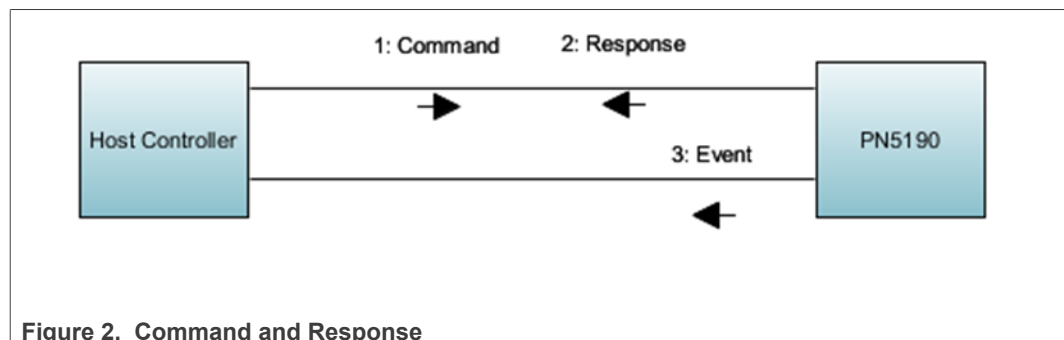


Commands are only sent from Host Controller to PN5190.

Responses and Events are only sent from PN5190 to Host Controller.

2.3.1 Allowed sequences and rules

- A Command is always acknowledged by a response or an event or both
- Host Controller is not allowed to send another command before receiving a response to a previous command, except in case of abort scenarios using SWITCH_MODE_NORMAL command with [Section 4.4.5.2](#).
- Events may be sent asynchronously at any time (NOT interleaved within a command/response pair)
- EVENT messages are never combined with the RESPONSE messages within one frame.


The diagram below shows the allowed sequences:

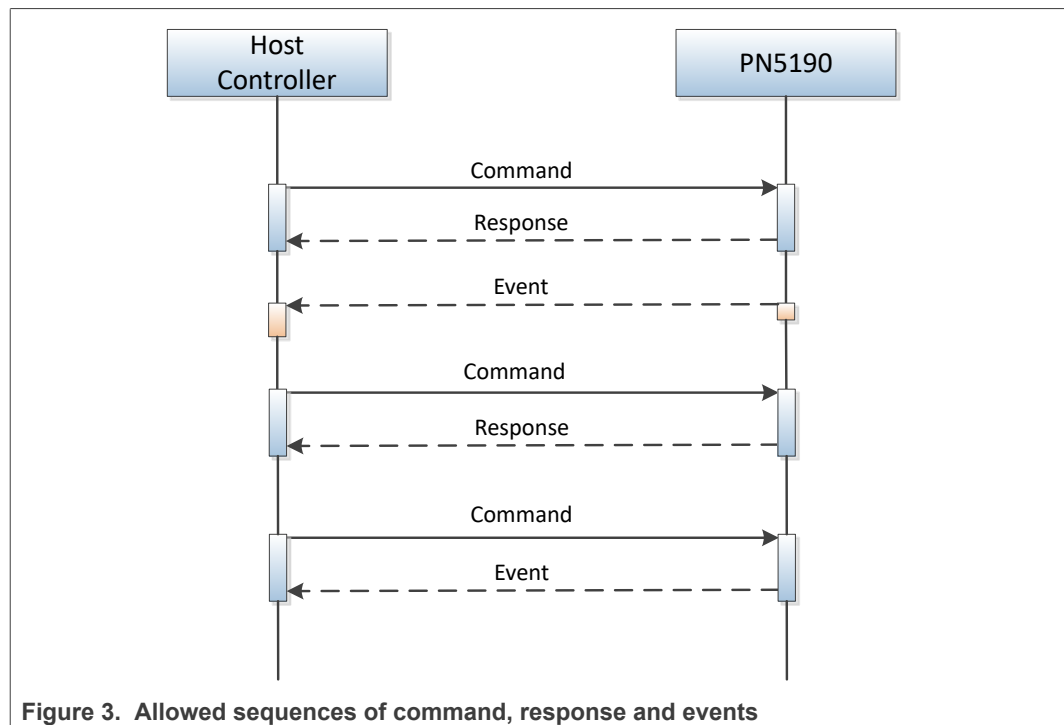


Note: The availability of a message (either RESPONSE or EVENT) is signaled with the IRQ going high from low. IRQ will stay high until all the response or event frame is read. Only after IRQ signal is low, the host can send the next command.

2.4 Message Format

Each message is coded in a TLV structure with n-bytes payload for each message except for SWITCH_MODE_NORMAL command.

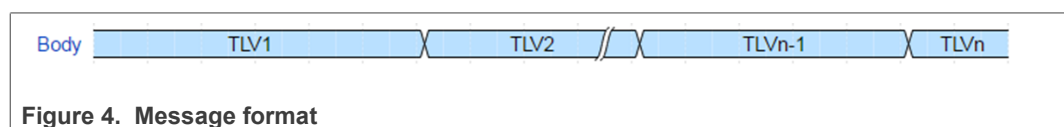

Each TLV is composed of:

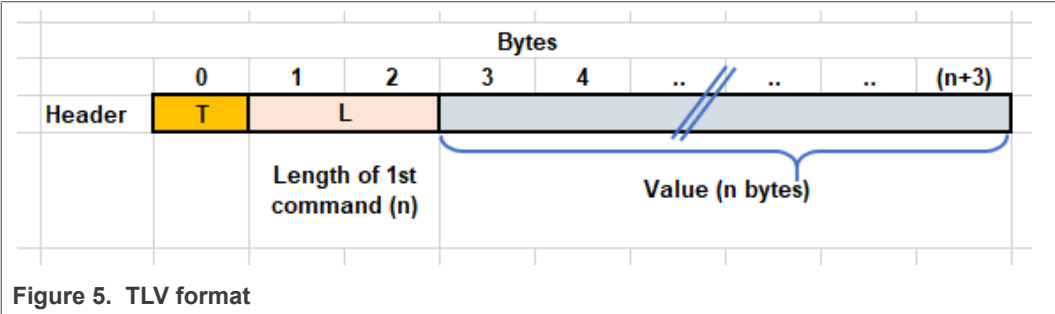

Type (T) => 1 byte
Bit[7] Message Type
0: COMMAND or RESPONSE message
1: EVENT message
Bit[6:0]: Instruction Code


Length (L) => 2 bytes (should be in big endian format)

Value (V) => N bytes of value/data of the TLV (Command Parameters / Response data) based on Length field (Big endian format)


2.4.1 Split Frame

COMMAND message must be sent in one SPI frame.

RESPONSE and EVENT messages can be read in multiple SPI frames, e.g. to read out the length byte.

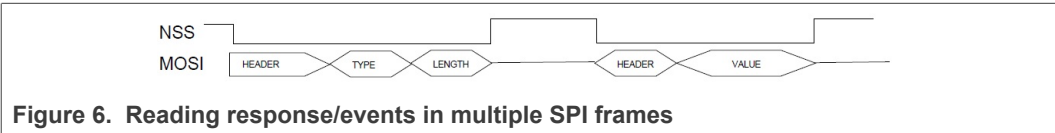

RESPONSE or EVENT messages can be read in single SPI frame but delayed by NO-CLOCK in between, e.g., to read out the length byte.

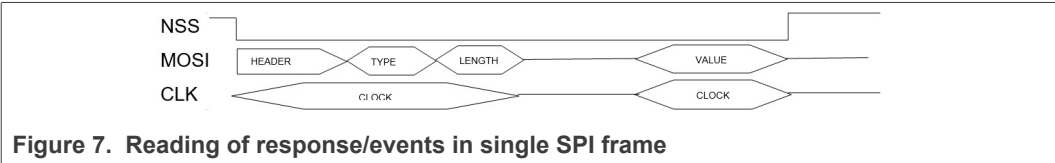

3 Normal Operation Instructions

3.1 CMD/RSP List Overview

Table 1. PN5190 Command/Response List

Command Code	Command Name
0x00	WRITE_REGISTER
0x01	WRITE_REGISTER_OR_MASK
0x02	WRITE_REGISTER_AND_MASK
0x03	WRITE_REGISTER_MULTIPLE
0x04	READ_REGISTER
0x05	READ_REGISTER_MULTIPLE
0x06	WRITE_E2PROM
0x07	READ_E2PROM
0x08	TRANSMIT_RF_DATA
0x09	RETRIEVE_RF_DATA
0x0A	EXCHANGE_RF_DATA
0x0B	MFC_AUTHENTICATE
0x0C	EPC_GEN2_INVENTORY
0x0D	LOAD_RF_CONFIGURATION
0x0E	UPDATE_RF_CONFIGURATION
0x0F	GET_RF_CONFIGURATION
0x10	RF_ON
0x11	RF_OFF
0x12	CONFIGURE_TESTBUS_DIGITAL
0x13	CONFIGURE_TESTBUS_ANALOG
0x14	CTS_ENABLE
0x15	CTS_CONFIGURE
0x16	CTS_RETRIEVE_LOG
0x17-0x18	RFU
0x19	up to FW 2.01: RFU
	from FW2.03 onwards: RETRIEVE_RF_FELICA_EMD_DATA
0x1A	RECEIVE_RF_DATA
0x1B-0x1F	RFU
0x20	SWITCH_MODE_NORMAL
0x21	SWITCH_MODE_AUTOCOLL
0x22	SWITCH_MODE_STANDBY
0x23	SWITCH_MODE_LPCD

Table 1. PN5190 Command/Response List...continued

Command Code	Command Name
0x24	RFU
0x25	SWITCH_MODE_DOWNLOAD
0x26	GET_DIEID
0x27	GET_VERSION
0x28	RFU
0x29	RFU
0x2A	up to FW 2.03: RFU
	from FW2.05 onwards: CONFIGURE_MULTIPLE_TESTBUS_DIGITAL
0x2B-0x3F	RFU
0x40	ANTENNA_SELF_TEST (Not Supported)
0x41	PRBS_TEST
0x42-0x4F	RFU

3.2 Response status values

Following are the response status values, that are returned as part of the response from PN5190 after the command is operationalized.

Table 2. PN5190 response status values

Response Status	Response status Value	Description
PN5190_STATUS_SUCCESS	0x00	Indicates that operation completed successfully
PN5190_STATUS_TIMEOUT	0x01	Indicates that the operation of the command resulted in timeout
PN5190_STATUS_INTEGRITY_ERROR	0x02	Indicates that the operation of the command resulted in RF data integrity error
PN5190_STATUS_RF_COLLISION_ERROR	0x03	Indicates that the operation of the command resulted in RF collision error
PN5190_STATUS_RFU1	0x04	Reserved
PN5190_STATUS_INVALID_COMMAND	0x05	Indicates that the given command is invalid/not implemented
PN5190_STATUS_RFU2	0x06	Reserved
PN5190_STATUS_AUTH_ERROR	0x07	Indicates that MFC authentication failed (permission denied)
PN5190_STATUS_MEMORY_ERROR	0x08	Indicates that the operation of the command resulted in a programming error or internal memory error
PN5190_STATUS_RFU4	0x09	Reserved
PN5190_STATUS_NO_RF_FIELD	0x0A	Indicates that there no or error in internal RF field presence (applicable only if initiator/reader mode)
PN5190_STATUS_RFU5	0x0B	Reserved
PN5190_STATUS_SYNTAX_ERROR	0x0C	Indicates that invalid command frame length is received

Table 2. PN5190 response status values...continued

Response Status	Response status Value	Description
PN5190_STATUS_RESOURCE_ERROR	0x0D	Indicates that an internal resource error occurred
PN5190_STATUS_RFU6	0x0E	Reserved
PN5190_STATUS_RFU7	0x0F	Reserved
PN5190_STATUS_NO_EXTERNAL_RF_FIELD	0x10	Indicates that no external RF field is present during the execution of the command (Applicable only in card/target mode)
PN5190_STATUS_RX_TIMEOUT	0x11	Indicates that data is not received after RFExchange is initiated and RX is timed out.
PN5190_STATUS_USER_CANCELLED	0x12	Indicates that the present command in-progress is aborted
PN5190_STATUS_PREVENT_STANDBY	0x13	Indicates that PN5190 is prevented to go into standby mode
PN5190_STATUS_RFU9	0x14	Reserved
PN5190_STATUS_CLOCK_ERROR	0x15	Indicates that clock to the CLIF did not start
PN5190_STATUS_RFU10	0x16	Reserved
PN5190_STATUS_PRBS_ERROR	0x17	Indicates that the PRBS command returned an error
PN5190_STATUS_INSTR_ERROR	0x18	Indicates that operation of the command is failed (it may include, the error in instruction parameters, syntax error, error in operation itself, pre-requirements for the instruction is not met etc....)
PN5190_STATUS_ACCESS_DENIED	0x19	Indicates that access to internal memory is denied
PN5190_STATUS_TX_FAILURE	0x1A	Indicates that TX over RF is failed
PN5190_STATUS_NO_ANTENNA	0x1B	Indicates that no antenna connected/present
PN5190_STATUS_TXLDO_ERROR	0x1C	Indicates that there is an error in TXLDO when the VUP is not available and RF is switched ON.
PN5190_STATUS_RFCFG_NOT_APPLIED	0x1D	Indicates that RF configuration is not loaded when RF is switched ON
PN5190_STATUS_TIMEOUT_WITH_EMD_ERROR	0x1E	up to FW 2.01: not expected
		from FW 2.03 onwards: Indicates that during Exchange with LOG ENABLE BIT is set in FeliCa EMD register, FeliCa EMD Error was observed
PN5190_STATUS_INTERNAL_ERROR	0x7F	Indicates that the NVM operation failed
PN5190_STATUS_SUCCSES_CHAINING	0xAF	Indicates that, furthermore data is pending to be read

3.3 Events Overview

There are two ways events are notified to the host.

3.3.1 Normal events over IRQ pin

These events are categories as below:

1. Always enabled – Host is always notified
2. Controlled by Host – Host is notified, if the respective Event Enable bit is set in the register (EVENT_ENABLE (01h)).

Low-level interrupts from the peripheral IPs including the CLIF shall be completely handled within the firmware and host shall be notified only of the events listed in the events section.

Firmware implements two event registers as RAM registers that can be written / Read using [Section 4.1.1](#) / [Section 4.1.5](#) commands.

The register EVENT_ENABLE (01h) => Enable specific/all event notifications.

The register EVENT_STATUS (02h) => Part of the Event message payload.

Events shall be cleared by the host once the event message is read-out by the host.

Events are asynchronous in nature and are notified to the host, if they are enabled within the EVENT_ENABLE register.

Following is the list of events that shall be available to the host as part of event message.

Table 3. PN5190 events (contents of EVENT_STATUS)

Bit - Range		Field ^[1]	Always Enabled (Y/N)
31	12	RFU	NA
11	11	CTS_EVENT ^[2]	N
10	10	IDLE_EVENT	Y
9	9	LPCD_CALIBRATION_DONE_EVENT	Y
8	8	LPCD_EVENT	Y
7	7	AUTOCOLL_EVENT	Y
6	6	TIMER0_EVENT	N
5	5	TX_OVERCURRENT_EVENT	N
4	4	RFON_DET_EVENT ^[2]	N
3	3	RFOFF_DET_EVENT ^[2]	N
2	2	STANDBY_PREV_EVENT	Y
1	1	GENERAL_ERROR_EVENT	Y
0	0	BOOT_EVENT	Y

[1] Note that no two events are clubbed except in case of errors. In case of errors during the operation, functional event (e.g. BOOT_EVENT, AUTOCALL_EVENT etc.) and GENERAL_ERROR_EVENT will be set.

[2] This event will automatically be disabled after it is posted to the host. The host should enable again these events if it wishes to get these events notified to it.

3.3.1.1 Event message formats

The event message format differs depending upon the occurrences of an event and different state of the PN5190.

Host must read tag (T) and length of the message (L) and then read the corresponding number of bytes as value (V) of the events.

In general, the event message (see [Figure 8](#)) contains the EVENT_STATUS as defined in [Table 4](#) and event data corresponds to the respective event bit set in EVENT_STATUS.

Note:

For some events, payload does not exist. For e.g. If `TIMER0_EVENT` is triggered, only `EVENT_STATUS` is provided as part of the event message.

The [Table 4](#) also details out whether the event data is present for the corresponding event in the event message.

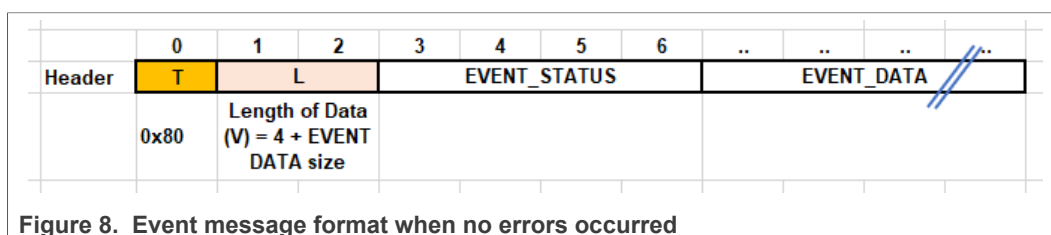


Figure 8. Event message format when no errors occurred

`GENERAL_ERROR_EVENT` may also occur with other events.

In this scenario, the event message (see [Figure 9](#)) contains the `EVENT_STATUS` as defined in [Table 4](#) and `GENERAL_ERROR_STATUS_DATA` as defined in [Table 7](#) and then the event data corresponds to the respective event bit set in `EVENT_STATUS` as defined in [Table 4](#).

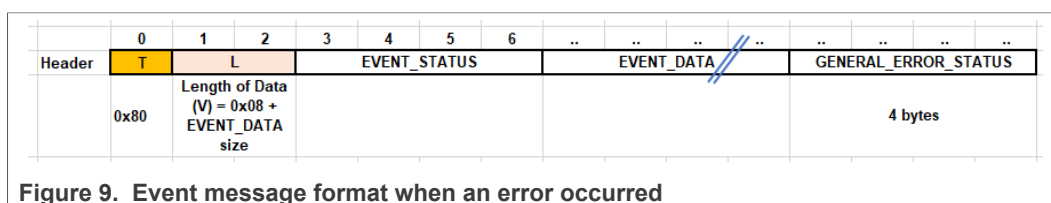


Figure 9. Event message format when an error occurred

Note:

Only after the `BOOT_EVENT` or after `POR`, `STANDBY`, `ULPCD`, the host will be able to work in the normal operation mode by issuing the commands listed above.

In case of aborting an existing running command, only after `IDLE_EVENT`, the host will be able to work in the normal operation mode by issuing the commands listed above.

3.3.1.2 Different EVENT status definitions

3.3.1.2.1 Bit definitions for EVENT_STATUS

Table 4. Definitions for `EVENT_STATUS` bits

Bit (To – From)	Event	Description	Event data of the corresponding event (if any)
31 12	RFU	Reserved	
11 11	CTS_EVENT	This bit is set, when CTS event is generated.	Table 75
10 10	IDLE_EVENT	This bit is set, when the ongoing command is canceled due to issue of <code>SWITCH_MODE_NORMAL</code> command.	No event data
9 9	LPCD_CALIBRATION_DONE_EVENT	This bit is set when the LPCD calibration done event is generated.	Table 9

Table 4. Definitions for EVENT_STATUS bits...continued

Bit (To – From)	Event	Description	Event data of the corresponding event (if any)
8	8 LPCD_EVENT	This bit is set, when the LPCD event is generated.	Table 8
7	7 AUTOCOLL_EVENT	This bit is set, when the AUTOCOLL operation is completed.	Table 43
6	6 TIMER0_EVENT	This bit is set, when the TIMER0 event is occurred.	No event data
5	5 TX_OVERCURRENT_ERROR_EVENT	This bit is set, when the current on the TX driver is higher than the defined threshold in the EEPROM. Upon this condition, the field is automatically switched OFF before the notification to the host. Please refer to Section 3.3.2.2 .	No event data
4	4 RFON_DET_EVENT	This bit is set, when the external RF field is detected.	No event data
3	3 RFOFF_DET_EVENT	This bit is set, when already existing external RF field disappears.	No event data
2	2 STANDBY_PREV_EVENT	This bit is set, when standby is prevented because of prevention conditions exist	Table 6
1	1 GENERAL_ERROR_EVENT	This bit is set, when any general error conditions exist	Table 7
0	0 BOOT_EVENT	This bit is set, when PN5190 is booted with POR/Standby	Table 5

3.3.1.2.2 Bit definitions for BOOT_STATUS_DATA

Table 5. Definitions for BOOT_STATUS_DATA bits

Bit to	Bit From	Boot status	Boot reason due to
31	27	RFU	Reserved
26	26	ULP_STANDBY	Bootup Reason due to exiting from ULP_STANDBY.
25	23	RFU	Reserved
22	22	BOOT_RX_ULPDET	RX ULPDET resulted in boot in ULP-Standby mode
21	21	RFU	Reserved
20	20	BOOT_SPI	Bootup Reason due to SPI_NSS signal being pulled low
19	17	RFU	Reserved
16	16	BOOT_GPIO3	Bootup Reason due to transitioning of GPIO3 from low to high.
15	15	BOOT_GPIO2	Bootup Reason due to transitioning of GPIO2 from low to high.
14	14	BOOT_GPIO1	Bootup Reason due to transitioning of GPIO1 from low to high.
13	13	BOOT_GPIO0	Bootup Reason due to transitioning of GPIO0 from low to high.

Table 5. Definitions for BOOT_STATUS_DATA bits...continued

Bit to	Bit From	Boot status	Boot reason due to
12	12	BOOT_LPDET	Bootup Reason due to external RF field presence during STANDBY/SUSPEND
11	11	RFU	Reserved
10	8	RFU	Reserved
7	7	BOOT_SOFT_RESET	Bootup Reason due to soft reset of IC
6	6	BOOT_VDDIO_LOSS	Bootup Reason due to loss of VDDIO. Please refer to Section 3.3.2.3
5	5	BOOT_VDDIO_START	Bootup Reason if STANDBY entered with VDDIO LOSS. Please refer to Section 3.3.2.3
4	4	BOOT_WUC	Bootup Reason due to wake-up counter elapsed during either STANDBY operation.
3	3	BOOT_TEMP	Bootup Reason due to IC temperature is more than the configured threshold limit. Please refer to Section 3.3.2.1
2	2	BOOT_WDG	Bootup Reason due to Watchdog reset
1	1	RFU	Reserved
0	0	BOOT_POR	Bootup Reason due Power-On-Reset

3.3.1.2.3 Bit definitions for STANDBY_PREV_STATUS_DATA

Table 6. Definitions for STANDBY_PREV_STATUS_DATA bits

Bit to	Bit From	Standby Prevention	Standby prevented due to
31	26	RFU	RESERVED
25	25	RFU	RESERVED
24	24	PREV_TEMP	IC's operating temperature is out of threshold
23	23	RFU	RESERVED
22	22	PREV_HOSTCOMM	Host interface communication
21	21	PREV_SPI	SPI_NSS signal being pulled low
20	18	RFU	RESERVED
17	17	PREV_GPIO3	GPIO3 signal transitioning from low to high
16	16	PREV_GPIO2	GPIO2 signal transitioning from low to high
15	15	PREV_GPIO1	GPIO1 signal transitioning from low to high
14	14	PREV_GPIO0	GPIO0 signal transitioning from low to high
13	13	PREV_WUC	Wake-up counter elapsed
12	12	PREV_LPDET	Low-power detection. Occurs when an external RF signal is detected in the process of going into standby.
11	11	PREV_RX_ULPDET	RX ultra-low power detection. Occurs when RF signal is detected in the process of going to ULP_STANDBY.
10	10	RFU	RESERVED
9	5	RFU	RESERVED

Table 6. Definitions for STANDBY_PREV_STATUS_DATA bits...continued

Bit to	Bit From	Standby Prevention	Standby prevented due to
4	4	RFU	RESERVED
3	3	RFU	RESERVED
2	2	RFU	RESERVED
1	1	RFU	RESERVED
0	0	RFU	RESERVED

3.3.1.2.4 Bit definitions for GENERAL_ERROR_STATUS_DATA

Table 7. Definitions for GENERAL_ERROR_STATUS_DATA bits

Bit to	Bit From	Error status	Description
31	6	RFU	Reserved
5	5	XTAL_START_ERROR	XTAL Start failed during Boot
4	4	SYS_TRIM_RECOVERY_ERROR	Internal system trim memory error occurred, but recovery is failed. System works in downgraded mode.
3	3	SYS_TRIM_RECOVERY_SUCCESS	Internal system trim memory error occurred, and recovery was successful. Host must perform reboot of the PN5190 for the recovery to take effect.
2	2	TXLDO_ERROR	TXLDO error
1	1	CLOCK_ERROR	Clock error
0	0	GPADC_ERROR	ADC error

3.3.1.2.5 Bit definitions for LPCD_STATUS_DATA

Table 8. Definitions for LPCD_STATUS_DATA bytes

Bit to	Bit From	Status bits applicability as per the underlying operation of LPCD or ULPCD			Description for the corresponding bit is set in status byte.
			LPCD	ULPCD	
31	7	RFU			Reserved
6	6	Abort_HIF	Y	N	Aborted due to HIF activity
5	5	CLKDET error	N	Y	Aborted due to CLKDET error occurred
4	4	XTAL Timeout	N	Y	Aborted due to XTAL Timeout occurred
3	3	VDDPA LDO Overcurrent	N	Y	Aborted due to VDDPA LDO overcurrent occurred
2	2	External RF field	Y	Y	Aborted due to external RF field
1	1	GPIO3 Abort	N	Y	Aborted due to GPIO3 level change
0	0	Card Detected	Y	Y	Card is detected

3.3.1.2.6 Bit definitions for LPCD_CALIBRATION_DONE Status data

Table 9. Definitions for LPCD_CALIBRATION_DONE status data bytes for ULPCD

Bit to	Bit From	Status of LPCD_CALIBRATION_DONE event	Description for the corresponding bit is set in status byte.
31	11		Reserved
10	0	Reference value from ULPCD calibration	The measured RSSI value during ULPCD calibration which is used as reference during ULPCD

Table 10. Definitions for LPCD_CALIBRATION_DONE status data bytes for LPCD

Bit to	Bit From	Status of LPCD_CALIBRATION_DONE event	Description for the corresponding bit is set in status byte.
31	16	Channel 1 reference	The measured channel 1 values during LPCD calibration
15	0	Channel 0 reference	The measured channel 0 values during LPCD calibration

3.3.2 Handling of different boot scenarios

The PN5190 IC handles different error conditions related to IC parameters as below.

3.3.2.1 Handling of Over temperature scenario when PN5190 is under operation

Whenever the PN5190 IC's internal temperature is reaching to the threshold value as configured in the EEPROM field `bTempWarning`, the IC enters into the standby. And consequently if EEPROM field `bEnableGpio0OnOverTemp` is configured to raise a notification to the host, then `GPIO0` will be pulled high to notify the IC over temperature.

As and when the IC temperature falls below the threshold value as configured in the EEPROM field `bTempWarning`, the IC will bootup with `BOOT_EVENT` as in [Table 4](#) and `BOOT_TEMP` boot status bit is set as in [Table 5](#) and `GPIO0` will be pulled low.

3.3.2.2 Handling of over-current

If PN5190 IC senses the over-current condition, the IC will switch off RF power and sends the `TX_OVERCURRENT_ERROR_EVENT` as in [Table 4](#).

The duration of the overcurrent condition can be controlled by modifying the EEPROM field `TxldoConfig`.

For information on IC over current threshold, please refer to document [\[2\]](#).

Note:

If there are any other pending events or response, they will be sent to the host.

3.3.2.3 Loss of VDDIO during operation

If PN5190 IC encounters that there is no VDDIO (VDDIO loss), the IC will enter into standby.

IC will boot only when the VDDIO is available, with `BOOT_EVENT` as in [Table 4](#) and `BOOT_VDDIO_START` boot status bit is set as in [Table 5](#).

For information on PN5190 IC static characteristics, please refer to document [\[2\]](#).

3.3.3 Handling of abort scenarios

The PN5190 IC has a support of aborting the present executing commands and the behavior of the PN5190 IC, when such abort command such as [Section 4.4.5.2](#) is sent to PN5190 IC is as shown in [Table 11](#).

Note:

When PN5190 IC is in ULPCD and ULP-Standby mode, it cannot be aborted either by sending a [Section 4.4.5.2](#) OR by starting a SPI transaction (by pulling low on SPI_NSS signal).

Table 11. Expected event response when different commands terminated with [Section 4.4.5.2](#)

Commands	Behavior when Switch Mode Normal command is sent
All commands where low power is not entered	EVENT_STAUS is set to "IDLE_EVENT"
Switch Mode LPCD	EVENT_STATUS is set to "LPCD_EVENT" with "LPCD_STATUS_DATA" indicating status bits as "Abort_HIF"
Switch Mode Standby	EVENT_STAUS is set to "BOOT_EVENT" with "BOOT_STATUS_DATA" indicating bits "BOOT_SPI"
Switch Mode Autocoll(No Autonomous mode, autonomous mode with standby and autonomous mode without standby)	EVENT_STAUS is set to "AUTOCOLL_EVENT" with STATUS_DATA bits indicating command was user canceled.

4 Normal Mode Operation Instruction Details

4.1 Register Manipulation

Instructions of this section are used to access the logical registers of PN5190.

4.1.1 WRITE_REGISTER

This instruction is used to write a 32-bit value (little endian) to a logical register.

4.1.1.1 Conditions

The address of the register must exist, and the register must either have the READ-WRITE or WRITE-ONLY attribute.

4.1.1.2 Command

Table 12. WRITE_REGISTER command value

Write a 32-Bit value to a register.

Payload Field	Length	Value/Description
Register Address	1 Byte	Address of the register.
Value	4 Bytes	32-Bit register value which must be written. (Little endian)

4.1.1.3 Response

Table 13. WRITE_REGISTER response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS
		PN5190_STATUS_INSTR_ERROR

4.1.1.4 Event

There are no events for this command.

4.1.2 WRITE_REGISTER_OR_MASK

This instruction is used to modify the content of register using a logical OR operation. The content of the register is read and a logical OR operation is performed with the provided mask. The modified content is written back to the register.

4.1.2.1 Conditions

The address of the register must exist, and the register must have the READ-WRITE attribute.

4.1.2.2 Command

Table 14. WRITE_REGISTER_OR_MASK command value

Perform a logical OR operation on a register using provided mask.

Payload Field	Length	Value/Description
Register Address	1 Byte	Address of the register.
Mask	4 Bytes	Bitmask used as operand for logical OR operation. (Little endian)

4.1.2.3 Response

Table 15. WRITE_REGISTER_OR_MASK response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS
		PN5190_STATUS_INSTR_ERROR

4.1.2.4 Event

There are no events for this command.

4.1.3 WRITE_REGISTER_AND_MASK

This instruction is used to modify the content of register using a logical AND operation. The content of the register is read and a logical AND operation is performed with the provided mask. The modified content is written back to the register.

4.1.3.1 Conditions

The address of the register must exist, and the register must have the READ-WRITE attribute.

4.1.3.2 Command

Table 16. WRITE_REGISTER_AND_MASK command value

Perform a logical AND operation on a register using provided mask.

Payload Field	Length	Value/Description
Register Address	1 Byte	Address of the register.
Mask	4 Bytes	Bitmask used as operand for logical AND operation. (Little endian)

4.1.3.3 Response

Table 17. WRITE_REGISTER_AND_MASK response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS
		PN5190_STATUS_INSTR_ERROR

4.1.3.4 Event

There are no events for this command.

4.1.4 WRITE_REGISTER_MULTIPLE

This instruction functionality is similar to the [Section 4.1.1](#), [Section 4.1.2](#), [Section 4.1.3](#), with the possibility to combine them. In fact, it takes an array of register-type-value set and performs appropriate action. The type reflects the action which is either write register, logical OR operation on a register or logical AND operation on a register.

4.1.4.1 Conditions

The respective logical address of the register within a set must exist.

The register access attribute must allow execution of required action (type):

- Write action (0x01): READ-WRITE or WRITE-ONLY attribute
- OR mask action (0x02): READ-WRITE attribute
- AND mask action (0x03): READ-WRITE attribute

The size of 'Set' array must be in the range from 1 – 43, inclusive.

Field 'Type' must be in the range of 1 – 3, inclusive

4.1.4.2 Command

Table 18. WRITE_REGISTER_MULTIPLE command value

Perform a write register operation using a set of Register-Value pairs.

Payload Field	Length	Value/Description			
Set [1...n]	6 Bytes	Register Address	1 Byte	Logical address of the register.	
		Type	1 Byte	0x1	Write Register
				0x2	Write Register OR Mask
				0x3	Write Register AND Mask
		Value	4 Bytes	32 Bite register value which must be written, or bitmask used for logical operation. (Little endian)	

Note: In case of an exception the operation is not rolled-back, i.e. registers which have been modified until exception occurs remain in modified state. Host must take proper actions to recover to a defined state.

4.1.4.3 Response

Table 19. WRITE_REGISTER_MULTIPLE response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS
		PN5190_STATUS_INSTR_ERROR

4.1.4.4 Event

There are no events for this command.

4.1.5 READ_REGISTER

This instruction is used to read back the content of a logical register. The content is present in the response, as 4-byte value in little endian format.

4.1.5.1 Conditions

The address of the logical register must exist. The access attribute of the register must either be READ-WRITE or READ-ONLY.

4.1.5.2 Command

Table 20. READ_REGISTER command value

Read back content of a register.

Payload Field	Length	Value/Description
Register Address	1 Byte	Address of the logical register

4.1.5.3 Response

Table 21. READ_REGISTER response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)
Register Value	4 Bytes	32-Bit register value which has been read out. (little endian)

4.1.5.4 Event

There are no events for this command.

4.1.6 READ_REGISTER_MULTIPLE

This instruction is used to read multiple logical registers at once. The result (content of each register) is provided in the response to the instruction. Register address itself is not included in the response. The order of the register contents within the response corresponds to the order of the register addresses within the instruction.

4.1.6.1 Conditions

All register addresses within the instruction must exist. The access attribute for each register must either be READ-WRITE or READ-ONLY. The size of 'Register Address' array must be in the range from 1 – 18, inclusive.

4.1.6.2 Command

Table 22. READ_REGISTER_MULTIPLE command value

Perform a read register operation on a set of registers.

Payload Field	Length	Value/Description
Register Address[1...n]	1 Byte	Register Address

4.1.6.3 Response

Table 23. READ_REGISTER_MULTIPLE response value

Payload Field	Length	Value/Description		
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:		
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)		
Register Value [1...n]	4 Bytes	Value	4 Bytes	32-Bit register value which has been read out (little endian).

4.1.6.4 Event

There are no events for this command.

4.2 E2PROM Manipulation

The accessible area in E2PROM is as per EEPROM map and addressable size.

Note:

1. Wherever the 'E2PROM Address' is mentioned in the below instructions, shall refer to the size of the addressable EEPROM area.

4.2.1 WRITE_E2PROM

This instruction is used to write one or more values to E2PROM. The field 'Values' contains the data to be written to E2PROM starting at the address given by field 'E2PROM Address'. The data is written in sequential order.

Note:

Please note that this is a blocking command, this means the NFC FE is blocked during the write operation. This can take several milliseconds.

4.2.1.1 Conditions

'E2PROM Address' field must be in the range as per . The number of bytes within 'Values' field must be in the range from 1 – 1024 (0x0400), inclusive. Write operation must not go beyond EEPROM address as mentioned in [1]. Error response shall be sent to the host if address exceeds the EEPROM address space as in [1].

4.2.1.2 Command

Table 24. WRITE_E2PROM command value

Write given values sequentially to E2PROM.

Payload Field	Length	Value/Description		
E2PROM Address	2 Byte	Address in E2PROM from which write operation shall start. (Little endian)		
Values	1 – 1024 Bytes	Values which must be written to E2PROM in sequential order.		

4.2.1.3 Response

Table 25. WRITE_EEPROM response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR PN5190_STATUS_MEMORY_ERROR

4.2.1.4 Event

There are no events for this command.

4.2.2 READ_E2PROM

This instruction is used to read back data from E2PROM memory area. The field 'E2PROM Address' indicates the start address of the read operation. The response contains the data read from E2PROM.

4.2.2.1 Conditions

'E2PROM Address' field must be in a valid range.

'Number of bytes' field must be in the range from 1 – 1024, inclusive.

Read operation must not go beyond the last accessible EEPROM address.

Error response shall be sent to the host, if address exceeds the EEPROM address space.

4.2.2.2 Command

Table 26. READ_E2PROM command value

Read out values from E2PROM sequentially.

Payload Field	Length	Value/Description
E2PROM Address	2 Byte	Address in E2PROM from which read operation shall start. (Little endian)
Number of Bytes	2 Byte	Number of bytes to be read out. (Little endian)

4.2.2.3 Response

Table 27. READ_E2PROM response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS
		PN5190_STATUS_INSTR_ERROR (No further data is present)
Values	1 – 1024 Bytes	Values which have been read out in sequential order.

4.2.2.4 Event

There are no events for this command.

4.3 CLIF data Manipulation

The instructions described within this section describe the commands for RF transmission and reception.

4.3.1 EXCHANGE_RF_DATA

The RF exchange function performs a transmission of the TX data and is waiting for the reception of any RX data.

The function returns in case of a reception (either erroneous or correct) or a timeout happened. The timer is started with the END of TRANSMISSION and stopped with the START of RECEPTION. Timeout value preconfigured in EEPROM shall be used in case timeout not configured before execution of Exchange command.

If transceiver_state is

- in IDLE the TRANSCEIVE mode is entered.
- In WAIT_RECEIVE, the transceiver state is reset to TRANSCEIVE MODE in case of initiator bit is set
- In WAIT_TRANSMIT, the transceiver state is reset to TRANSCEIVE MODE in case initiator bit is NOT set

The field 'Number of valid bits in last Byte' indicate the exact data length to be transmitted.

4.3.1.1 Conditions

Size of 'TX Data' field must be in the range from 0 – 1024, inclusive.

'Number of valid bits in last Byte' field must be in the range from 0 – 7.

The command must not be called during an ongoing RF transmission. Command shall ensure the right state of the Transceiver for transmitting the data.

Note:

This command is valid only for Reader mode and P2P" Passive/Active Initiator mode.

4.3.1.2 Command

Table 28. EXCHANGE_RF_DATA command value

Write TX data to internal RF transmission buffer and starts transmission using transceive command and wait until reception or Time-Out to prepare a response to the host.

Payload Field	Length	Value/Description	
Number of valid bits in last Byte	1 Byte	0	All bits of last byte are transmitted
		1 – 7	Number of bits within last byte to be transmitted.
RFExchangeConfig	1 Byte	Configuration of the RFExchange function. Details see below	
TX Data	n bytes	TX data which must be sent out via CLIF using transceive command. n = 0 – 1024 bytes	

Table 29. RFexchangeConfig Bitmask

b7	b6	b5	b4	b3	b2	b1	b0	Description
								Bits 4 – 7 are RFU
				X				Include RX Data in response based on RX_STATUS, if bit set to 1b.
					X			Include EVENT_STATUS register in response, if bit set to 1b.
						X		Include RX_STATUS_ERROR register in response, if bit is set to 1b.
							X	Include RX_STATUS register in response, if bit is set to 1b.

4.3.1.3 Response

Table 30. EXCHANGE_RF_DATA response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present) PN5190_STATUS_TIMEOUT PN5190_STATUS_RX_TIMEOUT PN5190_STATUS_NO_RF_FIELD PN5190_STATUS_TIMEOUT_WITH_EMD_ERROR
RX_STATUS	4 Bytes	If RX_STATUS is requested (little endian)
RX_STATUS_ERROR	4 Bytes	If RX_STATUS_ERROR is requested (little endian)
EVENT_STATUS	4 Bytes	If EVENT_STATUS is requested (little endian)
RX Data	1 – 1024 Bytes	If RX data is requested. RX data received during RF reception phase of RF exchange.

4.3.1.4 Event

There are no events for this command.

4.3.2 TRANSMIT_RF_DATA

This instruction is used to write data into the internal CLIF transmission buffer and start transmission using transceive command internally. The size of this buffer is limited to 1024 bytes. After this instruction has been executed, an RF reception is started automatically.

The command returns immediately after Transmission is complete not waiting for the reception completion.

4.3.2.1 Conditions

The number of bytes within the 'TX Data' field must be in the range from 1 – 1024, inclusive.

The command must not be called during an ongoing RF transmission.

4.3.2.2 Command

Table 31. TRANSMIT_RF_DATA command value

Write TX data to internal CLIF transmission buffer.

Payload Field	Length	Value/Description
Number of valid bits in last Byte	1 Byte	0 All bits of last byte are transmitted 1 – 7 Number of bits within last byte to be transmitted.
RFU	1 Byte	Reserved
TX Data	1 – 1024 Bytes	TX data which shall be used during next RF transmission.

4.3.2.3 Response

Table 32. TRANSMIT_RF_DATA response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR PN5190_STATUS_NO_RF_FIELD PN5190_STATUS_NO_EXTERNAL_RF_FIELD

4.3.2.4 Event

There are no events for this command.

4.3.3 RETRIEVE_RF_DATA

This instruction is used to read data from the internal CLIF RX buffer, which contains the RF response data (if any) posted to it from the previous execution of [Section 4.3.1](#) with option not to include the received data in the response or [Section 4.3.2](#) command.

4.3.3.1 Command

Table 33. RETRIEVE_RF_DATA command value

Read RX data from internal RF reception buffer.

Payload Field	Length	Value/Description
Empty	Empty	Empty

4.3.3.2 Response

Table 34. RETRIEVE_RF_DATA response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)
RX Data	1 – 1024 Bytes	RX data which has been received during last successful RF reception.

4.3.3.3 Event

There are no events for this command.

4.3.4 RECEIVE_RF_DATA

This instruction will wait for the data received through RF Interface of the reader.

In reader mode, this instruction returns either in case of a reception (either erroneous or correct) or an FWT timeout occurred. The timer is started with the END of TRANSMISSION and stopped with the START of RECEPTION. The default timeout value preconfigured in EEPROM shall be used in case timeout not configured before execution of Exchange command.

In target mode, this instruction returns either in case of reception (either erroneous or correct) or External RF error.

Note:

This instruction shall be used in conjunction with TRANSMIT_RF_DATA command to perform TX and RX operation...

4.3.4.1 Command

Table 35. RECEIVE_RF_DATA command value

Payload Field	Length	Value/Description
ReceiveRFConfig	1 Byte	Configuration of the ReceiveRFConfig function. Please see Table 36

Table 36. ReceiveRFConfig Bitmask

b7	b6	b5	b4	b3	b2	b1	b0	Description
								Bits 4 – 7 are RFU
				X				Include RX Data in response based on RX_STATUS, if bit set to 1b.
					X			Include EVENT_STATUS register in response, if bit set to 1b.
						X		Include RX_STATUS_ERROR register in response, if bit is set to 1b.
							X	Include RX_STATUS register in response, if bit is set to 1b.

4.3.4.2 Response

Table 37. RECEIVE_RF_DATA response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2] . Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present) PN5190_STATUS_TIMEOUT PN5190_STATUS_NO_RF_FIELD PN5190_STATUS_NO_EXTERNAL_RF_FIELD
RX_STATUS	4 Bytes	If RX_STATUS is requested (little endian)
RX_STATUS_ERROR	4 Bytes	If RX_STATUS_ERROR is requested (little endian)
EVENT_STATUS	4 Bytes	If EVENT_STATUS is requested (little endian)
RX Data	1 – 1024 Bytes	If RX data is requested. RX data received over RF.

4.3.4.3 Event

There are no events for this command.

4.3.5 FeliCa EMD Configuration

This instruction is used to read data from the internal CLIF RX buffer, which contains a FeliCa EMD response data (if any) posted to it from the previous execution of EXCHANGE_RF_DATA command returning with Status 'PN5190_STATUS_TIMEOUT_WITH_EMD_ERROR'. This command is available from PN5190 FW v02.03.

4.3.5.1 Command

Read RX data from internal RF reception buffer.

Table 38. RETRIEVE_RF_FELICA_EMD_DATA command value

Payload Field	Length	Value/Description	
FeliCaRFRetrieveConfig	1 Byte	00 - FF	Configuration of the RETRIEVE_RF_FELICA_EMD_DATA function
		configuration (bitmask) description	bit 7..2: RFU bit 1: Include RX_STATUS_ERROR register in response, if bit is set to 1b. bit 0: Include RX_STATUS register in response, if bit is set to 1b.

4.3.5.2 Response

Table 39. RETRIEVE_RF_FELICA_EMD_DATA response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation. Expected values are as below: PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)
RX_STATUS	4 Byte	If RX_STATUS is requested (little endian)
RX_STATUS_ERROR	4 Byte	If RX_STATUS_ERROR is requested (little endian)
RX Data	1...1024 Byte	FeliCa EMD RX data which has been received during last unsuccessful RF reception using Exchange Command.

4.3.5.3 Event

There are no events for this command.

4.4 Switching Operation Mode

PN5190 supports 4 different operation modes:

4.4.1 Normal

This is the default mode, where all instructions are allowed.

4.4.2 Standby

PN5190 is in standby/sleep state to save power. Wake-up conditions must be set to define when to leave standby again.

4.4.3 LPCD

PN5190 is in low-power card detection mode, where it tries to detect a card which is entering the operating volume, with lowest possible power consumption.

4.4.4 Autocoll

PN5190 is acting as RF listener, performing target mode activation autonomously (to guarantee real-time constraints)

4.4.5 SWITCH_MODE_NORMAL

The Switch Mode Normal command has three use-cases.

4.4.5.1 UseCase1: Enter Normal Operation mode upon Power-up (POR)

Use to reset to Idle state for receiving / processing the next command by entering Normal operation mode.

4.4.5.2 UseCase2: Terminating already running command to switch to Normal Operation mode (Abort command)

Use to reset to Idle state for receiving / processing the next command by terminating the already running commands.

Commands such as Standby, LPCD, Exchange, PRBS and Autocoll shall be possible to be terminated using this command.

This is the only special command, that does not have a response. Instead, it has an EVENT notification.

Please refer to [Section 3.3.3](#) for more information on the type of events occur during different underlying command execution.

4.4.5.2.1 UseCase2.1:

This command shall reset all the CLIF TX, RX, and Field Control Registers to Boot state. Issuing this command shall turn OFF any existing RF Field.

4.4.5.2.2 UseCase2.2:

Available from PN5190 FW v02.03 onwards:

This command shall not modify CLIF TX, RX and Field Control Registers but shall only move the Transceiver to IDLE state.

4.4.5.3 UseCase3: Normal operation mode upon Soft-reset/exit from STANDBY, LPCD.

In this case, the PN5190 will directly enter into the normal operation mode, by sending the IDLE_EVENT to the host ([Figure 8](#) or [Figure 9](#)) and "IDLE_EVENT" bit is set in [Table 4](#).

There is no requirement to send SWITCH_MODE_NORMAL command.

Note:

After the IC is switched to normal mode, all the settings of RF are modified to default state. It is imperative that, respective RF configuration and other related registers must be loaded with appropriate values before performing an RF ON or RF Exchange operation.

4.4.5.4 Command frame to send for different use-cases

4.4.5.4.1 UseCase1: Command Enter Normal Operation mode upon Power-up (POR)

0x20 0x01 0x00

4.4.5.4.2 UseCase2: Command to terminating already running commands to switch to Normal Operation mode

Use Case 2.1:

0x20 0x00 0x00

Use Case 2.2: (From FW 2.2 onwards):

0x20 0x02 0x00

4.4.5.4.3 UseCase3: Command for Normal operation mode upon Soft-reset/exit from STANDBY, LPCD. ULPCD


None. PN5190 enters normal operation mode directly.

4.4.5.5 Response


None

4.4.5.6 Event


A BOOT_EVENT (in EVENT_STATUS register) is set indicating that the normal mode is entered and is sent to the host. Please refer to [Figure 8](#) and [Figure 9](#) for the event data.

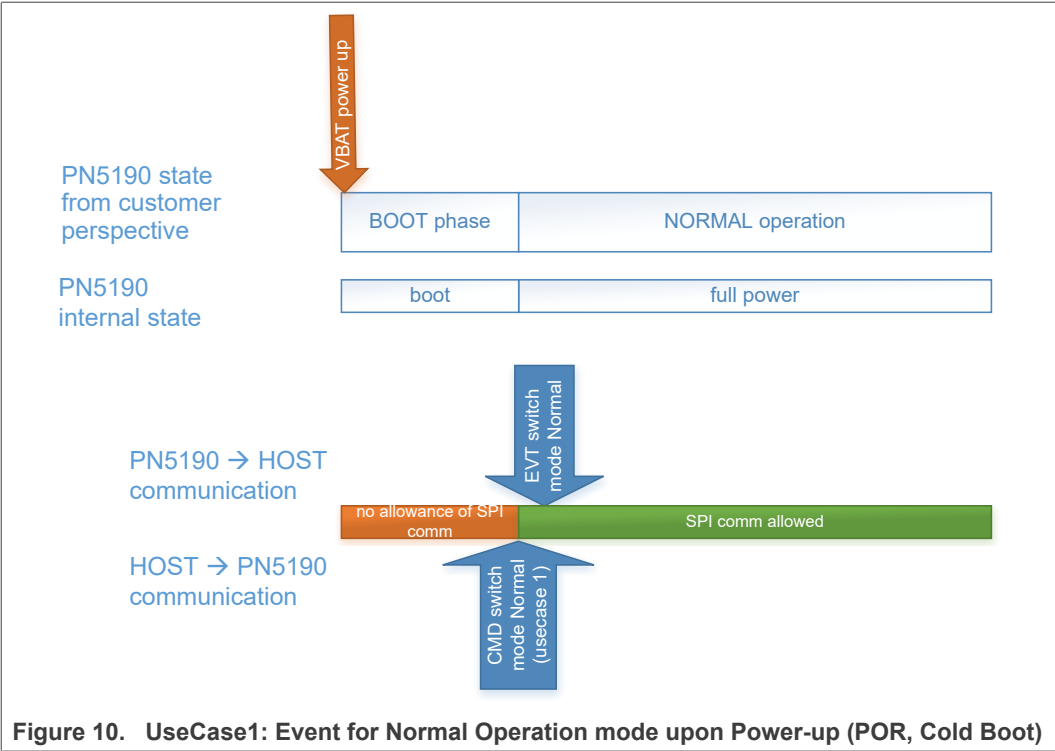

An IDLE_EVENT (in EVENT_STATUS register) is set indicating the normal mode is entered and is sent to the host. Please refer to [Figure 8](#) and [Figure 9](#) for the event data.

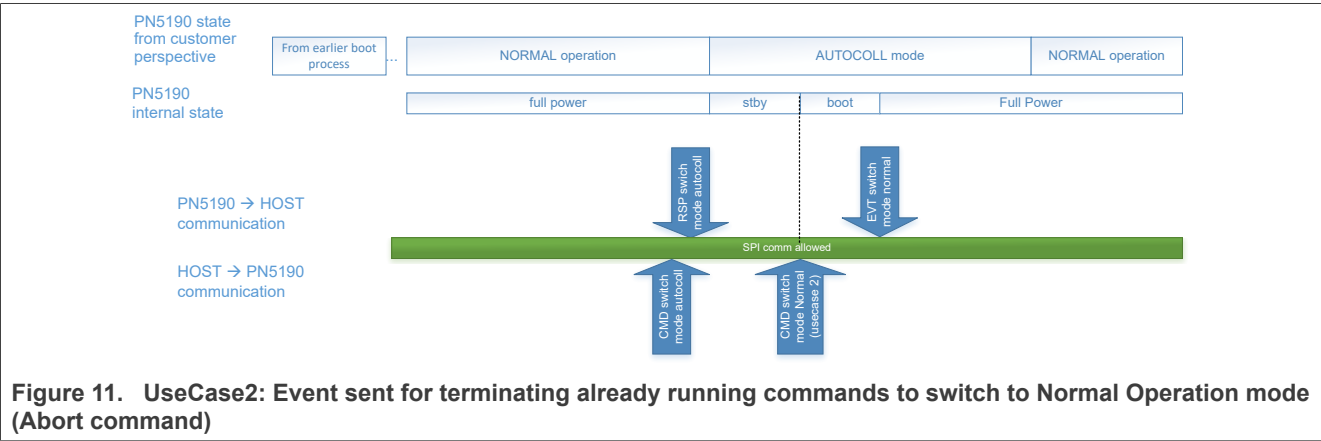

A BOOT_EVENT (in EVENT_STATUS register) is set indicating the normal mode is entered and is sent to the host. Please refer to [Figure 8](#) and [Figure 9](#) for the event data.

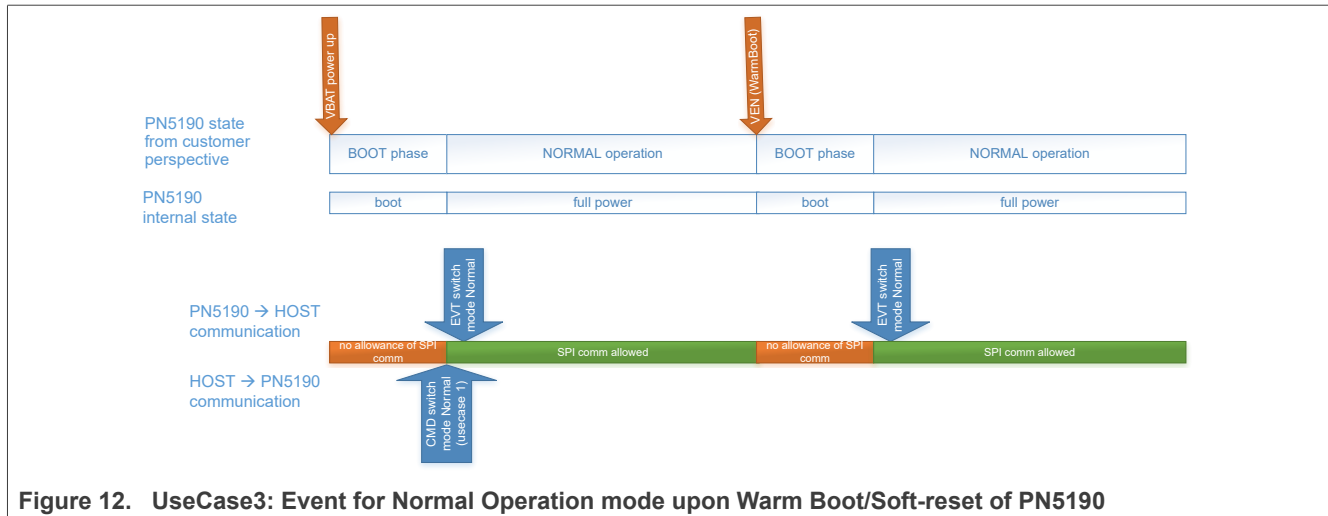

4.4.6 SWITCH_MODE_AUTOCOLL

The Switch Mode Autocoll automatically performs the card activation procedure in target mode.

Field 'Autocoll Mode' must be in the range from 0 – 2, inclusive.

In case if field 'Autocoll Mode' is set to 2 (Autocoll): Field 'RF Technologies' ([Table 41](#)) must contain a bitmask indicating the RF Technologies to support during Autocoll.

No instructions must be sent while being in this mode.

Termination is indicated using an interrupt.

4.4.6.1 Command

Table 40. SWITCH_MODE_AUTOCOLL command value

Parameter	Length	Value/Description	
RF Technologies	1 Byte	Bitmask indicating the RF technology to listen for during Autocoll.	
Autocoll Mode	1 Byte	0	No Autonomous mode , i.e. Autocoll terminates when external RF field is not present. Termination in case of <ul style="list-style-type: none"> • NO RF FIELD or RF FIELD has disappeared • PN5190 is ACTIVATED in TARGET mode
		1	Autonomous mode with standby . When no RF field is present, Autocoll automatically enters standby mode. Once RF external RF field is detected, PN5190 enters again Autocoll mode. Termination in case of <ul style="list-style-type: none"> • PN5190 is ACTIVATED in TARGET mode From PN5190 FW v02.03 onwards: If EEPROM Field "bCard ModeUltraLowPowerEnabled" at address '0xCDF' is set to '1', then PN5190 enters Ultra low-power standby.

Table 40. SWITCH_MODE_AUTOCOLL command value...continued

Parameter	Length	Value/Description
		2 Autonomous mode without standby. When no RF field is present, PN5190 waits until RF field is present before starting Autocoll algorithm. Standby is not used in this case. Termination in case of <ul style="list-style-type: none"> PN5190 is ACTIVATED in TARGET mode

Table 41. RF Technologies Bitmask

b7	b6	b5	b4	b3	b2	b1	b0	Description
0	0	0	0					RFU
				X				If set to 1b, listening for NFC-F Active is enabled. (Not available).
					X			If set to 1b, listening for NFC-A Active is enabled. (Not available).
						X		If set to 1b, listening for NFC-F is enabled.
							X	If set to 1b, listening for NFC-A is enabled.

4.4.6.2 Response

The response only signals that the command has been processed.

Table 42. SWITCH_MODE_AUTOCOLL response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR (Switch mode is not been entered due to wrong settings)

4.4.6.3 Event

The event notification is sent when the command has finished, and the normal mode is entered. Host shall read-out the response bytes based on the event value.

Note:

When the status is not "PN5190_STATUS_INSTR_SUCCESS", then further "Protocol" and "Card_Activated" data bytes are not present.

Technology information is retrieved from the registers using [Section 4.1.5](#), [Section 4.1.6](#) commands.

Following table shows the event data which will be sent as part of the event message [Figure 8](#) and [Figure 9](#).

Table 43. EVENT_SWITCH_MODE_AUTOCOLL – AUTOCOLL_EVENT data

Switch operation mode Autocoll event

Payload Field	Length	Value/Description
Status	1 byte	Status of the operation
		PN5190_STATUS_INSTR_SUCCESS PN5190 is ACTIVATED in TARGET mode. Further data in this event are valid.

Table 43. EVENT_SWITCH_MODE_AUTOCOLL – AUTOCOLL_EVENT data...continued

Switch operation mode Autocoll event

Payload Field	Length	Value/Description	
		PN5190_STATUS_PREVENT_STANDBY	Indicates that PN5190 is prevented to go into standby mode. This status is valid only when the autocoll mode is selected as "Autonomus mode with standby".
		PN5190_STATUS_NO_EXTERNAL_RF_FIELD	Indicates that no external RF field is present during the execution of Autocoll in Non-Autonomous mode
		PN5190_STATUS_USER_CANCELLED	Indicates that the present command in-progress is aborted by the switch mode normal command
Protocol	1 byte	0x10	Activated as Passive TypeA
		0x11	Activated as Passive TypeF 212
		0x12	Activated as Passive TypeF 424
		0x20	Activated as Active TypeA
		0x21	Activated as Active TypeF 212
		0x22	Activated as Active TypeF 424
		Other values	Invalid
Card_Activated	1 byte	0x00	No card activation process as per ISO 14443-3
		0x01	Indicates that device is activated in Passive mode

Note:

After reading the event data, data received from the card/device that was activated (such as 'n' bytes of ATR_REQ/RATS as per ISO18092/ISO1443-4), shall be read using [Section 4.3.3](#) command.

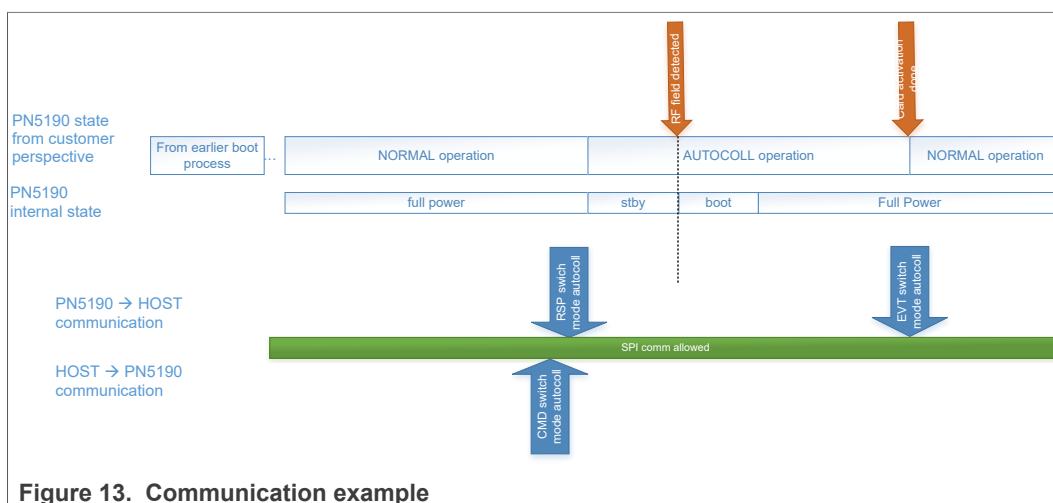
4.4.6.4 Communication example

Figure 13. Communication example

4.4.7 SWITCH_MODE_STANDBY

The Switch Mode Standby automatically sets the IC into standby mode. The IC will wake up after configured wake-up sources meeting the wake-up conditions.

Note:

Counter expiry for ULP STANDBY and HIF abort for STANDBY are available by default to exit standby modes.

4.4.7.1 Command

Table 44. SWITCH_MODE_STANDBY command value

Parameter	Length	Value/Description
Config	1 Byte	Bitmask controlling the wake-up source to be used and the standby mode to enter. Please refer to Table 45
Counter Value	2 Bytes	Used value for wake-up counter in milliseconds. Maximum supported value is 2690 for standby. Maximum supported value is 4095 for ULP standby. The value to be provided is in Little-endian format. This parameter contents are valid only if the "Config Bitmask" is enabled for wake-up on counter expire.

Table 45. Config Bitmask

b7	b6	b5	b4	b3	b2	b1	b0	Description
X								Enter ULP Standby if bit is set to 1b Enter Standby if bit is set to 0b.
	0							RFU
		X						Wake-up on GPIO-3 when it is high, if bit is set to 1b. (Not applicable for ULP Standby)
			X					Wake-up on GPIO-2 when it is high, if bit is set to 1b. (Not applicable for ULP Standby)
				X				Wake-up on GPIO-1 when it is high, if bit is set to 1b. (Not applicable for ULP Standby)

Table 45. Config Bitmask...continued

b7	b6	b5	b4	b3	b2	b1	b0	Description
					X			Wake-up on GPIO-0 when it is high, if bit is set to 1b. (Not applicable for ULP Standby)
						X		Wake-up on wake-up counter expires, if bit is set to 1b. For ULP-Standby, this option is by default enabled.
							X	Wake-up on external RF field, if bit is set to 1b.

Note: From PN5190 FW v02.03, if EEPROM Field “CardModeUltraLowPowerEnabled” at address ‘0xCDF’ is set to ‘1’, ULP Standby configuration cannot be used with SWITCH_MODE_STANDBY Command.

4.4.7.2 Response

The response only signals that the command has been processed and the standby state will be entered only after the response is fully read by the host.

Table 46. SWITCH_MODE_STANDBY response value

Switch operation mode standby


Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR (Switch mode has not been entered – due to wrong settings)

4.4.7.3 Event

The event notification is sent when the command has finished, and the normal mode is entered. Please refer to the format of the event that will be sent after completion of the command as in Figure 8 and Figure 9.

In case if PN5190 is prevented to go in standby mode, then the event “STANDBY_PREV_EVENT” bit set in EVENT_STATUS as mentioned Table 4 is sent to the host along the reason of standby prevention as mentioned in Table 6.

4.4.7.4 Communication Example

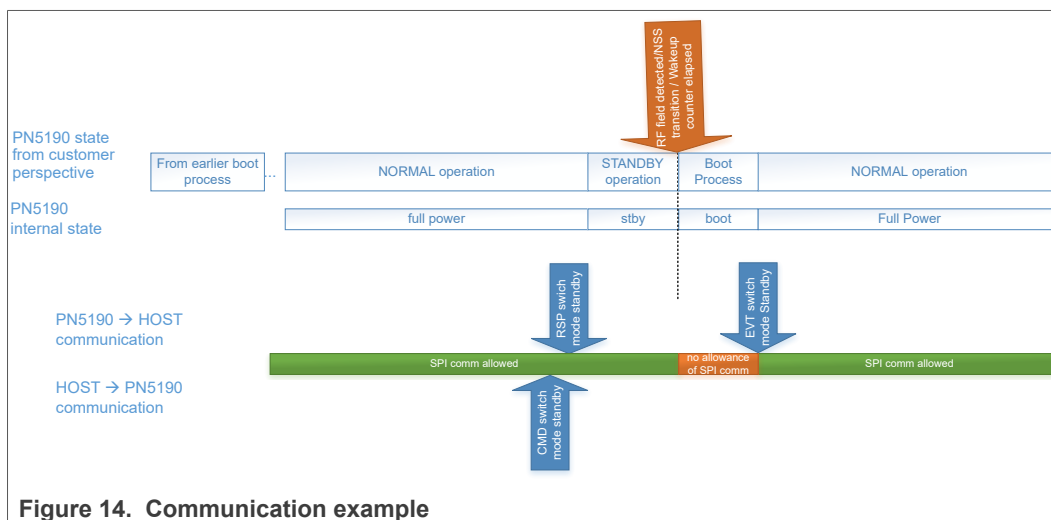

4.4.8 SWITCH_MODE_LPCD

The Switch Mode LPCD performs a detuning detection on the antenna due to changing environment around the antenna.

There are 2 different modes of LPCD. The HW-based (ULPCD) solution offers a competitive power consumption with a reduced sensitivity. The FW-based (LPCD) solution offers a best-in-class sensitivity with an increased power consumption.

In the Single Mode of FW based(LPCD), there is no calibration event sent to host.

When Single mode is invoked, calibration and successive measurements are all done after exiting standby.

For calibration event in single mode, first issue single mode with calibration event command. After calibration, an LPCD calibration event is received after which the single mode command must be sent with the reference value obtained from the previous step as the input parameter.

The configuration of the LPCD is done in the EEPROM/Flash Data settings before the command is called.

Note:

GPIO3 abort for ULPCD, HIF abort for LPCD are available by default to exit low-power modes.

Wake-up due to counter expire is always enabled.

For ULPCD, DC-DC configuration should be disabled in EEPROM/Flash Data settings and should provide VUP supply through VBAT. The necessary jumper settings should be made. For EEPROM/Flash Data settings, please refer to document [2].

If the command is for LPCD/ULPCD calibration, the host still has to send the complete frame.

4.4.8.1 Command

Table 47. SWITCH_MODE_LPCD command value

Parameter	Length	Value/Description	
bControl	1 Byte	0x00	Enter ULPCD calibration. Command stops after calibration and an event with reference value is sent to the host.
		0x01	Enter ULPCD
		0x02	LPCD calibration. Command stops after calibration and an event with reference value is sent to the host.
		0x03	Enter LPCD
		0x04	Single mode
		0x0C	Single mode with calibration event
		Other Values	RFU
Wake-up Control	1 Byte	Bitmask controlling the wake-up source to be used for LPCD/ULPCD. Content of this field is not considered for calibration. Please refer to Table 48	
Reference Value	4 Bytes	Reference value to be used during ULPCD/LPCD. For ULPCD, Byte 2 which holds the HF Attenuator value is used during both the calibration and measurement phase. For LPCD, Content of this field is not considered for calibration and Single mode. Please refer to Table 49 for the correct info on all the 4 bytes.	
Counter Value	2 Bytes	Value for wake-up counter in milliseconds. Maximum supported value is 2690 for LPCD. Maximum supported value is 4095 for ULPCD. The value to be provided is in Little-endian format. Content of this field is not considered for LPCD calibration. For single mode and single mode with calibration event, the duration of standby before calibration can be configured from the EEPROM configuration: LPCD_SETTINGS->wCheckPeriod. For single mode with calibration, WUC value to be non-zero.	

Table 48. Wake-up Control Bitmask

b7	b6	b5	b4	b3	b2	b1	b0	Description
0	0	0	0	0	0	0		RFU
							X	Wake-up on external RF field, if bit is set to 1b.

Table 49. Reference Value byte info

Reference value bytes	ULPCD	LPCD
Byte 0	Reference Byte 0	Channel 0 Reference Byte 0
Byte 1	Reference Byte 1	Channel 0 Reference Byte 1
Byte 2	HF Attenuator value	Channel 1 Reference Byte 0
Byte 3	NA	Channel 1 Reference Byte 1

4.4.8.2 Response

Table 50. SWITCH_MODE_LPCD response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR (Switch mode has not been entered – due to wrong settings)


4.4.8.3 Event

The event notification is sent when the command has finished, and the normal mode is entered with the following data as part of the event mentioned in Figure 8 and Figure 9.

Table 51. EVT_SWITCH_MODE_LPCD

Payload Field	Length	Value/Description
LPCD Status	4 bytes	Please refer to Table 8

4.4.8.4 Communication Example

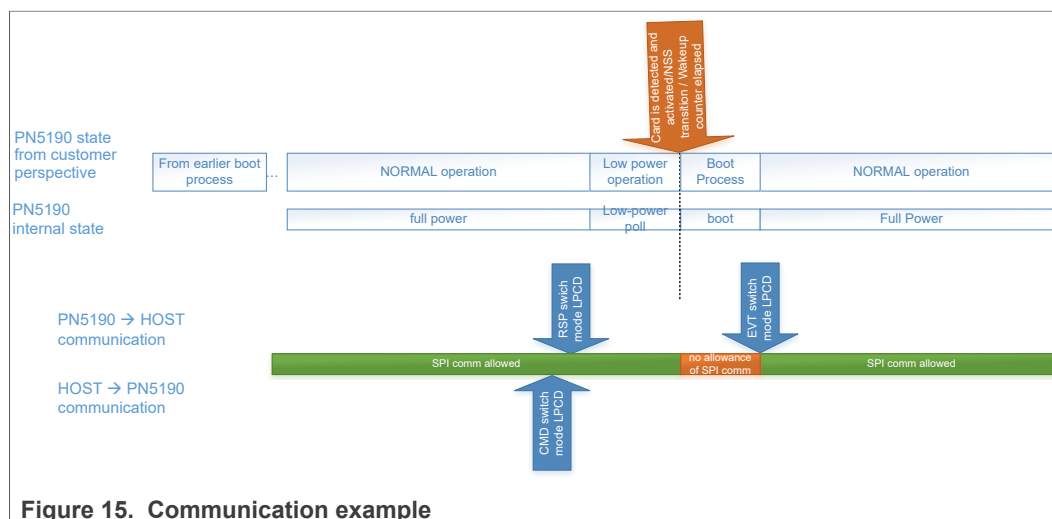

4.4.9 SWITCH_MODE_DOWNLOAD

The Switch Mode Download command enters the Firmware download mode.

Only way to come out download mode, is to issue a reset to PN5190.

4.4.9.1 Command

Table 52. SWITCH_MODE_DOWNLOAD command value

Parameter	Length	Value/Description
-	-	No value

4.4.9.2 Response

The response only signals that the command has been processed and the Download mode shall be entered after the response is read by the host.

Table 53. SWITCH_MODE_DOWNLOAD response value

Switch operation mode autocoll

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (Switch mode has not been entered)

4.4.9.3 Event

No event generation.

4.4.9.4 Communication Example

4.5 MIFARE Classic Authentication

4.5.1 MFC_AUTHENTICATE

This instruction is used to perform a MIFARE Classic Authentication on an activated card. It takes the key, card UID and the key type to authenticate at given block address. The response contains one byte indicating the authentication status.

4.5.1.1 Conditions

Field 'Key' must be 6 bytes long. Field 'Key Type' must contain the value 0x60 or 0x61. Block address may contain any address from 0x0 - 0xff, inclusive. Field 'UID' must be bytes long and should contain the 4-byte UID of the card. An ISO14443-3 MIFARE Classic product-based card should be put into state ACTIVE or ACTIVE* prior to execution of this instruction.

In case of a runtime error related to the authentication, this field 'Authentication Status' is set accordingly.

4.5.1.2 Command

Table 54. MFC_AUTHENTICATE Command

Perform authentication on an activated MIFARE Classic product-based card.

Payload Field	Length	Value/Description
Key	6 Bytes	Authentication key to be used.
Key Type	1 Byte	0x60 Key Type A
		0x61 Key Type B
Block Address	1 Byte	The address of the block for which the authentication must be performed.
UID	4 Bytes	UID of the card.

4.5.1.3 Response

Table 55. MFC_AUTHENTICATE Response
Response to MFC_AUTHENTICATE.

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_INSTR_SUCCESS PN5190_STATUS_INSTR_ERROR PN5190_STATUS_TIMEOUT PN5190_STATUS_AUTH_ERROR

4.5.1.4 Event

There is no event for this instruction.

4.6 ISO 18000-3M3 (EPC GEN2) Support

4.6.1 EPC_GEN2_INVENTORY

This instruction is used to perform an inventory of ISO18000-3M3 tags. It implements an autonomous execution of several commands according to ISO18000-3M3 in order to guarantee the timings specified by that standard.

If present in payload of the instruction, first a *Select* command is executed followed by a *BeginRound* command. If there is a valid response in the first timeslot (no timeout, no collision), the instruction sends an *ACK* and saves the received PC/XPC/Ull. The instruction then performs an action according to the field 'Timeslot Processed Behavior':

- If this field is set to 0 a *NextSlot* command is issued to handle the next timeslot. This is repeated until the internal buffer is full
- If this field is set to 1 the algorithm pauses
- If this field is set to 2 a *Req_Rn* command is issued if, and only if, there has been a valid tag response in this timeslotCommand

Field 'Select Command Length' must contain the length of the field 'Select Command', which must be in the range from 1 – 39, inclusive. If 'Select Command Length' is 0, the fields 'Valid Bits in last Byte' and 'Select Command' must not be present.

The field Bits in last Byte should contain the number of bits to be transmitted in the last byte of the 'Select Command' field. The value must be in the range from 1 – 7, inclusive. If the value is 0, all bits from last byte from 'Select Command' field are transmitted.

The field 'Select Command' should contain a *Select* command according to ISO18000-3M3 without trailing CRC-16c and must have the same length as indicated in field 'Select Command Length'.

Field 'BeginRound Command' should contain a *BeginRound* command according to ISO18000-3M3 without trailing CRC-5. The last 7 bits of the last byte of 'BeginRound Command' are ignored as the command has an actual length of 17 bits.

'Timeslot Processed Behavior' must contain a value from 0 – 2, inclusive.

Table 56. EPC_GEN2_INVENTORY command value*Perform an ISO 18000-3M3 Inventory*

Payload Field	Length	Value/Description	
ResumeInventory	1 Byte	00 01	Initial GEN2_INVENTORY Resume the GEN2_INVENTORY command – the remaining fields below are empty (any payload is ignored)
Select Command Length	1 Byte	0	No Select command is set prior to BeginRound command. 'Valid Bits in last Byte' field and 'Select command' field shall not be present.
		1 – 39	Length (n) of the 'Select command' field.
Valid Bits in last Byte	1 Byte	0	All bits of last byte of 'Select command' field are transmitted.
		1 – 7	Number of bits to be transmitted in the last byte of 'Select command' field.
Select Command	n Bytes	If present, this field contains the Select command (according to ISO18000-3, Table 47) which is sent prior to BeginRound command. CRC-16c shall not be included.	
BeginRound Command	3 Bytes	This field contains the BeginRound command (according to ISO18000-3, Table 49). CRC-5 shall not be included.	
Timeslot Processed Behavior	1 Byte	0	Response contains max. Number of timeslots which may fit in response buffer.
		1	Response contains only one timeslot.
		2	Response contains only one timeslot. If timeslot contains valid card response, also the card handle is included.

4.6.1.1 Response

The length of the Response might be "1" in case of resume Inventory.

Table 57. EPC_GEN2_INVENTORY response value

Payload Field	Length	Value/Description			
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:			
		PN5190_STATUS_SUCCESS (Read Timeslot status in next byte for Tag response)			
		PN5190_STATUS_INSTR_ERROR (No further data is present)			
Timeslot [1...n]	3 – 69 Bytes	Timeslot Status	1 Byte	0	Tag response available. 'Tag Reply Length' field, 'Valid bits in last byte' field, and 'Tag reply' field present.
				1	Tag response available.
				2	No tag replied in timeslot. 'Tag Reply Length' field and 'Valid bits in last byte' field, shall be set to zero. 'Tag reply' field shall not be present.

Table 57. EPC_GEN2_INVENTORY response value...continued

Payload Field	Length	Value/Description			
				3	Two or more tags responded in the timeslot. (Collision). 'Tag Reply Length' field and 'Valid bits in last byte' field, shall be set to zero. 'Tag reply' field shall not be present.
		Tag Reply Length	1 Byte	0–66	Length of 'Tag Reply' field (i). If Tag Reply Length is 0, then the Tag Reply field is not present.
		Valid bits in last Byte	1 Byte	0	All bits of last byte of 'Tag reply' field are valid.
				1–7	Number of valid bits of last byte of 'Tag reply' field. If Tag Reply Length is zero, the value of this byte shall be ignored.
		Tag Reply	'n' Bytes	Reply of the tag according to ISO18000 -3_2010, Table 56.	
		Tag Handle	0 or 2 Bytes	Handle of the tag, in case field 'Timeslot Status' is set to '1'. Otherwise field not present.	

4.6.1.2 Event

There are no events for this command.

4.7 RF Configuration Management

Please refer to the [Section 7](#), for TX and RX configuration for different RF technologies and data rates supported by PN5190. The values are not present in the range mentioned below, should be considered as RFU.

4.7.1 LOAD_RF_CONFIGURATION

This instruction is used to load the RF configuration from E2PROM into internal CLIF registers. RF configuration refers to a unique combination of RF Technology, mode (target/initiator) and baud rate. RF configuration can be loaded separately for the CLIF receiver (RX configuration) and transmitter (TX configuration) path. The value 0xFF must be used if the corresponding configuration for a path shall not be changed.

4.7.1.1 Conditions

Field 'TX Configuration' must be in the range from 0x00 – 0x2B, inclusive. If the value is 0xFF, TX configuration is not changed.

Field 'RX Configuration' must be in the range from 0x80 – 0xAB, inclusive. If the value is 0xFF, RX configuration is not changed.

A special configuration with TX Configuration = 0xFF and RX Configuration = 0xAC is used load the Boot-up registers one time.

This special configuration is required to update the register configurations (both TX and RX) that are different from the IC reset values.

4.7.1.2 Command

Table 58. LOAD_RF_CONFIGURATION command value

Load RF TX and RX settings from E2PROM.

Payload Field	Length	Value/Description	
TX Configuration	1 Byte	0xFF	TX RF Configuration not changed.
		0x0 – 0x2B	Corresponding TX RF Configuration loaded.
RX Configuration	1 Byte	0xFF	RX RF Configuration not changed.
		0x80 – 0xAB	Corresponding RX RF Configuration loaded.

4.7.1.3 Response

Table 59. LOAD_RF_CONFIGURATION response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR

4.7.1.4 Event

There are no events for this command.

4.7.2 UPDATE_RF_CONFIGURATION

This instruction is used to update the RF configuration (see definition in section [Section 4.7.1](#)) within E2PROM. The instruction allows updating at register granularity value, i.e. not the complete set needs to be updated (though, it is possible to do it).

4.7.2.1 Conditions

The size of the field array 'Configuration' must be in the range from 1 – 15, inclusive. The field array 'Configuration' must contain a set of 'RF Configuration', 'Register Address' and 'Value'. The field 'RF configuration' must be in the range from 0x0 – 0x2B for TX Configuration and 0x80 – 0xAB for the RX configuration, inclusive. The address within field 'Register Address' must exist within the respective RF configuration. Field 'Value' should contain a value which has to be written into the given register and must be 4 bytes long (little endian format).

4.7.2.2 Command

Table 60. UPDATE_RF_CONFIGURATION command value

Update the RF configuration

Payload Field	Length	Value/Description		
Configuration[1...n]	6 Bytes	RF Configuration	1 Byte	RF Configuration for which the register must be changed.
		Register Address	1 Byte	Register Address within the given RF technology.
		Value	4 Bytes	Value which must be written into the register. (little endian)

4.7.2.3 Response

Table 61. UPDATE_RF_CONFIGURATION response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR PN5190_STATUS_MEMORY_ERROR

4.7.2.4 Event

There are no events for this command.

4.7.3 GET_RF_CONFIGURATION

This instruction is used to read out an RF configuration. The register address-value-pairs are available in the response. In order to know how many pairs are to be expected, first size information can be retrieved from the first TLV, which indicates the total length of the payload.

4.7.3.1 Conditions

The field 'RF configuration' must be in the range from 0x0 – 0x2B for TX Configuration and 0x80 – 0xAB for the RX configuration, inclusive.

4.7.3.2 Command

Table 62. GET_RF_CONFIGURATION command value

Retrieve the RF configuration.

Payload Field	Length	Value/Description
RF Configuration	1 Byte	RF Configuration for which the set of register value pairs must be retrieved.

4.7.3.3 Response

Table 63. GET_RF_CONFIGURATION Response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)
Pair[1...n]	5 Bytes	Register Address 1 Byte Register Address within the given RF technology.
		Value 4 Bytes 32-Bit register value.

4.7.3.4 Event

There is not event for the instruction.

4.8 RF Field Handling

4.8.1 RF_ON

This instruction is used to enable the RF on. The DPC regulation at initial FieldOn shall be handled in this command.

4.8.1.1 Command

Table 64. RF_FIELD_ON command value

Configure RF_FIELD_ON.

Payload Field	Length	Value/Description	
RF_on_config	1 Byte	Bit 0	0 Use collision avoidance
			1 Disable collision avoidance
		Bit 1	0 No P2P active
			1 P2P active

4.8.1.2 Response

Table 65. RF_FIELD_ON response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR PN5190_STATUS_RF_COLLISION_ERROR (RF field is not switched on due to RF collision) PN5190_STATUS_TIMEOUT (RF field is not switched on due to timeout) PN5190_STATUS_TXLDO_ERROR (TXLDO error due to VUP is not available) PN5190_STATUS_RFCFG_NOT_APPLIED (RF configuration is not applied prior to this command)

4.8.1.3 Event

There is no event for this instruction.

4.8.2 RF_OFF

This instruction is used to disable the RF Field.

4.8.2.1 Command

Table 66. RF_FIELD_OFF command value

Payload Field	Length	Value/Description
Empty	Empty	empty

4.8.2.2 Response

Table 67. RF_FIELD_OFF response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)

4.8.2.3 Event

There is no event for this instruction.

4.9 Test bus Configuration

The available test bus signals on the selected PAD configurations are listed in [Section 8](#) for the reference. These must be referred for providing the configuration for test bus instructions as mentioned below.

4.9.1 CONFIGURE_TESTBUS_DIGITAL

This instruction is used to switch available digital test bus signal on selected pad configurations.

4.9.1.1 Command

Table 68. CONFIGURE_TESTBUS_DIGITAL command value

Payload Field	Length	Value/Description
TB_SignalIndex	1 Byte	Please refer to Section 8
TB_BitIndex	1 Byte	Please refer to Section 8
TB_PadIndex	1 Byte	The pad index, on which the digital signal to be output
		0x00 AUX1 pin
		0x01 AUX2 pin
		0x02 AUX3 pin
		0x03 GPIO0 pin
		0x04 GPIO1 pin
		0x05 GPIO2 pin
		0x06 GPIO3 pin
		0x07-0xFF RFU

4.9.1.2 Response

Table 69. CONFIGURE_TESTBUS_DIGITAL response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)

4.9.1.3 Event

There is no event for this instruction.

4.9.2 CONFIGURE_TESTBUS_ANALOG

This instruction is used to get available analog test bus signal on selected pad configurations.

The signal on analog test bus can be obtained in different modes. They are:

4.9.2.1 RAW Mode

In this mode, the signal chosen by `TB_SignalIndex0` is shifted by `Shift_Index0`, masked with `Mask0` and output on `AUX1`. Similarly, the signal chosen by `TB_SignalIndex1` is shifted by `Shift_Index1`, masked with `Mask1` and output on `AUX2`.

This mode offers flexibility for the customer to output any signal that is 8 bits wide or lesser and not requiring sign conversion to be output onto the analog pads.

4.9.2.2 COMBINED Mode

In this mode, analog signal will be the 10 bit signed `ADCI/ADCQ/pcrm_if_rssi` value converted to an unsigned value, scaled back to 8 bits and then output on either `AUX1` or `AUX2` pads.

Only one of either `ADCI/ADCQ` (10-bit) converted values can be output to `AUX1/AUX2` at any time.

If the `Combined_Mode` Signal payload field value is 2(Analog and Digital Combined) then Analog and Digital test bus is routed on `AUX1`(Analog Signal) and `GPIO0`(Digital Signal).

The signals to be routed are configured in the EEPROM address mentioned below:

0xCE9 – `TB_SignalIndex`

0xCEA – `TB_BitIndex`

0xCEB – Analog `TB_Index`

The test bus Index and test bus bit have to be configured in EEPROM before we issue the combined mode with option 2.

Note:

The host shall provide all the fields, regardless of field applicability in “raw” or “combined” mode. The PN5190 IC will only consider the applicable field values.

4.9.2.3 Command

Table 70. CONFIGURE_TESTBUS_ANALOG command value

Payload Field	Length	Value/Description		Field applicability for combined mode
bConfig	1 Byte		Configurable bits. Please refer to Table 71	Yes

Table 70. CONFIGURE_TESTBUS_ANALOG command value...continued

Payload Field	Length	Value/Description		Field applicability for combined mode
Combined_Mode Signal	1 Byte	0 – ADCI/ADCQ 1 – pcrn_if_rssi 2 – Analog and Digital Combined 3 – 0xFF – Reserved		Yes
TB_SignalIndex0	1 Byte		Signal index of the analog signal. Please refer to Section 8	Yes
TB_SignalIndex1	1 Byte		Signal index of the analog signal. Please refer to Section 8	Yes
Shift_Index0	1 Byte		DAC0 input shift positions. Direction will be decided by bit in bConfig[1].	No
Shift_Index1	1 Byte		DAC1 input shift positions. Direction will be decided by bit in bConfig[2].	No
Mask0	1 Byte		DAC0 mask	No
Mask1	1 Byte		DAC1 mask	No

Table 71. Config Bitmask

b7	b6	b5	b4	b3	b2	b1	b0	Description	Applicable to mode
X	X							DAC1 output shift Range – 0, 1, 2	Raw
		X	X					DAC0 output shift Range – 0, 1, 2	Raw
				X				In combined mode, signal on AUX1/AUX2 pin 0 → Signal on AUX1 1 → Signal on AUX2	Combined
					X			DAC1 input shift direction 0 → Shift right 1 → Shift left	Raw
						X		DAC0 input shift direction 0 → Shift right 1 → Shift left	Raw
							X	Mode. 0 → Raw mode 1 → Combined mode	Raw/Combined

4.9.2.4 Response

Table 72. CONFIGURE_TESTBUS_ANALOG response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:

Table 72. CONFIGURE_TESTBUS_ANALOG response value...continued

Payload Field	Length	Value/Description
		PN5190_STATUS_SUCCESS
		PN5190_STATUS_INSTR_ERROR (No further data is present)

4.9.2.5 Event

There is no event for this instruction.

4.10 CTS Configuration

4.10.1 CTS_ENABLE

This instruction is used to enable/disable the CTS logging feature.

4.10.1.1 Command

Table 73. CTS_ENABLE command value

Payload Field	Length	Value/Description
Enable/Disable	1 Byte	Bit 0
		0 Disable the CTS Logging Feature
		1 Enable the CTS Logging Feature
		Bit 1-7 RFU

4.10.1.2 Response

Table 74. CTS_ENABLE response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS
		PN5190_STATUS_INSTR_ERROR (No further data is present)

4.10.1.3 Event

Following table shows the event data which will be sent as part of the event message as shown in [Figure 8](#) and [Figure 9](#).

Table 75. This informs the host that data had been received. EVT_CTS_DONE

Payload Field	Length	Value/Description
Event	1 byte	00 ... TRIGGER has occurred, data is ready for reception.

4.10.2 CTS_CONFIGURE

This instruction is used to configure all the required CTS Registers such as Triggers, Test Bus registers, Sampling configuration etc.,

Note:

[\[1\]](#) provides a better understanding of CTS configuration. The captured data to be sent as part of the response to [Section 4.10.3](#) command.

4.10.2.1 Command

Table 76. CTS_CONFIGURE command value

Payload Field	Length	Value/Description
PRE_TRIGGER_SHIFT	1 Byte	Defines the length of the after-trigger acquisition sequence in 256-bytes units. 0 means no shift; n means n*256 bytes block shift. Note: Valid only if TRIGGER_MODE is "PRE" or "COMB" trigger mode
TRIGGER_MODE	1 Byte	Specifies Acquisition mode to be used.
		0x00 - POST mode
		0x01 - RFU
		0x02 - PRE Mode
		0x03 - 0xFF - Invalid

Table 76. CTS_CONFIGURE command value...continued

Payload Field	Length	Value/Description
RAM_PAGE_WIDTH	1 Byte	<p>Specifies the amount of on-chip memory that is covered by an acquisition. Granularity is chosen by design as 256 Bytes (i.e. 64 32-bits words).</p> <p>Valid values are as below:</p> <p>0x00h - 256 bytes 0x02h - 768 bytes 0x01h - 512 bytes 0x03h - 1024 bytes 0x04h - 1280 bytes 0x05h - 1536 bytes 0x06h - 1792 bytes 0x07h - 2048 bytes 0x08h - 2304 bytes 0x09h - 2560 bytes 0x0Ah - 2816 bytes 0x0Bh - 3072 bytes 0x0Ch - 3328 bytes 0x0Dh - 3584 bytes 0x0Eh - 3840 bytes 0x0Fh - 4096 bytes 0x10h - 4352 bytes 0x11h - 4608 bytes 0x12h - 4864 bytes 0x13h - 5120 bytes 0x14h - 5376 bytes 0x15h - 5632 bytes 0x16h - 5888 bytes 0x17h - 6144 bytes 0x18h - 6400 bytes 0x19h - 6656 bytes 0x1Ah - 6912 bytes 0x1Bh - 7168 bytes 0x1Ch - 7424 bytes 0x1Dh - 7680 bytes 0x1Eh - 7936 bytes 0x1Fh - 8192 bytes</p> <p>Note: if values provided is more than 0x1F, the value will be masked with 0x1F and resultant value will be considered.</p>
SAMPLE_CLK_DIV	1 Byte	<p>The decimal value of this field specifies the clock rate division factor to be used during acquisition.</p> <p>CTS clock = 13.56 MHz / 2^{SAMPLE_CLK_DIV}</p>

Table 76. CTS_CONFIGURE command value...continued

Payload Field	Length	Value/Description
		00 - 13560 kHz 01 - 6780 kHz 02 - 3390 kHz 03 - 1695 kHz 04 - 847.5 kHz 05 - 423.75 kHz 06 - 211.875 kHz 07 - 105.9375 kHz 08 - 52.96875 kHz 09 - 26.484375 kHz 10 - 13.2421875 kHz 11 - 6.62109375 kHz 12 - 3.310546875 kHz 13 - 1.6552734375 kHz 14 - 0.82763671875 kHz 15 - 0.413818359375 kHz
SAMPLE_BYTE_SEL	1 Byte	These bits are used to specify which bytes of the two 16-bits input buses contribute to the interleave mechanism that generates data to be transferred to the on-chip memory. The meaning and usage of them is depending from the SAMPLE_MODE_SEL values. Note: Given value is always masked with 0x0F and then effective value is considered.
SAMPLE_MODE_SEL	1 Byte	Selects the sampling interleave mode as described by the CTS design specs. Decimal value 3 is reserved and will be treated as 0. Note: Given value is always masked with 0x03, and then effective value is considered.
TB0	1 Byte	Selects which test bus to be connected to TB0. Please refer to Section 8 (TB_Signal_Index value)
TB1	1 Byte	Selects which test bus to be connected to TB1. Please refer to Section 8 (TB_Signal_Index value)
TB2	1 Byte	Selects which test bus to be connected to TB2. Please refer to Section 8 (TB_Signal_Index value)
TB3	1 Byte	Selects which test bus to be connected to TB3. Please refer to Section 8 (TB_Signal_Index value)
TTB_SELECT	1 Byte	Selects which TB to be connected to the trigger sources. Please refer to Section 8 (TB_Signal_Index value)
RFU	4 Bytes	Send always 0x00000000
MISC_CONFIG	24 Bytes	Trigger occurrences, polarity etc. Please refer to [1] for understanding of CTS configuration to use.

4.10.2.2 Response

Table 77. CTS_CONFIGURE response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2] . Expected values are as below:

Table 77. CTS_CONFIGURE response value...continued

Payload Field	Length	Value/Description
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR

4.10.2.3 Event

There is no event for this instruction.

4.10.3 CTS_RETRIEVE_LOG

This instruction retrieves the data log of the captured test bus data samples stored in the memory buffer.

4.10.3.1 Command

Table 78. CTS_RETRIEVE_LOG command value

Payload Field	Length	Value/Description
ChunkSize	1 byte	0x01-0xFF Contains the number of bytes of data expected.

4.10.3.2 Response

Table 79. CTS_RETRIEVE_LOG response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present) PN5190_STATUS_SUCCSES_CHAINING
Log Data [1...n]	CTSRequest	Captured Samples Data chunk

Note:

Maximum size of 'Log Data' is depended upon the 'ChunkSize' that has been provided as part of the command.

Total Log size shall be available in the TLV header response.

4.10.3.3 Event

There is no event for this instruction.

4.11 TEST_MODE Commands

4.11.1 ANTENNA_SELF_TEST

This instruction is used to verify if the antenna is connected and the matching components are populated / assembled.

Note:

This command is not yet available. Please see the release notes for the availability.

4.11.2 PRBS_TEST

This instruction is used to generate the PRBS sequence for the different configurations of the Reader mode protocols and bit-rates. Once the instruction is executed, the PRBS test sequence will be available on RF.

Note:

Host should make sure that appropriate RF technology configuration is loaded using [Section 4.7.1](#) and RF is switched ON using [Section 4.8.1](#) command before sending this command.

4.11.2.1 Command

Table 80. PRBS_TEST command value

Payload Field	Length	Value/Description	
prbs_type	1 Byte	00	PRBS9(default)
		01	PRBS15
		02–FF	RFU

4.11.2.2 Response

Table 81. PRBS_TEST response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR PN5190_STATUS_NO_RF_FIELD

4.11.2.3 Event

There is no event for this instruction.

4.12 Chip Info Commands

4.12.1 GET_DIEID

This instruction is used to read-out the Die ID of the PN5190 chip.

4.12.1.1 Command

Table 82. GET_DIEID Command value

Payload Field	Length	Value/Description
-	-	No data in payload

4.12.1.2 Response

Table 83. GET_DIEID response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:

Table 83. GET_DIEID response value...continued

Payload Field	Length	Value/Description
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)
Values	16 Bytes	16 bytes DIE ID.

4.12.1.3 Event

There are no events for this command.

4.12.2 GET_VERSION

This instruction is used to read-out the HW version, ROM version and the FW version of the PN5190 chip.

4.12.2.1 Command

Table 84. GET_VERSION command value

Payload Field	Length	Value/Description
-	-	No data in payload

The GetVersion command in the Download Mode can be used to read-out HW version, ROM version and the FW version.

This feature is also available as a TLV command in Normal mode.

IC Type	HW Version (hex)	ROM Version (hex)	Model ID (hex)	FW Version (hex)
Triton A0	0x50	01	00	xx.xx
Triton B0	0x51	02	00	xx.xx
Triton B1	0x52	02	00	xx.xx
RFU	0x53	03	00	xx.xx

Example: Frame exchange in DL mode:

[HDLL] -> [0x00 0x04 0xE1 0x00 0x00 0x00 0x75 0x48]

[HDLL] <- [0x00 0x08 STAT HW_V RO_V MODEL_ID FM1V FM2V RFU1 RFU2 CRC16]

4.12.2.2 Response

Table 85. GET_VERSION response value

Payload Field	Length	Value/Description
Status	1 Byte	Status of the operation [Table 2]. Expected values are as below:
		PN5190_STATUS_SUCCESS PN5190_STATUS_INSTR_ERROR (No further data is present)
HW_V	1 byte	Hardware version
RO_V	1 byte	ROM code
FW_V	2 bytes	Firmware version (used for download)

Table 85. GET_VERSION response value...continued

Payload Field	Length	Value/Description
RFU1-RFU2	1-2 bytes	-

4.12.2.3 Event

There are no events for this command.

5 Encrypted secured Firmware Upload Mode

5.1 Introduction

Part of the PN5190 firmware code is permanently stored in the ROM, while the rest of the code and the data are stored in the embedded flash. User data is stored in flash and is protected by anti-tearing mechanisms that ensure the integrity and availability of the data. In order to provide NXP's customers with features that are compliant with the latest standards (EMVCo, NFC Forum etc.), both the code and user data in FLASH can be updated.

NXP is in charge of delivering new firmware updates, together with new User data. The update procedure must be equipped with a mechanism to protect the authenticity, integrity, and confidentiality of NXP code and data.

The authenticity and integrity are protected by asymmetric/symmetric key signature and reverse chained hash mechanism. The first SecuredWrite command contains the hash of the second command and is protected by an RSA signature. PN5190 firmware uses the RSA public key to authenticate the first command. The chained hash in each command is used to authenticate the subsequent command. To ensure that the firmware code and data are not accessed by third parties.

The payloads of the SecuredWrite commands are encrypted. After authentication of each command, the payload content is decrypted and written to flash by PN5190 firmware.

PN5190 supports two types of HDLL protocols as explained in subsequent sections.

The two types are:

- Legacy download protocol that works with all version of PN5190 ICs
- Hardware crypto assisted download protocol that works with only PN5190_SW_v1.1 onwards, that uses the on-chip hardware crypto blocks

The aim of this section is to detail the firmware update procedure and the commands available in the Firmware update mode.

5.2 Host Interface

As already mentioned in [Section 1.2](#), PN5190 has two main modes of operation to communicate with the host controller:

1. TLV-based command-response communications
2. HDLL-Based communications, only used when the PN5190 is triggered to enter the “secured Firmware upload” mode

In the next sub-chapters, we will

- First describe how to trigger the “secured Firmware upload” mode.
- Later we will describe HDLL (Host Data Link Layer) packets.
- Then, the mapping on SPI will be detailed.

5.2.1 How to trigger the “secured Firmware upload” mode

In order to force the Pn5190 to enter the “secured Firmware upload” mode, the DH has to follow the sequence described below.

There is only one option to enter the download mode, depending on the value of the configuration *bDwlReqLessBootEnabled*. When this configuration value is not enabled, there is no possibility to enter the download mode.

If the configuration *bDwlReqLessBootEnabled* is set to 1:

1. Generate a Hardware reset (In this option PN5190 enters either HDLL or Normal mode depending on the protocol of the first command)

PN5190 is now ready to receive commands in “secured Firmware upload” mode, using the HDLL framing.


To get out of the “secured Firmware upload” mode and come back to the Normal operation mode, the host has to generate a hardware reset.

PN5190 is now ready to receive Normal operation commands, assuming that the previous “secured Firmware upload” was successful.

5.2.2 Description of HDLL

HDLL is the link layer developed by NXP to ensure a reliable upload mode.

An HDLL message is made of a 2-Byte header, followed by a frame, comprising the OP code and the Payload of the command. Each message ends with a 16-bit CRC, as described on the picture below:

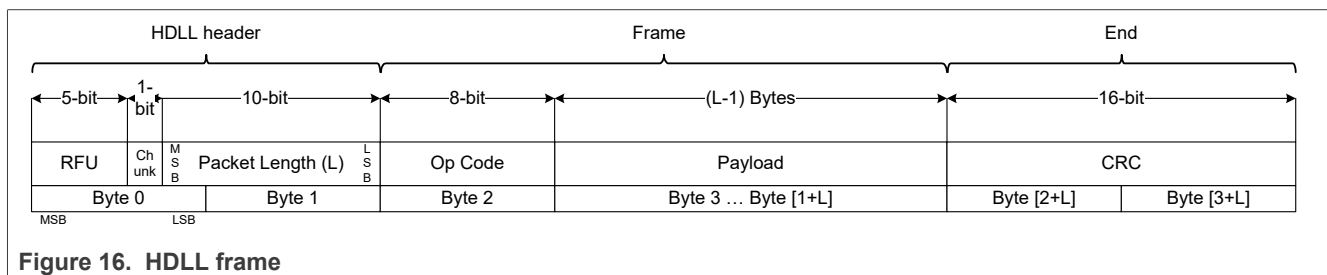

The HDLL header contains:

- A chunk bit, which indicates if this is the only or last chunk of a message (chunk = 0) or if at least one other chunk will follow (chunk = 1)
- The length of the Payload coded on 10 bits. So, the HDLL Frame Payload can go up to 1023 Bytes.

The byte order has been defined as Big Endian, meaning MSByte first.

The CRC16 is compliant to X.25 (CRC-CCITT, ISO/IEC13239) standard with polynome $x^{16} + x^{12} + x^5 + 1$ and preload value 0xFFFF.

It is calculated over the whole HDLL frame, i.e. Header + Frame.

Sample C-Code implementation:

```
static uint16_t phHal_Host_CalcCrc16(uint8_t* p, uint32_t
dwLength)
{
    uint32_t i ;
    uint16_t crc_new ;
    uint16_t crc = 0xffffU;
```

```

for (I = 0; i < dwLength; i++)
{
    crc_new = (uint8_t)(crc >> 8) | (crc << 8);
    crc_new ^= p[i];
    crc_new ^= (uint8_t)(crc_new & 0xff) >> 4;
    crc_new ^= crc_new << 12;
    crc_new ^= (crc_new & 0xff) << 5;
    crc = crc_new;
}
return crc;
}

```

5.2.3 Transport mapping over the SPI

5.2.3.1 Write Sequence from the host (direction DH => PN5190)

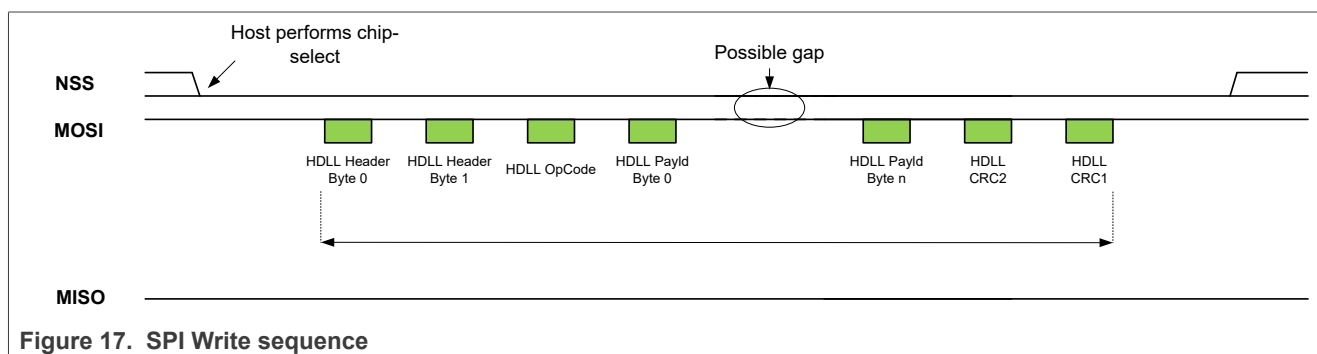


Figure 17. SPI Write sequence

5.2.3.2 Read Sequence from the host (Direction PN5190 => DH)

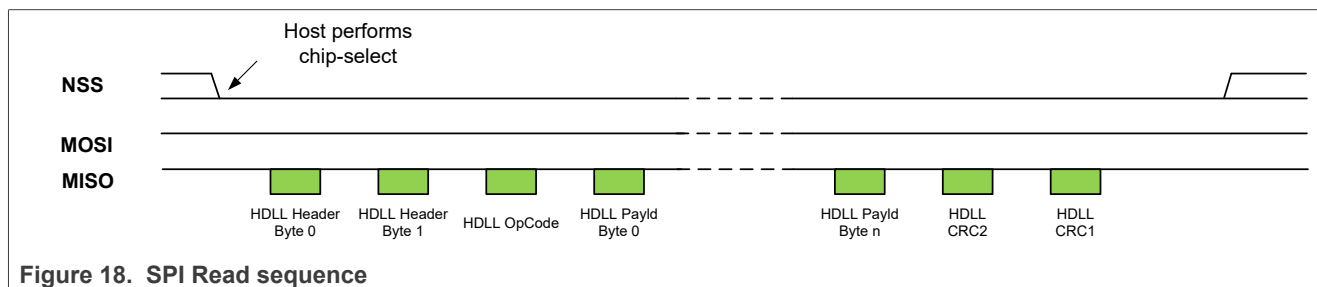


Figure 18. SPI Read sequence

5.3 Firmware signature and Version Control

In the PN5190 upload mode, a mechanism ensures that only a firmware signed and delivered by NXP will be accepted.

During an upload session, a new 16 bits firmware version is sent. It is composed of a major and a minor number:

1. Major number: 8 bits (MSB)

2. Minor number: 8 bits (LSB)

The PN5190 checks if the new major version number is bigger or equal to the current one. If not, the secured firmware upload is rejected, and the session is kept closed.

The firmware version number is anti-tearing tampered.

5.4 Upload procedure in Operation state

Only one single upload procedure exists whatever the PN5190 is in customer production line or in the field.

Pre-condition: PN5190 is in Operation state.

Main scenario:

1. If the configuration *bDwlReqLessBootEnabled* is set to 1:
 - a. DH performs hard reset on Device
2. DH reads the current hardware and firmware version from the Device
 - a. DH checks session status if last download was completed
 - b. DH applies the version checking rules to decide whether to start the download or exit download.
3. DH loads from a file the firmware binary code to be downloaded
4. DH provides a first secured write command that contains:
 - a. The version of the new firmware,
 - b. A 16-byte nonce of arbitrary values used for encryption key obfuscation
 - c. A digest value of the next frame,
 - d. The digital signature of the frame itself
5. The DH loads the secure download protocol sequence to the PN5190 with secured write commands
6. When the last secured write command has been sent, the DH executes the *CheckIntegrity* command to check if the memories have been successfully written.
7. DH reads the new firmware version and checks the session status if closed for reporting to the upper layer
8. DH performs hard reset on the device to reboot the PN5190

Post-Condition: The firmware is updated; new firmware version number is reported.

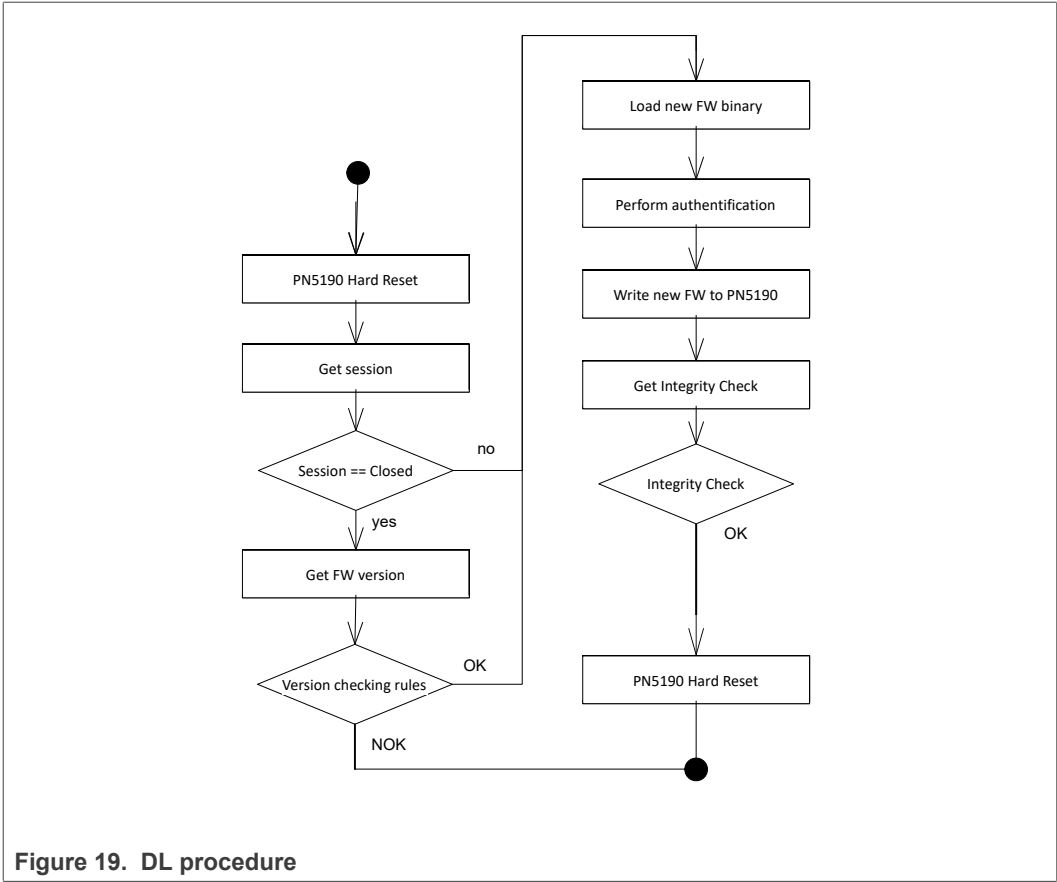


Figure 19. DL procedure

5.5 HDLL commands for Legacy Encrypted Download(LEDL)

5.5.1 HDLL protocol

5.5.1.1 Introduction

HDLL is a command response protocol. All the operations mentioned above are triggered through a specific command and validated based on the response.

Commands and responses follow HDLL message syntax (see [Figure 16](#)), the command being sent by the DH, the response by the PN5190. The OP code indicates the command and response type.

5.5.1.2 HDLL Command OP codes

Note: HDLL command frames are 4 bytes aligned. Unused payload bytes are left nil.

Table 86. List of HDLL command OP codes

OP Code	Command Alias	Description
0xF0	DL_RESET	Performs a soft reset
0xF1	DL_GET_VERSION	Returns the version numbers
0xF2	DL_GET_SESSION_STATE	Returns the current session state

Table 86. List of HDLL command OP codes...continued

OP Code	Command Alias	Description
0xF4	DL_GET_DIE_ID	Returns the Die ID
0xE0	DL_CHECK_INTEGRITY	Checks and return the CRCs over the different areas as well as pass/fail status flags for each
0xC0	DL_SEC_WRITE	Writes x bytes to memory starting at absolute address y

5.5.1.3 HDLL Response OP codes

Note: HDLL response frames are 4 bytes aligned. Unused payload bytes are left nil. Only DL_OK responses can contain payload values.

Table 87. List of HDLL response OP codes

OP Code	Response Alias	Description
0x00	DL_OK	Command passed
0x01	DL_INVALID_ADDR	Address not allowed
0x0B	DL_UNKNOW_CMD	Unknown command
0x0C	DL_ABORTED_CMD	Chunk seq. is too large
0x1E	DL_ADDR_RANGE_OFL_ERROR	Address out of range
0x1F	DL_BUFFER_OFL_ERROR	Buffer is too small
0x20	DL_MEM_BSY	Memory busy
0x21	DL_SIGNATURE_ERROR	Signature mismatch
0x24	DL_FIRMWARE_VERSION_ERROR	Current version equal or higher
0x28	DL_PROTOCOL_ERROR	Protocol error
0x2A	DL_SFWU_DEGRADED	Flash data corruption
0x2D	PH_STATUS_DL_FIRST_CHUNK	First chunk received
0x2E	PH_STATUS_DL_NEXT_CHUNK	Wait for the next chunk
0xC5	PH_STATUS_INTERNAL_ERROR_5	Length mismatch

5.5.2 Reset command

Frame exchange:

```
[HDLL] -> [0x00 0x04 0xF0 0x00 0x00 0x00 0x18 0x5B]
```

5.5.3 Get version command

Frame exchange:

```
[HDLL] -> [0x00 0x04 0xF1 0x00 0x6E 0xEF]
```

```
[HDLL] <- [0x00 0x08 STAT HW_V RO_V MODEL_ID FM1V FM2V RFU1 RFU2
CRC16]
```

The payload frame of the GetVersion response is:

Table 88. Response to the GetVersion command

Field	Byte	Description
STAT	1	Status
HW_V	2	Hardware version
RO_V	3	ROM code
MODEL_ID	4	Model ID
FMxV	5-6	Firmware version (used for download)
RFU1-RFU2	7-8	-

5.5.4 Get session state command

Frame exchange:

[HDLL] -> [0x00 0x04 0xF2 0x00 0x00 0x00 0xF5 0x33]

[HDLL] <- [0x00 0x04 STAT SSTA RFU CRC16]

The payload frame of the GetSession response is:

Table 89. Response to the GetSession command

Field	Byte	Description
STAT	1	Status
SSTA	2	Session state <ul style="list-style-type: none"> • 0: closed • 1: open • 2: locked (download no more allowed)
RFU	3-4	

5.5.5 Get die ID command

Frame exchange:

[HDLL] -> [0x00 0x04 0xF4 0x00 0x00 0x00 0xD2 0xAA]

[HDLL] <- [0x00 0x14 STAT 0x00 0x00 0x00 ID0 ID1 ID2 ID3 ID4 ID5 ID6 ID7 ID8 ID9 ID10 ID11 ID12 ID13 ID14 ID15 CRC16]

The payload frame of the GetDieID response is:

Table 90. Response to the GetDieID command

Field	Byte	Description
STAT	1	Status
RFU	2-4	
DIEID	5-20	ID of the Die (16 bytes)

5.5.6 Check integrity command

Frame exchange:

[HDLL] -> [0x00 0x04 0xE0 0x00 0x00 0x00 CRC16]

```
[HDLL] <- [0 x00 0x20 STAT LEN_DATA LEN_CODE 0x00 [CRC_INFO]
[CRC32] CRC16]
```

The payload frame of the CheckIntegrity response is:

Table 91. Response to the GetDield command

Field	Byte	Description
STAT	1	Status
LEN_DATA	2	Number of data sections
LEN_CODE	3	Number of code sections
RFU	4	
[CRC_INFO]	5-8	32 bits --- if a bit is set, the CRC of the corresponding section is checked OK, otherwise KO
[CRC32]	9-136	CRC32 of the 32 sections

5.5.7 Secure Write command

The secure write command is to be considered in the context of a sequence of secure write commands: the encrypted “secured Firmware upload” (often referred to as eSFwu).

The secure write command first opens the download session and passes the RSA authentication. The next ones are passing encrypted addresses and bytes to write into the PN5190 Flash. All but the last one contains the next one hash, therefore informing they are not the last, and cryptographically bonding the sequence frames together.

Other commands (except DL_RESET and DL_CHECK_INTEGRITY) can be inserted between the secured write commands of a sequence without breaking it.

5.5.7.1 First Secured Write command

A secured write command is the first one if and only if:

1. The OP code is 0xC0
2. The frame length is 312 bytes
3. No secured write command has been received since last reset.
4. The embedded signature is successfully verified by the PN5190

Here is the **first** frame format exchange:

```
[HDLL] -> [FLEN 0xC0 REGN VERS NONCE HASH SIGN CRC16]
[HDLL] <- [0x00 0x04 STAT 0x00 0x00 0x00 CRC16]
```

FLEN is the size of frame payload (bit 0 to 9 of the 2 first bytes): 0x0134 = 308 for the first frame

REGN is 0x00 – NXP Firmware region; 0x01 – Customer Firmware region.

VERS is the 16 bits version of the firmware update sequence.

NONCE is 16 bytes arbitrary data used for encryption key obfuscation.

HASH is the 32 bytes digest of the 2nd frame.

SIGN is the 256 bytes digital signature of the first frame.

STAT is the return status.

At least one chunk of data must be written during an eSFWu even though the data written may only be one-byte long. Therefore, the first command will always contain the hash of the next command, since there will at least be two commands.

5.5.7.2 Middle Secured Write command

A secured write command is a 'middle one' if and only if:

1. The OP code is 0xC0
2. A first secured write command has already been received and successfully verified before
3. No reset has occurred since receiving the first secured write command
4. The frame length is equal to the data size + header size + hash size: $FLEN = SIZE + 6 + 32$
5. The digest of the whole frame is equal to the hash value received in the previous frame

Here is a **middle** frame format exchange:

```
[HDLL] -> [FLEN 0xC0 SIZE ADDR {DATA} HASH CRC16]
```

```
[HDLL] <- [0x00 0x04 STAT 0x00 0x00 0x00 CRC16]
```

STAT is the return status.

FLEN is the size of frame (bit 0 to 9 of the 2 first bytes)

SIZE is the 16 bits size of data.

!! Data size max value is 512.

ADDR is the 24 bits address of the data to write flash.

!! ADDR is encrypted.

{DATA} is the chunk of data.

!! DATA is encrypted.

HASH is the 32 bytes digest of the next frame.

5.5.7.3 Last Secured Write command

A secured write command is the last one if and only if:

1. The OP code is 0xC0
2. A first secured write command has already been received and successfully verified before
3. No reset has occurred since receiving the first secured write command
4. The frame length is equal to the data size + header size: $FLEN = SIZE + 6$
5. The digest of the whole frame is equal to the hash value received in the previous frame

Here is the **last** frame format exchange:

```
[HDLL] -> [FLEN 0xC0 SIZE ADDR {DATA} CRC16]
```

```
[HDLL] <- [0x00 0x04 STAT 0x00 0x00 0x00 CRC16]
```

STAT is the return status.

FLEN is the size of frame (bit 0 to 9 of the 2 first bytes)

SIZE is the 16 bits size of data.

⚠ Data size max value is 512.

ADDR is the 24 bits address of the data to write in flash.

⚠ ADDR is encrypted.

{DATA} is the chunk of data.

⚠ DATA is encrypted.

5.6 HDLL commands for Hardware Crypto Assisted Encrypted Download (HWCEDL)

This section provides the information about the commands and responses for hardware crypto assisted encrypted download for both NXP firmware and customer firmware.

5.6.1 HDLL protocol

5.6.1.1 Introduction

HDLL is a command response protocol. All the operations mentioned above are triggered through a specific command and validated based on the response. After a hard reset, HWCEDL mode will be entered if any of the commands from Table 89 is issued.

Commands and responses follow HDLL message syntax (see [Figure 16](#)), the command being sent by the DH, the response by the PN5190. The OP code indicates the command and response type.

5.6.1.2 HDLL Command OP codes

Note: HDLL command frames are 4 bytes aligned. Unused payload bytes are left nil.

Table 92. List of HDLL command OP codes

OP Code	Command Alias	Description
0xE5	DL_RESET	Performs a soft reset
0xE1	DL_GET_VERSION	Returns the version numbers
0xDB	DL_GET_SESSION_STATE	Returns the current session state
0xDF	DL_GET_DIE_ID	Returns the Die ID
0xE7	DL_CHECK_INTEGRITY	Checks and return the CRCs over the different areas as well as pass/fail status flags for each
0x8C	DL_SEC_WRITE	Writes x bytes to memory starting at absolute address y

5.6.1.3 HDLL Response OP codes

Note: HDLL response frames are 4 bytes aligned. Unused payload bytes are left nil. Only DL_OK responses can contain payload values.

Table 93. List of HDLL response OP codes

OP Code	Response Alias	Description
0x00	DL_OK	Command passed

Table 93. List of HDLL response OP codes...continued

OP Code	Response Alias	Description
0x01	DL_INVALID_ADDR	Address not allowed
0x0B	DL_UNKNOW_CMD	Unknown command
0x0C	DL_ABORTED_CMD	Chunk seq. is too large
0x1E	DL_ADDR_RANGE_OFL_ERROR	Address out of range
0x1F	DL_BUFFER_OFL_ERROR	Buffer is too small
0x20	DL_MEM_BSY	Memory busy
0x21	DL_SIGNATURE_ERROR	Signature mismatch
0x24	DL_FIRMWARE_VERSION_ERROR	Current version equal or higher
0x28	DL_PROTOCOL_ERROR	Protocol error
0x2A	DL_SFWU_DEGRADED	Flash data corruption
0x2D	PH_STATUS_DL_FIRST_CHUNK	First chunk received
0x2E	PH_STATUS_DL_NEXT_CHUNK	Wait for the next chunk
0xC5	PH_STATUS_INTERNAL_ERROR_5	Length mismatch

5.6.2 Reset command

Frame exchange:

[HDLL] -> [0x00 0x04 0xE5 0x00 0x00 0x00 0xBF 0xB9]

[HDLL] <- [0x00 0x04 STAT 0x00 CRC16]

The reset prevents the PN5190 from sending the DL_STATUS_OK answer. Thus, only erroneous status can be received.

STAT is the return status.

5.6.3 Get version command

Frame exchange:

[HDLL] -> [0x00 0x04 0xE1 0x00 0x00 0x00 0x75 0x48]

[HDLL] <- [0x00 0x08 STAT HW_V RO_V MODEL_ID FM1V FM2V RFU1 RFU2 CRC16]

The payload frame of the GetVersion response is:

Table 94. Response to the GetVersion command

Field	Byte	Description
STAT	1	Status
HW_V	2	Hardware version
RO_V	3	ROM code
MODEL_ID	4	Model ID
FMxV	5-6	Firmware version (used for download)
RFU1-RFU2	7-8	-

5.6.4 Get session state command

Frame exchange:

```
[HDLL] -> [0x00 0x04 0xDB 0x00 0x00 0x00 0x31 0x0A]
```

```
[HDLL] <- [0x00 0x04 STAT SSTA RFU CRC16]
```

The payload frame of the GetSession response is:

Table 95. Response to the GetSession command

Field	Byte	Description
STAT	1	Status
SSTA	2	Session state <ul style="list-style-type: none"> • 0: closed • 1: open • 2: locked (download no more allowed)
RFU	3-4	

5.6.5 Get die ID command

Frame exchange:

```
[HDLL] -> [0x00 0x04 0xDF 0x00 0x00 0x00 0xFB 0xFB]
```

```
[HDLL] <- [0x00 0x14 STAT 0x00 0x00 0x00 ID0 ID1 ID2 ID3 ID4 ID5
ID6 ID7 ID8 ID9 ID10 ID11 ID12 ID13 ID14 ID15 CRC16]
```

The payload frame of the GetDieID response is:

Table 96. Response to the GetDieID command

Field	Byte	Description
STAT	1	Status
RFU	2-4	
DIEID	5-20	ID of the Die (16 bytes)

5.6.6 Check integrity command

Frame exchange:

```
[HDLL] -> [0x00 0x04 0xE7 0x00 0x00 0x00 CRC16]
```

```
[HDLL] <- [0 x00 0x88 STAT LEN_DATA LEN_CODE 0x00 [CRC_INFO]
[CRC32] CRC16]
```

The payload frame of the CheckIntegrity response is:

Table 97. Response to the CheckIntegrity command

Field	Byte	Value/Description
STAT	1	Status
LEN_DATA	2	Total number of data sections
LEN_CODE	3	Total number of code sections
RFU	4	Reserved

Table 97. Response to the CheckIntegrity command...continued

Field	Byte	Value/Description		
[CRC_INFO]	5-8	32 bits (little-endian). If a bit is set, the CRC of the corresponding section is OK, otherwise Not OK.		
		Bit	Description	Note
		[31:28]	Reserved	[3]
		[27:23]	Reserved	[1]
		[22]	Reserved	[3]
		[21]	Reserved	[1]
		[20]	Reserved	[3]
		[19]	RF Configuration Area	[2]
		[18]	Protocol Configuration Area	[2]
		[17:4]	Reserved	[3]
		[3:0]	Reserved	[1]
[CRC32]	9-136	CRC32 of the 32 sections. Each CRC is of 4 bytes stored in little-endian format. First 4-bytes of CRC is of bit CRC_INFO[31], next 4-bytes of CRC is of bit CRC_INFO[30] and so on.		

[1] This bit must be set to 1 for the PN5190 to function properly (with features and or encrypted FW download).

[2] This bit is set to 1 by default, but user modified settings will invalidate the CRC. No effect on PN5190 functionality.

[3] This bit value is not relevant for the user and shall be ignored.

5.6.7 Secure Write command

The secure write command is to be considered in the context of a sequence of secure write commands: the encrypted “secured Firmware upload” (often referred to as eSFWu).

The secure write command first opens the download session and passes the RSA authentication. The next ones are passing encrypted addresses and bytes to write into the PN5190 Flash. All but the last one contains the next one hash, therefore informing they are not the last, and cryptographically bonding the sequence frames together.

Other commands (except DL_RESET and DL_CHECK_INTEGRITY) can be inserted between the secured write commands of a sequence without breaking it.

5.6.7.1 First Secured Write command

A secured write command is the first one if and only if:

1. The OP code is 0x8C
2. The frame length is 312 bytes
3. No secured write command has been received since last reset.
4. The embedded signature is successfully verified by the PN5190

Here is the **first** frame format exchange:

```
[HDLL] -> [FLEN 0x8C 0x0A VERS NONCE HASH SIGN CRC16]
```

[HDLL] <- [0x00 0x04 STAT 0x00 0x00 0x00 CRC16]

FLEN is the size of frame payload (bit 0 to 9 of the 2 first bytes): 0x0134 = 308 for the first frame

REGN is 0x0A – NXP Firmware region.

VERS is the 16 bits version of the firmware update sequence.

NONCE is 16 bytes arbitrary data used for encryption key obfuscation.

HASH is the 32 bytes digest of the 2nd frame.

SIGN is the 256 bytes digital signature of the first frame.

STAT is the return status.

At least one chunk of data must be written during an eSFWu even though the data written may only be one-byte long. Therefore, the first command will always contain the hash of the next command, since there will at least be two commands.

5.6.7.2 Middle Secured Write command

A secured write command is a 'middle one' if and only if:

1. The OP code is 0x8C
2. A first secured write command has already been received and successfully verified before
3. No reset has occurred since receiving the first secured write command
4. The frame length is equal to the data size + header size + hash size: $FLEN = SIZE + 6 + 32$
5. The digest of the whole frame is equal to the hash value received in the previous frame

Here is a **middle** frame format exchange:

[HDLL] -> [FLEN 0x8C SIZE ADDR {DATA} HASH CRC16]

[HDLL] <- [0x00 0x04 STAT 0x00 0x00 0x00 CRC16]

STAT is the return status.

FLEN is the size of frame (bit 0 to 9 of the 2 first bytes)

SIZE is the 16 bits size of data.

!! Data size max value is 512.

ADDR is the 24 bits address of the data to write flash.

!! ADDR is encrypted.

{DATA} is the chunk of data.

!! DATA is encrypted.

HASH is the 32 bytes digest of the next frame.

5.6.7.3 Last Secured Write command

A secured write command is the last one if and only if:

1. The OP code is 0x8C

2. A first secured write command has already been received and successfully verified before
3. No reset has occurred since receiving the first secured write command
4. The frame length is equal to the data size + header size: $FLEN = SIZE + 6$
5. The digest of the whole frame is equal to the hash value received in the previous frame

Here is the **last** frame format exchange:

```
[HDLL] -> [FLEN 0x8C SIZE ADDR {DATA} CRC16]
```

```
[HDLL] <- [0x00 0x04 STAT 0x00 0x00 0x00 CRC16]
```

STAT is the return status.

FLEN is the size of frame (bit 0 to 9 of the 2 first bytes)

SIZE is the 16 bits size of data.

!! Data size max value is 512.

ADDR is the 24 bits address of the data to write in flash.

!! ADDR is encrypted.

{DATA} is the chunk of data.

!! DATA is encrypted.

6 Appendix (Examples)

This appendix consists of the examples for the above mentioned commands. The examples are only for illustrative purpose to show the contents of command.

6.1 Example for WRITE_REGISTER

Following sequence of data sent from host to write a 0x12345678 value into register 0x1F.

Command frame sent to PN5190: *0000051F78563412*

Host to wait for an interrupt.

When host reads the response frame received from PN5190 (indicating successful operation): *00000100*

6.2 Example for WRITE_REGISTER_OR_MASK

Following sequence of data sent from host to perform logical OR operation on register 0x1F with a mask as 0x12345678

Command frame sent to PN5190: *0100051F78563412*

Host to wait for an interrupt.

When host reads the response frame received from PN5190 (indicating successful operation): *01000100*

6.3 Example for WRITE_REGISTER_AND_MASK

Following sequence of data sent from host to perform logical AND operation on register 0x1F with a mask as 0x12345678

Command frame sent to PN5190: *0200051F78563412*

Host to wait for an interrupt.

When host reads the response frame received from PN5190 (indicating successful operation): *02000100*

6.4 Example for WRITE_REGISTER_MULTIPLE

Following sequence of data sent from host to perform logical AND operation on register 0x1F with a mask as 0x12345678, and on logical OR operation on register 0x20 with a mask as 0x11223344, and a write to register 0x21 with a value as 0xAABBCCDD.

Command frame sent to PN5190: *0300121F03785634122002443322112101
DDCCBBAA*

Host to wait for an interrupt.

When host reads the response frame received from PN5190 (indicating successful operation): *03000100*

6.5 Example for READ_REGISTER

Following sequence of data sent from host to read the contents of register 0x1F and assuming the register has the value of 0x12345678

Command frame sent to PN5190: 0400011F

Host to wait for an interrupt.

When host reads the response frame received from PN5190 (indicating successful operation): 0400050078563412

6.6 Example for READ_REGISTER_MULTIPLE

Following sequence of data sent from host to read the contents of registers 0x1F that contain the value of 0x12345678, and register 0x25 that contain the value of 0x11223344

Command frame sent to PN5190: 0500021F25

Host to wait for an interrupt.

When host read the response, frame received from PN5190 (indicating successful operation): 050009007856341244332211

6.7 Example for WRITE_E2PROM

Following sequence of data sent from host to write to E2PROM locations 0x0130 to 0x0134 with the contents as 0x11, 0x22, 0x33, 0x44, 0x55

Command frame sent to PN5190: 06000730011122334455

Host to wait for an interrupt.

When host reads the response, frame received from PN5190 (indicating successful operation): 06000100

6.8 Example for READ_E2PROM

Following sequence of data sent from host to read from E2PROM locations 0x0130 to 0x0134 where the contents stored are: 0x11, 0x22, 0x33, 0x44, 0x55

Command frame sent to PN5190: 07000430010500

Host to wait for an interrupt.

When host read the response, frame received from PN5190 (indicating successful operation): 070006001122334455

6.9 Example for TRANSMIT_RF_DATA

Following sequence of data sent from host to send a REQA command (0x26), with number of bits to be transmitted as '0x07', assuming that required registers are set before and RF is switched ON.

Command frame sent to PN5190: 0800020726

Host to wait for an interrupt.

When host reads the response, frame received from PN5190 (indicating successful operation): 08000100

6.10 Example for RETREIVE_RF_DATA

Following sequence of data sent from host to receive the data received/stored in the internal CLIF buffer (assuming that 0x05 was received), assuming that a TRANSMIT_RF_DATA is already sent after RF is switched ON.

Command frame sent to PN5190: 090000

Host to wait for an interrupt.

When host reads the response, frame received from PN5190 (indicating successful operation): 090003000400

6.11 Example for EXCHANGE_RF_DATA

Following sequence of data sent from host to transmit a REQA (0x26), with number of bits in last byte to send set as 0x07, with all status to be received along with the data. Assumption is that required RF registers are already set and RF is switched ON.

Command frame sent to PN5190: 0A0003070F26

Host to wait for an interrupt.

When host read the response, frame received from PN5190 (indicating successful operation): 0A000F0002000000000000200000000004400

6.12 Example for LOAD_RF_CONFIGURATION

Following sequence of data sent from host to set the RF configuration. For TX, 0x00 and for RX, 0x80

Command frame sent to PN5190: 0D00020080

Host to wait for an interrupt.

When host reads the response, frame received from PN5190 (indicating successful operation): 0D000100

6.13 Example for UPDATE_RF_CONFIGURATION

Following sequence of data sent from host to update the RF configuration. For TX, 0x00, with register address for CLIF_CRC_TX_CONFIG and value as 0x00000001

Command frame sent to PN5190: 0E0006001201000000

Host to wait for an interrupt.

When host read the response, frame received from PN5190 (indicating successful operation): 0E000100

6.14 Example for RF_ON

Following sequence of data sent from host to switch ON the RF field using collision avoidance and No P2P active. It is assumed, the corresponding RF TX and RX configuration are already set in PN5190.

Command frame sent to PN5190: 10000100

Host to wait for an interrupt.

When host reads the response, frame received from PN5190 (indicating successful operation): 10000100

6.15 Example for RF_OFF

Following sequence of data sent from host to switch OFF the RF field.

Command frame sent to PN5190: 110000

Host to wait for an interrupt.

When host reads the response, frame received from PN5190 (indicating successful operation): 11000100

7 Appendix (RF Protocol configuration indexes)

This appendix consists of the RF protocol configuration indexes supported by the PN5190.

The TX and RX config settings have to be used in [Section 4.7.1](#), [Section 4.7.2](#), [Section 4.7.3](#) commands.

	TX					RX				
	Setting	Protocol	alternate	Speed	Modulation	Setting	Protocol	alternate	Speed	Modulation
P C D	0x00	ISO14443A	NFC-PI-106, NFC-AI-106	106	Miller	0x80	ISO14443A	NFC-PI-106, NFC-AI-106	106	Manch SubC
	0x01	ISO14443A		212	Miller	0x81	ISO14443A		212	BPSK
	0x02	ISO14443A		424	Miller	0x82	ISO14443A		424	BPSK
	0x03	ISO14443A		848	Miller	0x83	ISO14443A		848	BPSK
	0x04	ISO14443B		106	NRZ	0x84	ISO14443B		106	BPSK
	0x05	ISO14443B		212	NRZ	0x85	ISO14443B		212	BPSK
	0x06	ISO14443B		424	NRZ	0x86	ISO14443B		424	BPSK
	0x07	ISO14443B		848	NRZ	0x87	ISO14443B		848	BPSK
	0x08	Felica	NFC-PI-212, NFC-AI-212	212		0x88	Felica	NFC-PI-212, NFC-AI-212	212	
	0x09	Felica	NFC-PI-424, NFC-AI-424	424		0x89	Felica	NFC-PI-424, NFC-AI-424	424	
	0x0a	ISO15693 ASK100		26	1out4/ASK100	0x8a	ISO15693		696	Manch424
	0x0b	ISO15693 ASK10		26	1out4/ASK10	0x8b	ISO15693		26	Manch424
P I C C	0x0c					0x8c	ISO15693		53	Manch424
	0x0d					0x8d	ISO15693		106	Plutus
	0x0e					0x8e	ISO15693		212	Plutus
	0x0f	ISO180003m3		TARI=18.88us	ASK	0x8f	ISO180003m3 Manch424_4		106	Manch424/4 period
	0x10	ISO180003m3		TARI=9.44us	ASK	0x90	ISO180003m3 Manch424_2		212	Manch424/2 period
	0x11					0x91	ISO180003m3 Manch848_4		212	Manch848/4 period
	0x12					0x92	ISO180003m3 Manch848_2		424	Manch848/2 period
	0x13	ISO14443A-PICC	NFC-PT-106	106	Manch SubC	0x93	ISO14443A-PICC	NFC-PT-106	106	Miller
	0x14	ISO14443A-PICC		212	BPSK	0x94	ISO14443A-PICC		212	Miller
	0x15	ISO14443A-PICC		424	BPSK	0x95	ISO14443A-PICC		424	Miller
	0x16	ISO14443A-PICC		848	BPSK	0x96	ISO14443A-PICC		848	Miller
	0x17	NFC-PT-212		212		0x97	NFC-PT-212		212	
P I C C	0x18	NFC-PT-424		424		0x98	NFC-PT-424		424	
	0x19	NFC-AT-106		106		0x99	NFC-AT-106		106	
	0x1a	NFC-AT-212		212		0x9a	NFC-AT-212		212	
	0x1b	NFC-AT-424		424		0x9b	NFC-AT-424		424	
	0x1c	GTM			All	0x9c	GTM			All
	0x1d	B_Prime		All	All	0x9d	B_Prime		All	All
	0xFF	NO		CHANGE		0x9E	Boot		All	
	0xFF	NOT		DEFINED		0xFF	NO		CHANGE	

Figure 20. RF Protocol configuration indexes

8 Appendix (CTS and TESTBUS signals)

Below table specifies the different signals available from PN5190 to capture using CTS instructions ([Section 4.10](#)) and TESTBUS instructions.

Serial Number	TB_Signal	Name	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
17	0x6c	obs_clf_sigpro_rm4	signal_active	mf_pt_s0_d[14:8]						
18	0x6d	obs_clf_sigpro_rm5	mf_pt_s0_d[7:0]							
19	0x6e	obs_clf_sigpro_rm6	rm_disp_enable_o	mf_pt_s1_d[14:8]						
20	0x6f	obs_clf_sigpro_rm7	mf_pt_s1_d[7:0]							
21	0x70	obs_clf_sigpro_rm8	rm_sdata_o	sync_filt_out[14:8]						
22	0x71	obs_clf_sigpro_rm9	sync_filt_out[7:0]							
29	0x78	obs_clf_tbccontrol_patchbox0	adc_data_i[9:2]							
30	0x79	obs_clf_tbccontrol_patchbox1	adc_data_i[0]	adc_data_i[0]						
31	0x7a	obs_clf_tbccontrol_patchbox2	adc_data_q[9:2]							
32	0x7b	obs_clf_tbccontrol_patchbox3	adc_data_q[0]	adc_data_q[0]						
35	0x96	obs_clf_tbccontrol_patchbox14								
41	0x9b	obs_clf_txenc1	bit_gen_enable	symbol_enable	tx_enable_o	tx_active	tx_state[2:0]			tx_rate_enable
44	0x42	obs_clf_txdec0	mpp_imsig[3:0]				mpp_idata[1:0]		mstate[1:0]	
45	0x45	obs_clf_txdec3	fp_flg_par_ignored	fp_ieof	fp_flg_par_irrelevant	fp_flg_colon_detected	fp_byte_dmark	fp_state	fp_phase[1:0]	
47	0x68	obs_clf_sigpro_rm0	rm_disp_enable_o	rm_cor_adc_i_o[14:8]						
48	0x69	obs_clf_sigpro_rm1	rm_cor_adc_i_o[7:0]							
49	0x6a	obs_clf_sigpro_rm2	rm_disp_enable_o	rm_cor_adc_q_o[14:8]						
50	0x6b	obs_clf_sigpro_rm3	rm_cor_adc_q_o[7:0]							

Figure 21. CTS and TESTBUS signals

These have to be used for [Section 4.9.1](#), [Section 4.9.2](#), [Section 4.10.2](#) command.

9 Abbreviations

Table 98. Abbreviations

Abbr.	Meaning
CLK	Clock
DWL_REQ	Download Request pin (also called DL_REQ)
EEPROM	Electrically Erasable Programmable Read Only Memory
FW	Firmware
GND	Ground
GPIO	General Purpose Input Output
HW	Hardware
I ² C	Inter-Integrated Circuit (serial data bus)
IRQ	Interrupt Request
ISO/IEC	International Standard Organization / International Electrotechnical Community
NFC	Near Field Communication
OS	Operating System
PCD	Proximity Coupling Device (Contactless reader)
PICC	Proximity Integrated Circuit Card (Contactless card)
PMU	Power Management unit
POR	Power On Reset
RF	Radiofrequency
RST	Reset
SPI	Serial Peripheral Interface
VEN	V Enable pin

10 References

- [1] CTS configuration part of NFC Cockpit, <https://www.nxp.com/products/:NFC-COCKPIT>
- [2] PN5190 IC data sheet, <https://www.nxp.com/docs/en/data-sheet/PN5190.pdf>

11 Legal information

11.1 Data sheet status

Document status ^{[1][2]}	Product status ^[3]	Definition
Objective [short] data sheet	Development	This document contains data from the objective specification for product development.
Preliminary [short] data sheet	Qualification	This document contains data from the preliminary specification.
Product [short] data sheet	Production	This document contains the product specification.

[1] Please consult the most recently issued document before initiating or completing a design.

[2] The term 'short data sheet' is explained in section "Definitions".

[3] The product status of device(s) described in this document may have changed since this document was published and may differ in case of multiple devices. The latest product status information is available on the Internet at URL <http://www.nxp.com>.

11.2 Definitions

Draft — A draft status on a document indicates that the content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included in a draft version of a document and shall have no liability for the consequences of use of such information.

Short data sheet — A short data sheet is an extract from a full data sheet with the same product type number(s) and title. A short data sheet is intended for quick reference only and should not be relied upon to contain detailed and full information. For detailed and full information see the relevant full data sheet, which is available on request via the local NXP Semiconductors sales office. In case of any inconsistency or conflict with the short data sheet, the full data sheet shall prevail.

Product specification — The information and data provided in a Product data sheet shall define the specification of the product as agreed between NXP Semiconductors and its customer, unless NXP Semiconductors and customer have explicitly agreed otherwise in writing. In no event however, shall an agreement be valid in which the NXP Semiconductors product is deemed to offer functions and qualities beyond those described in the Product data sheet.

11.3 Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Limiting values — Stress above one or more limiting values (as defined in the Absolute Maximum Ratings System of IEC 60134) will cause permanent damage to the device. Limiting values are stress ratings only and (proper) operation of the device at these or any other conditions above those given in the Recommended operating conditions section (if present) or the Characteristics sections of this document is not warranted. Constant or repeated exposure to limiting values will permanently and irreversibly affect the quality and reliability of the device.

Terms and conditions of commercial sale — NXP Semiconductors products are sold subject to the general terms and conditions of commercial sale, as published at <http://www.nxp.com/profile/terms>, unless otherwise agreed in a valid written individual agreement. In case an individual agreement is concluded only the terms and conditions of the respective agreement shall apply. NXP Semiconductors hereby expressly objects to applying the customer's general terms and conditions with regard to the purchase of NXP Semiconductors products by customer.

No offer to sell or license — Nothing in this document may be interpreted or construed as an offer to sell products that is open for acceptance or the grant, conveyance or implication of any license under any copyrights, patents or other industrial or intellectual property rights.

Quick reference data — The Quick reference data is an extract of the product data given in the Limiting values and Characteristics sections of this document, and as such is not complete, exhaustive or legally binding.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

Suitability for use in non-automotive qualified products — Unless this data sheet expressly states that this specific NXP Semiconductors product is automotive qualified, the product is not suitable for automotive use. It is neither qualified nor tested in accordance with automotive testing or application requirements. NXP Semiconductors accepts no liability for inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

In the event that customer uses the product for design-in and use in automotive applications to automotive specifications and standards, customer (a) shall use the product without NXP Semiconductors' warranty of the product for such automotive applications, use and specifications, and (b) whenever customer uses the product for automotive applications beyond NXP Semiconductors' specifications such use shall be solely at customer's own risk, and (c) customer fully indemnifies NXP Semiconductors for any liability, damages or failed product claims resulting from customer design and use of the product for automotive applications beyond NXP Semiconductors' standard warranty and NXP Semiconductors' product specifications.

Translations — A non-English (translated) version of a document, including the legal information in that document, is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

Security — Customer understands that all NXP products may be subject to unidentified vulnerabilities or may support established security standards or specifications with known limitations. Customer is responsible for the design and operation of its applications and products throughout their lifecycles to reduce the effect of these vulnerabilities on customer's applications and products. Customer's responsibility also extends to other open and/or proprietary technologies supported by NXP products for use in customer's applications. NXP accepts no liability for any vulnerability. Customer should regularly check security updates from NXP and follow up appropriately.

Customer shall select products with security features that best meet rules, regulations, and standards of the intended application and make the ultimate design decisions regarding its products and is solely responsible for compliance with all legal, regulatory, and security related requirements concerning its products, regardless of any information or support that may be provided by NXP.

NXP has a Product Security Incident Response Team (PSIRT) (reachable at PSIRT@nxp.com) that manages the investigation, reporting, and solution release to security vulnerabilities of NXP products.

11.4 Licenses

Purchase of NXP ICs with NFC technology — Purchase of an NXP Semiconductors IC that complies with one of the Near Field Communication (NFC) standards ISO/IEC 18092 and ISO/IEC 21481 does not convey an implied license under any patent right infringed by implementation of any of those standards. Purchase of NXP Semiconductors IC does not include a license to any NXP patent (or other IP right) covering combinations of those products with other products, whether hardware or software.

11.5 Trademarks

Notice: All referenced brands, product names, service names, and trademarks are the property of their respective owners.

NXP — wordmark and logo are trademarks of NXP B.V.

EdgeVerse — is a trademark of NXP B.V.

FeliCa — is a trademark of Sony Corporation.

MIFARE — is a trademark of NXP B.V.

MIFARE Classic — is a trademark of NXP B.V.

Tables

Tab. 1.	PN5190 Command/Response List	7	Tab. 40.	SWITCH_MODE_AUTOCOLL command value	31
Tab. 2.	PN5190 response status values	8	Tab. 41.	RF Technologies Bitmask	32
Tab. 3.	PN5190 events (contents of EVENT_STATUS)	10	Tab. 42.	SWITCH_MODE_AUTOCOLL response value	32
Tab. 4.	Definitions for EVENT_STATUS bits	11	Tab. 43.	EVENT_SWITCH_MODE_AUTOCOLL – AUTOCOLL_EVENT data	32
Tab. 5.	Definitions for BOOT_STATUS_DATA bits	12	Tab. 44.	SWITCH_MODE_STANDBY command value	34
Tab. 6.	Definitions for STANDBY_PREV_STATUS_DATA bits	13	Tab. 45.	Config Bitmask	34
Tab. 7.	Definitions for GENERAL_ERROR_STATUS_DATA bits	14	Tab. 46.	SWITCH_MODE_STANDBY response value	35
Tab. 8.	Definitions for LPCD_STATUS_DATA bytes	14	Tab. 47.	SWITCH_MODE_LPCD command value	37
Tab. 9.	Definitions for LPCD_CALIBRATION_DONE status data bytes for ULPCD	15	Tab. 48.	Wake-up Control Bitmask	37
Tab. 10.	Definitions for LPCD_CALIBRATION_DONE status data bytes for LPCD	15	Tab. 49.	Reference Value byte info	37
Tab. 11.	Expected event response when different commands terminated with	16	Tab. 50.	SWITCH_MODE_LPCD response value	38
Tab. 12.	WRITE_REGISTER command value	17	Tab. 51.	EVT_SWITCH_MODE_LPCD	38
Tab. 13.	WRITE_REGISTER response value	17	Tab. 52.	SWITCH_MODE_DOWNLOAD command value	38
Tab. 14.	WRITE_REGISTER_OR_MASK command value	18	Tab. 53.	SWITCH_MODE_DOWNLOAD response value	39
Tab. 15.	WRITE_REGISTER_OR_MASK response value	18	Tab. 54.	MFC_AUTHENTICATE Command	39
Tab. 16.	WRITE_REGISTER_AND_MASK command value	18	Tab. 55.	MFC_AUTHENTICATE Response	40
Tab. 17.	WRITE_REGISTER_AND_MASK response value	18	Tab. 56.	EPC_GEN2_INVENTORY command value	41
Tab. 18.	WRITE_REGISTER_MULTIPLE command value	19	Tab. 57.	EPC_GEN2_INVENTORY response value	41
Tab. 19.	WRITE_REGISTER_MULTIPLE response value	19	Tab. 58.	LOAD_RF_CONFIGURATION command value	43
Tab. 20.	READ_REGISTER command value	20	Tab. 59.	LOAD_RF_CONFIGURATION response value	43
Tab. 21.	READ_REGISTER response value	20	Tab. 60.	UPDATE_RF_CONFIGURATION command value	43
Tab. 22.	READ_REGISTER_MULTIPLE command value	20	Tab. 61.	UPDATE_RF_CONFIGURATION response value	44
Tab. 23.	READ_REGISTER_MULTIPLE response value	21	Tab. 62.	GET_RF_CONFIGURATION command value	44
Tab. 24.	WRITE_E2PROM command value	21	Tab. 63.	GET_RF_CONFIGURATION Response value	44
Tab. 25.	WRITE_EEPROM response value	22	Tab. 64.	RF_FIELD_ON command value	45
Tab. 26.	READ_E2PROM command value	22	Tab. 65.	RF_FIELD_ON response value	45
Tab. 27.	READ_E2PROM response value	22	Tab. 66.	RF_FIELD_OFF command value	45
Tab. 28.	EXCHANGE_RF_DATA command value	23	Tab. 67.	RF_FIELD_OFF response value	46
Tab. 29.	RFexchangeConfig Bitmask	24	Tab. 68.	CONFIGURE_TESTBUS_DIGITAL command value	46
Tab. 30.	EXCHANGE_RF_DATA response value	24	Tab. 69.	CONFIGURE_TESTBUS_DIGITAL response value	46
Tab. 31.	TRANSMIT_RF_DATA command value	25	Tab. 70.	CONFIGURE_TESTBUS_ANALOG command value	47
Tab. 32.	TRANSMIT_RF_DATA response value	25	Tab. 71.	Config Bitmask	48
Tab. 33.	RETRIEVE_RF_DATA command value	25	Tab. 72.	CONFIGURE_TESTBUS_ANALOG response value	48
Tab. 34.	RETRIEVE_RF_DATA response value	25	Tab. 73.	CTS_ENABLE command value	49
Tab. 35.	RECEIVE_RF_DATA command value	26	Tab. 74.	CTS_ENABLE response value	49
Tab. 36.	ReceiverRFConfig Bitmask	26	Tab. 75.	This informs the host that data had been received. EVT_CTS_DONE	49
Tab. 37.	RECEIVE_RF_DATA response value	26	Tab. 76.	CTS_CONFIGURE command value	50
Tab. 38.	RETRIEVE_RF_FELICA_EMD_DATA command value	27	Tab. 77.	CTS_CONFIGURE response value	52
Tab. 39.	RETRIEVE_RF_FELICA_EMD_DATA response value	27			

Tab. 78.	CTS_RETRIEVE_LOG command value	53	Tab. 89.	Response to the GetSession command	63
Tab. 79.	CTS_RETRIEVE_LOG response value	53	Tab. 90.	Response to the GetDield command	63
Tab. 80.	PRBS_TEST command value	54	Tab. 91.	Response to the GetDield command	64
Tab. 81.	PRBS_TEST response value	54	Tab. 92.	List of HDLL command OP codes	66
Tab. 82.	GET_DIEID Command value	54	Tab. 93.	List of HDLL response OP codes	66
Tab. 83.	GET_DIEID response value	54	Tab. 94.	Response to the GetVersion command	67
Tab. 84.	GET_VERSION command value	55	Tab. 95.	Response to the GetSession command	68
Tab. 85.	GET_VERSION response value	55	Tab. 96.	Response to the GetDield command	68
Tab. 86.	List of HDLL command OP codes	61	Tab. 97.	Response to the CheckIntegrity command	68
Tab. 87.	List of HDLL response OP codes	62	Tab. 98.	Abbreviations	78
Tab. 88.	Response to the GetVersion command	63			

Figures

Fig. 1.	Flow Indication	4	Fig. 11.	UseCase2: Event sent for terminating already running commands to switch to Normal Operation mode (Abort command)	30
Fig. 2.	Command and Response	4	Fig. 12.	UseCase3: Event for Normal Operation mode upon Warm Boot/Soft-reset of PN5190	31
Fig. 3.	Allowed sequences of command, response and events	5	Fig. 13.	Communication example	33
Fig. 4.	Message format	5	Fig. 14.	Communication example	36
Fig. 5.	TLV format	6	Fig. 15.	Communication example	38
Fig. 6.	Reading response/events in multiple SPI frames	6	Fig. 16.	HDLL frame	58
Fig. 7.	Reading of response/events in single SPI frame	6	Fig. 17.	SPI Write sequence	59
Fig. 8.	Event message format when no errors occurred	11	Fig. 18.	SPI Read sequence	59
Fig. 9.	Event message format when an error occurred	11	Fig. 19.	DL procedure	61
Fig. 10.	UseCase1: Event for Normal Operation mode upon Power-up (POR, Cold Boot)	30	Fig. 20.	RF Protocol configuration indexes	76
			Fig. 21.	CTS and TESTBUS signals	77

Contents

1	Introduction	3	4.1.6.4	Event	21
1.1	Introduction	3	4.2	E2PROM Manipulation	21
1.1.1	Scope	3	4.2.1	WRITE_E2PROM	21
1.1.2	Not in Scope	3	4.2.1.1	Conditions	21
1.2	Host Communication Overview	3	4.2.1.2	Command	21
2	Logical Layer	4	4.2.1.3	Response	22
2.1	Frame definition	4	4.2.1.4	Event	22
2.2	Flow Indication	4	4.2.2	READ_E2PROM	22
2.3	Message Type	4	4.2.2.1	Conditions	22
2.3.1	Allowed sequences and rules	5	4.2.2.2	Command	22
2.4	Message Format	5	4.2.2.3	Response	22
2.4.1	Split Frame	6	4.2.2.4	Event	22
3	Normal Operation Instructions	7	4.3	CLIF data Manipulation	23
3.1	CMD/RSP List Overview	7	4.3.1	EXCHANGE_RF_DATA	23
3.2	Response status values	8	4.3.1.1	Conditions	23
3.3	Events Overview	9	4.3.1.2	Command	23
3.3.1	Normal events over IRQ pin	9	4.3.1.3	Response	24
3.3.1.1	Event message formats	10	4.3.1.4	Event	24
3.3.1.2	Different EVENT status definitions	11	4.3.2	TRANSMIT_RF_DATA	24
3.3.2	Handling of different boot scenarios	15	4.3.2.1	Conditions	24
3.3.2.1	Handling of Over temperature scenario when PN5190 is under operation	15	4.3.2.2	Command	25
3.3.2.2	Handling of over-current	15	4.3.2.3	Response	25
3.3.2.3	Loss of VDDIO during operation	15	4.3.2.4	Event	25
3.3.3	Handling of abort scenarios	16	4.3.3	RETRIEVE_RF_DATA	25
4	Normal Mode Operation Instruction Details ...	17	4.3.3.1	Command	25
4.1	Register Manipulation	17	4.3.3.2	Response	25
4.1.1	WRITE_REGISTER	17	4.3.3.3	Event	25
4.1.1.1	Conditions	17	4.3.4	RECEIVE_RF_DATA	26
4.1.1.2	Command	17	4.3.4.1	Command	26
4.1.1.3	Response	17	4.3.4.2	Response	26
4.1.1.4	Event	17	4.3.4.3	Event	27
4.1.2	WRITE_REGISTER_OR_MASK	17	4.3.5	FeliCa EMD Configuration	27
4.1.2.1	Conditions	17	4.3.5.1	Command	27
4.1.2.2	Command	18	4.3.5.2	Response	27
4.1.2.3	Response	18	4.3.5.3	Event	27
4.1.2.4	Event	18	4.4	Switching Operation Mode	27
4.1.3	WRITE_REGISTER_AND_MASK	18	4.4.1	Normal	27
4.1.3.1	Conditions	18	4.4.2	Standby	28
4.1.3.2	Command	18	4.4.3	LPCD	28
4.1.3.3	Response	18	4.4.4	Autocoll	28
4.1.3.4	Event	19	4.4.5	SWITCH_MODE_NORMAL	28
4.1.4	WRITE_REGISTER_MULTIPLE	19	4.4.5.1	UseCase1: Enter Normal Operation mode upon Power-up (POR)	28
4.1.4.1	Conditions	19	4.4.5.2	UseCase2: Terminating already running command to switch to Normal Operation mode (Abort command)	28
4.1.4.2	Command	19	4.4.5.3	UseCase3: Normal operation mode upon Soft-reset/exit from STANDBY, LPCD.	28
4.1.4.3	Response	19	4.4.5.4	Command frame to send for different use- cases	29
4.1.4.4	Event	19	4.4.5.5	Response	29
4.1.5	READ_REGISTER	20	4.4.5.6	Event	29
4.1.5.1	Conditions	20	4.4.6	SWITCH_MODE_AUTOCOLL	31
4.1.5.2	Command	20	4.4.6.1	Command	31
4.1.5.3	Response	20	4.4.6.2	Response	32
4.1.5.4	Event	20	4.4.6.3	Event	32
4.1.6	READ_REGISTER_MULTIPLE	20			
4.1.6.1	Conditions	20			
4.1.6.2	Command	20			
4.1.6.3	Response	21			

4.4.6.4	Communication example	33	4.9.2.3	Command	47
4.4.7	SWITCH_MODE_STANDBY	34	4.9.2.4	Response	48
4.4.7.1	Command	34	4.9.2.5	Event	49
4.4.7.2	Response	35	4.10	CTS Configuration	49
4.4.7.3	Event	35	4.10.1	CTS_ENABLE	49
4.4.7.4	Communication Example	36	4.10.1.1	Command	49
4.4.8	SWITCH_MODE_LPCD	36	4.10.1.2	Response	49
4.4.8.1	Command	37	4.10.1.3	Event	49
4.4.8.2	Response	38	4.10.2	CTS_CONFIGURE	49
4.4.8.3	Event	38	4.10.2.1	Command	50
4.4.8.4	Communication Example	38	4.10.2.2	Response	52
4.4.9	SWITCH_MODE_DOWNLOAD	38	4.10.2.3	Event	53
4.4.9.1	Command	38	4.10.3	CTS_RETRIEVE_LOG	53
4.4.9.2	Response	38	4.10.3.1	Command	53
4.4.9.3	Event	39	4.10.3.2	Response	53
4.4.9.4	Communication Example	39	4.10.3.3	Event	53
4.5	MIFARE Classic Authentication	39	4.11	TEST_MODE Commands	53
4.5.1	MFC_AUTHENTICATE	39	4.11.1	ANTENNA_SELF_TEST	53
4.5.1.1	Conditions	39	4.11.2	PRBS_TEST	54
4.5.1.2	Command	39	4.11.2.1	Command	54
4.5.1.3	Response	40	4.11.2.2	Response	54
4.5.1.4	Event	40	4.11.2.3	Event	54
4.6	ISO 18000-3M3 (EPC GEN2) Support	40	4.12	Chip Info Commands	54
4.6.1	EPC_GEN2_INVENTORY	40	4.12.1	GET_DIEID	54
4.6.1.1	Response	41	4.12.1.1	Command	54
4.6.1.2	Event	42	4.12.1.2	Response	54
4.7	RF Configuration Management	42	4.12.1.3	Event	55
4.7.1	LOAD_RF_CONFIGURATION	42	4.12.2	GET_VERSION	55
4.7.1.1	Conditions	42	4.12.2.1	Command	55
4.7.1.2	Command	43	4.12.2.2	Response	55
4.7.1.3	Response	43	4.12.2.3	Event	56
4.7.1.4	Event	43	5	Encrypted secured Firmware Upload Mode	57
4.7.2	UPDATE_RF_CONFIGURATION	43	5.1	Introduction	57
4.7.2.1	Conditions	43	5.2	Host Interface	57
4.7.2.2	Command	43	5.2.1	How to trigger the "secured Firmware upload" mode	57
4.7.2.3	Response	44	5.2.2	Description of HDLL	58
4.7.2.4	Event	44	5.2.3	Transport mapping over the SPI	59
4.7.3	GET_RF_CONFIGURATION	44	5.2.3.1	Write Sequence from the host (direction DH => PN5190)	59
4.7.3.1	Conditions	44	5.2.3.2	Read Sequence from the host (Direction PN5190 => DH)	59
4.7.3.2	Command	44	5.3	Firmware signature and Version Control	59
4.7.3.3	Response	44	5.4	Upload procedure in Operation state	60
4.7.3.4	Event	44	5.5	HDLL commands for Legacy Encrypted Download(LEDL)	61
4.8	RF Field Handling	45	5.5.1	HDLL protocol	61
4.8.1	RF_ON	45	5.5.1.1	Introduction	61
4.8.1.1	Command	45	5.5.1.2	HDLL Command OP codes	61
4.8.1.2	Response	45	5.5.1.3	HDLL Response OP codes	62
4.8.1.3	Event	45	5.5.2	Reset command	62
4.8.2	RF_OFF	45	5.5.3	Get version command	62
4.8.2.1	Command	45	5.5.4	Get session state command	63
4.8.2.2	Response	46	5.5.5	Get die ID command	63
4.8.2.3	Event	46	5.5.6	Check integrity command	63
4.9	Test bus Configuration	46	5.5.7	Secure Write command	64
4.9.1	CONFIGURE_TESTBUS_DIGITAL	46	5.5.7.1	First Secured Write command	64
4.9.1.1	Command	46	5.5.7.2	Middle Secured Write command	65
4.9.1.2	Response	46	5.5.7.3	Last Secured Write command	65
4.9.1.3	Event	47			
4.9.2	CONFIGURE_TESTBUS_ANALOG	47			
4.9.2.1	RAW Mode	47			
4.9.2.2	COMBINED Mode	47			

5.6	HDLL commands for Hardware Crypto	
	Assisted Encrypted Download (HWCEDL)	66
5.6.1	HDLL protocol	66
5.6.1.1	Introduction	66
5.6.1.2	HDLL Command OP codes	66
5.6.1.3	HDLL Response OP codes	66
5.6.2	Reset command	67
5.6.3	Get version command	67
5.6.4	Get session state command	68
5.6.5	Get die ID command	68
5.6.6	Check integrity command	68
5.6.7	Secure Write command	69
5.6.7.1	First Secured Write command	69
5.6.7.2	Middle Secured Write command	70
5.6.7.3	Last Secured Write command	70
6	Appendix (Examples)	72
6.1	Example for WRITE_REGISTER	72
6.2	Example for WRITE_REGISTER_OR_	
	MASK	72
6.3	Example for WRITE_REGISTER_AND_	
	MASK	72
6.4	Example for WRITE_REGISTER_	
	MULTIPLE	72
6.5	Example for READ_REGISTER	73
6.6	Example for READ_REGISTER_	
	MULTIPLE	73
6.7	Example for WRITE_E2PROM	73
6.8	Example for READ_E2PROM	73
6.9	Example for TRANSMIT_RF_DATA	73
6.10	Example for RETREIVE_RF_DATA	74
6.11	Example for EXCHANGE_RF_DATA	74
6.12	Example for LOAD_RF_CONFIGURATION	74
6.13	Example for UPDATE_RF_	
	CONFIGURATION	74
6.14	Example for RF_ON	74
6.15	Example for RF_OFF	75
7	Appendix (RF Protocol configuration	
	indexes)	76
8	Appendix (CTS and TESTBUS signals)	77
9	Abbreviations	78
10	References	79
11	Legal information	80

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.