BOWMAN[®] Dispensers

BD601–0023 Protection System Isolation Bundle

MADE USA

Product Description:

Bundle Includes:

- PS016-0223 Protection System
 - Holds disposable or reuseable gowns, three boxes of gloves, one box of earloop masks, one box of shield masks, and miscellaneous supplies
- BOWMAN[®] Signature Series Maple Fauxwood ABS Plastic
- MP-047 Sign Holder Clip-On
 - Holds 8.5" x 11" signage
 - Clear PETG Plastic

Primary Area for Product Usage:

· Anywhere personal protective equipment is needed

Dispenses:

- Top left: Gowns, aprons, or coveralls/jumpsuits no larger than 14.90"W x 15.25"H x 4.50"D (37.8 cm x 38.7 cm x 11.4 cm)
- Top right: Box(es) no larger than 8.10"W x 9.90"H x 4.50"D (20.6 cm x 25.1 cm x 11.4 cm)
- Middle right: Box(es) no larger than 8.00"W x 5.30"H x 4.50"D (20.3 cm x 13.5 cm x 11.4 cm)
- Bottom: Box(es) no larger than 11.50"W x 5.50"H x 4.50"D (29.2 cm x 14.0 cm x 11.4 cm)
- Bottom right: Item(s) no larger than 4.93"W x 5.50"H x 4.50"D (12.5 cm x 14.0 cm x 11.4 cm)

Product Specifications (overall assembled dimensions):

- 23.38"W x 26.63"H x 5.12"D (59.4 cm x 67.6 cm x 13.0 cm)
- 8.3 lbs (3.8 kg) approximated


Package Specifications:

- Package Quantity: 1 per case
- 32"L x 26"W x 6"H (81.3 cm x 66.0 cm x 15.2 cm)
- 11.0 lbs (4.9 kg) approximated



Consumables not included

Mounting Specifications:

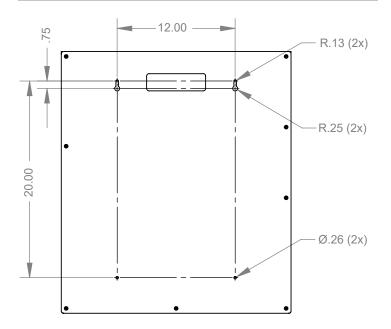




BOWMAN Dispensers 20325 71st Ave NE, Suite D, Arlington, WA 98223 800.962.4660 • www.BowmanDispensers.com **BOWMAN®** Dispensers

BD601-0023 Protection System Isolation Bundle


Assembly Instructions

Installation


Always mount dispensers securely prior to loading with product.

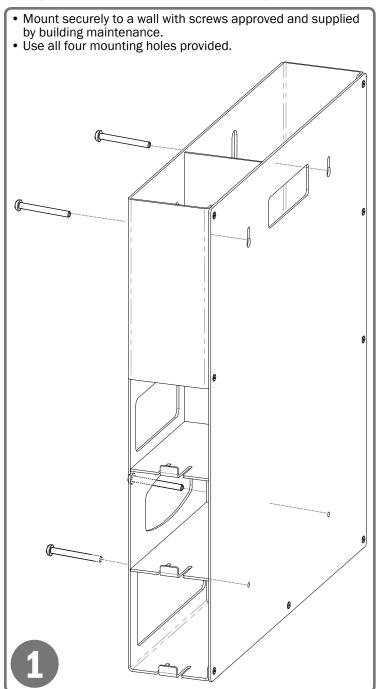

- The flexible tabs on the side are designed to hold product securely in the dispenser.
- To add or remove product, press down on the tab and insert or pull box out.

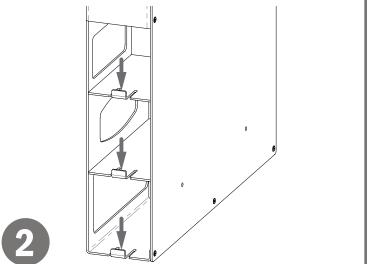

- Clip the Sign Holder over the top of the gown section and insert desired signage.
- · Free isolation signs can be downloaded at www.BowmanDispensers.com.

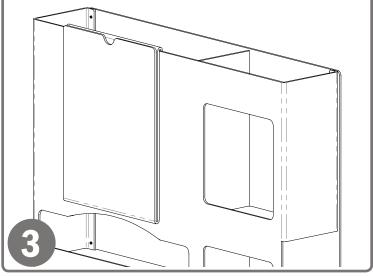

Parts included:

Protection System

· Sign Holder

Tools Required:

No tools required to assemble dispenser •

BD601-0023 - Installation

Information subject to change without notice. Dimensions are approximate. (Not to scale)

BOWMAN Dispensers 20325 71st Ave NE, Suite D, Arlington, WA 98223 800.962.4660 • www.BowmanDispensers.com ©2019 BOWMAN® Manufacturing Company, Inc. All Rights Reserved. Product specifications subject to change without notification. Consumables not included. BD6010023TDSc

BOWMAN Dispensers Organize · Contain · Comply

BD601-0023 Protection System Isolation Kit

Characteristics & Care

PS016-0212 **MP-047** Fauxwood ABS Plastic **PETG Plastic Material Characteristics Designed for Long-Term, Heavy-Duty Applications Designed for Long-Term, Heavy-Duty Applications** The combination of copolymers (Acrylonitrile, Copolyester resin is designed for heavy-duty Butadiene, and Styrene) gives ABS an excellent applications, and is used by BOWMAN® Dispensers. combination of strength, rigidity, and toughness. The We never use acrylic in our products. fauxwood finish is ARVINYL laminate created from a Copolyester (PETG) is typically 15-20 times tougher semi-rigid film. than general purpose acrylic. PETG is made to ABS is chemical and stress-crack resistant. It is withstand handling and reduce losses due to tough, dimensionally stable, and will hold up to longbreakage. term use. To ensure product longevity, fauxwood PETG resists a variety of chemicals and commonly products should not be mounted in very hot or cold used cleaning agents. It is tough and durable (not areas. brittle), providing years of trouble-free functionality and long life. Clear optical characteristics mean the viewer can see the content, read text, and see true colors through the material. It complies with FDA regulations for food contact. **Care and Cleaning** Use mild soap and water to clean. Petroleum-based Most cleaning chemicals do not weaken the surface oils, solvents, and paints should not be used. or cause damage to the material. Suggested cleaning method is to use a soft cloth, warm water, and mild Standard hospital cleaning supplies are approved for soap. use on our ABS plastic products.