BOWMAN[®] Dispensers

BD206–0012 Cover Your Cough Compliance Kit



Product Description:

- Kit Includes:
 - RS005-0412 Respiratory Hygiene Station Locking • Dispensing unit mounting area, holds two boxes of masks, and one - two boxes of facial tissues
 - Quartz Beige Powder-Coated Steel
 - MP-075 Sign Holder Horizontal
 - Holds 11" x 8.5" signage
 - Clear PETG Plastic
- Assembly hardware included
- **Primary Area for Product Usage:**
- All ports of entry
- · Anywhere respiratory hygiene products are needed

Dispenses:


- Left: Dispenser no larger than 8.35"W x 14.75"H x 5.00"D (21.2 cm x 37.5 cm x 12.7 cm)
- [Note: Refer to automatic dispensing specifications on detection distance requirements.]
- Middle: Box(es) no larger than 8.00"W x 9.50"H x 4.75"D (20.3 cm x 24.1 cm x 12.1 cm)
- Right: Box(es) no larger than 5.50"W x 9.50"H x 4.75"D (13.7 cm x 24.1 cm x 12.1 cm)
- Product Specifications (overall assembled dimensions):
- 22.31"W x 21.85"H x 5.17"D (56.7 cm x 55.5 cm x 13.1 cm)
- 7.9 lbs (3.6 kg) approximated

Package Specifications:

- Package Quantity: 1 per case
- 24"L x 16"W x 6"H (61.0 cm x 40.6 cm x 15.2 cm)
- 10.0 lbs (4.5 kg) approximated

Sanitizer, face masks, and tissues not included

Mounting Specifications:

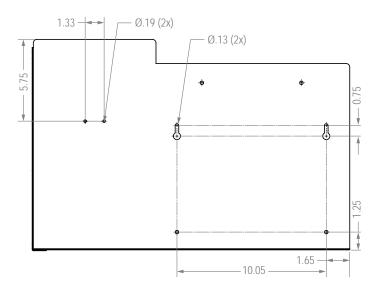









BD206–0012 Cover Your Cough Compliance Kit Assembly Instructions

Installation

Always mount dispensers securely prior to loading with product.

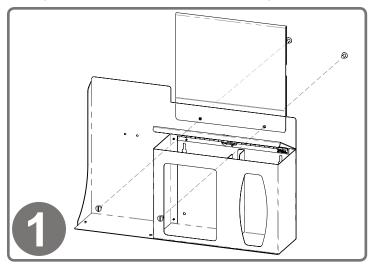


To mount the MP-075 Sign Holder, align the mounting holes of the holder with the holes on the top front of the dispenser. Attach using (2x) barrel screws included with sign holder.

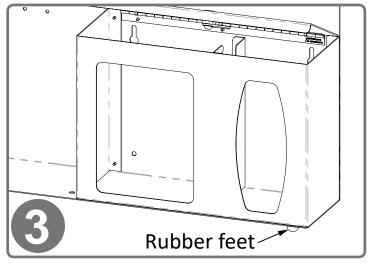


For placing on counter, attach (4x) self-adhesive rubber feet at each of the bottom corners (included).

Parts included:

- Respiratory Hygiene Station
- Sign Holder

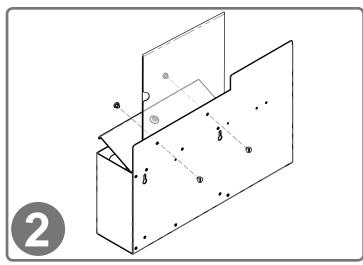

Thumb access to signage goes toward back of dispenser.

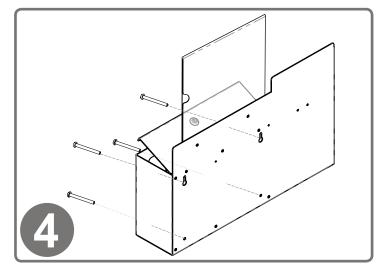

Dispenser can also be mounted securely to a wall through keyholes and screw holes in back with screws approved and supplied by building maintenance. All four mounting holes provided must be used.

- Hardware
 - (4x) rubber feet
 - (2x) barrel screws

Tools Required:

Flathead Screwdriver

BD206-0012 - Installation

Information subject to change without notice. Dimensions are approximate. (Not to scale)

BOWMAN Dispensers 20325 71st Ave NE, Suite D, Arlington, WA 98223 800.962.4660 • www.BowmanDispensers.com BOWMAN[®] Dispensers Organize · Contain · Comply

BD206–0012 Cover Your Cough Compliance Kit Characteristics & Care

RS005-0412

Powder-Coated Steel

MP-075

PETG Plastic

Material Characteristic

Designed for Long-Term Use

Our steel dispensers and stands are coated with polyester powders which makes them highly resistant to corrosion.

Powder-coated steel is ideal for dispensers used in a healthcare or an industrial setting because it is impact resistant and is not effected by extremes in temperature.

Dispensers and stands made of powder-coated steel are both attractive and functional, providing years of service. Designed for Long-Term, Heavy-Duty Applications

Copolyester resin is designed for heavy-duty applications, and is used by BOWMAN® Dispensers. We never use acrylic in our products.

Copolyester (PETG) is typically 15-20 times tougher than general purpose acrylic. PETG is made to withstand handling and reduce losses due to breakage.

PETG resists a variety of chemicals and commonly used cleaning agents. It is tough and durable (not brittle), providing years of trouble-free functionality and long life.

Clear optical characteristics mean the viewer can see the content, read text, and see true colors through the material. It complies with FDA regulations for food contact.

Care and Cleaning

For best results, clean by washing the surface with a diluted solution of a mild, non-abrasive detergent in cold or warm water and a non-abrasive cloth. Standard hospital cleaning supplies can be used.

Dry with a soft cloth. Do not use any solvent-based materials, abrasives (e.g. Scotch-brite, steel wool), or apply excessive force during cleaning.

Most cleaning chemicals do not weaken the surface or cause damage to the material. Suggested cleaning method is to use a soft cloth, warm water, and mild soap.