BOWMAN<sup>®</sup> Dispensers

# **PS015–0512** Protection System – Double Gown



## **Related Products (each sold separately):**

- PS014-0212: Protection System Gloveless
- PS015-0212: Protection Organizer Double Gown (shown below)



### Product Description:

- Protection System Double Gown
- Holds disposable or reuseable gowns, aprons, or coveralls/ jumpsuits, three boxes of gloves, two boxes of earloop masks, and miscellaneous items
- Keyholes for wall mounting, or door hanger cut out for use with wall or door hanger
- Quartz Beige Powder-Coated Aluminum

#### **Primary Area for Product Usage:**

Anywhere personal protection equipment is needed

#### **Dispenses**:

- Left: Gowns, aprons, or coveralls/jumpsuits no larger than 14.94"W x 15.33"H x 4.50"D (37.9 cm x  $\,$  38.9 cm x 11.4 cm)
- Top right: Box(es) no larger than 4.85"W x 8.50"H x 4.50"D (12.3 cm x 21.6 cm x 11.4 cm)
- Middle right: Box(es) no larger than 9.85"W x 5.13"H x 4.50"D (25.0 cm x 13.0 cm x 11.4 cm)
- Bottom right: Item(s) no larger than 9.85"W x x 6.11"H x 4.50"D (25.0 cm x 15.5 cm x 11.4 cm)


### Package Specifications:

- Package Quantity: 1 per case
- 26"L x 6"W x 32"H (66.0 cm x 15.2 cm x 81.3 cm)
- 13 lbs (5.9 kg) approximated

**Product Specifications** (overall external dimensions):

- 25.05"W x 30.75"H x 4.65"D (63.6 cm x 78.1 cm x 11.8 cm)
- 11.0 lbs (5.0 kg) approximated

Mounting Specifications:

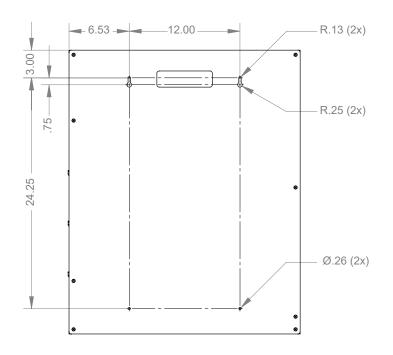


BOWMAN Dispensers 20325 71st Ave NE, Suite D, Arlington, WA 98223 800.962.4660 • www.BowmanDispensers.com BOWMAN Dispensers

## PS015-0512 Protection System - Double Gown Installation Instructions/Characteristics & Care


## Installation

Always mount dispensers securely prior to loading with product.

• Compartments are versatile and will accommodate many different products, such as small wipe canisters, rolled face shields, and folded laundered gowns.

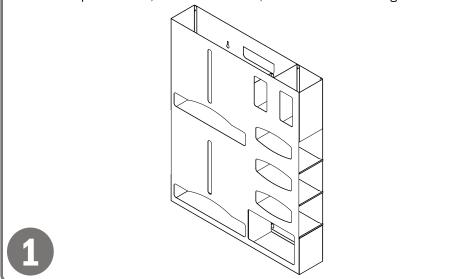

- · Mount securely to a wall with screws approved and supplied by building maintenance.
- Dispenser can be mounted onto a BOWMAN® door or wall hanger through the cutout in the back. (please see chosen hanger's datasheet for details)

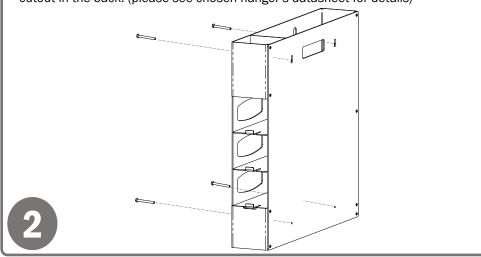

### Parts included:

Dispenser

**Tools Required:** 

No tools required to assemble dispenser

**Care and Construction** Powder-Coated Aluminum

## **Material Characteristics**

**Designed for Long-Term, Heavy-Duty** Applications

Our powder-coated aluminum dispensers resist corrosion, chips and flaking. This material will provide longlasting products that hold up well in tough environments.

Powder-coated aluminum is ideal for dispensers used in a healthcare or an industrial setting. It is impact resistant and is not effected by extremes in temperature.

## Care and Cleaning

The semi-gloss powder-coated finish resists mild chemicals and cleaning agents, such as Windex or glass cleaners. It should be cleaned with a damp cloth or mild soap and water. Scotch-Brite, steel wool or any abrasive products should not be used.

> BOWMAN Dispense 20325 71<sup>st</sup> Ave NE, Suite D, Arlington, WA 98223 800.962.4660 • www.BowmanDispensers.com

PS015-0512 - Installation/Characteristics & Care

Information subject to change without notice. Dimensions are approximate. (Not to scale)

©2019 BOWMAN® Manufacturing Company, Inc. All Rights Reserved. Product specifications subject to change without notification. Consumables not included. PS0150512TDSa