



EMB-Fem2GW-130X-0

DOCUMENTATION

Rev 1.3

Embit s.r.l.

Document information

Versions & Revisions

Revision	Date	Author	Comments
1.0	2021-02-09	Embit-AM	Initial release
1.1	2021-06-17	Embit-DL	Added installation guide
1.2	2022-11-21	Embit	Aligned to the new Hardware release with POE
1.3	2023-04-27	Embit	LoRaWAN® Basic-Station

Index

- 1 Introduction 4**
- 2 Hardware Specification 5**
 - 2.1 Thermal Tests 7
- 3 Gateway Installation Guide 8**
 - 3.1 Pole mounting 8
 - 3.2 Ethernet connection..... 9
 - 3.3 Power supply and connection 10
 - 3.4 Grounding and Cables Section 10
- 4 Operating System..... 10**
- 5 LoRa® 868MHz Feature..... 10**
- 6 Gateway Configuration Web Interface..... 12**
- 7 LoRa® 130X Gateway EUI 14**
- 8 Example: The Things Network LoRaWAN® Network Server 15**
- 9 IP Backhaul Connection..... 19**
- 10 LTE Connection..... 19**
- 11 End Device configuration on Network Server 22**
 - 11.1 Create New Application 22
 - 11.2 Add New Device 23
- 13 Disclaimer of liability..... 28**
 - 13.1 Disclaimer of liability..... 28
 - 13.2 Handling Precautions 28
 - 13.3 Limitations 28
 - 13.4 Trademarks 28

1 Introduction

The **EMB-Fem2GW-130X-O** uses LoRa® technology and complies with the Semtech® 868MHz protocol stack which aims to emulate LoRaWAN® behavior. It enables IoT (Internet of Things) implementations mandating worldwide interoperability and battery-powered end devices over long-distance connectivity. The gateway is an IP67-grade outdoor product, with a plastic case.

This guide explains how to start using the **EMB-Fem2GW-130X-O**. The **EMB-Fem2GW-130X-O** gateway is a multi service up-gradable platform, designed to meet IoT (Internet of Things) and M2M (Machine-2-Machine) scenarios. It enables LoRa® 868MHz connectivity, having the role of fully compliant Gateway.

It provides the LoRaWAN® packet forwarder functionality.

The radio section is based on the EMBIT Mini PCI-express board, EMB-LR130X-mPCIE. It starts to operate as a LoRa® base station, receiving radio packets and forwarding them to a LoRa® Network Server. It has a TCP/IP connection through Ethernet, or via 4G connection, available through SIM card and 4G Mini PCI express module. Its functionalities will be described in details in the following paragraphs. It includes GPS connectivity to locate the device.

Thanks to the Semtech® SX130X performances and the efficient EMBIT RF design, the possible radio ranges are up to 15 km in the country side and up to 3 km in urban areas.

The OS system is Linux based, and the customer can configure it according to his needs, with a complete root access. The **EMB-Fem2GW-130X-O** provides a web interface to manage and configure the connectivity with the different network protocols.

The gateway must be by POE (Power over Ethernet) IEEE 802.3at.



Figure 1 EMB-Fem2GW-130X-O

2 Hardware Specification

- Processor: CPU ARM Cortex-A72 quad-core a 64 bit da 1,5 GHz
- RAM Memory: 2 GB, LPDDR2 SDRAM
- Flash Memory: 8/16/32 GB, EMMC Flash Memory
- LAN Connection: Ethernet RJ45 10/100/1000 Base-T
- LoRa® Connectivity: EMB-LR130X-mPCIe
- Receiver Sensitivity: down to -141 dBm @ SF12 BW 125kHz
- Connectivity: GPS Module U-Blox NEO-M8-Q
- Cellular Connectivity: 4G LTE / 3G UMTS / 2G GPRS through Mini Size SIM embedded inside
- Cellular Module: Quectel EC21-E Mini PCIe
- Power Source: IEEE 802.11at Power Over Ethernet
- Ports: Ethernet 10/100/1000 RJ 45 / N-Type antenna connector / Air Port
- Power Consumption: 5 Watt (average)
- Operating System: Linux 9.8 Stretch
- Dimensions: L: 165 mm W: 165 mm H: 45 mm

- Weight: 1.0 kg
- Certifications: CE, RED

Absolute Maximum Ratings

The power consumption of the **EMB-Fem2GW-130X-O** has been tested in two different conditions: outside the thermal chamber and inside the thermal chamber. The results are represented on the following tables:

Outside Thermal Chamber:

LTE Transmission	
Idle Condition in LTE Mode	Connection in LTE Cell in LTE Mode
405 mA peak	700 mA peak

Table 1 Outside Thermal Chamber-LTE Transmission

GSM Transmission	
Idle Condition in GSM Mode	Connection in GSM Cell in GSM Mode
405 mA peak	1110 mA peak

Table 2 Outside Thermal Chamber-GSM Transmission

Inside Thermal Chamber:

LTE Transmission	
Idle Condition in LTE Mode	Connection in LTE Cell in LTE Mode
400 mA peak	690 mA peak
Send LoRa® Packet in LTE Mode	Switch from LTE to GSM Mode
700 mA	1600 mA peak

Table 3 Inside Thermal Chamber-LTE Transmission

GSM Transmission	
Idle Condition in GSM Mode	Connection in GSM Cell in GSM Mode
400 mA peak	1200 mA peak
Send LoRa® Packet in LTE Mode	Switch from LTE to GSM Mode
1200 mA peak	1600 mA peak

Table 4 Inside Thermal Chamber-GSM Transmission

Note: the peak values are reached for a period of <1 ms and do not represent the continuous current consumption.

2.1 Thermal Tests

The **EMB-Fem2GW-130X-O** has been tested by using the Embit Thermo Camera and for three different supply voltage values.

All the temperatures were read 1 hour after switching on with Wi-Fi, LTE, LoRa® and GPS **turned on**.

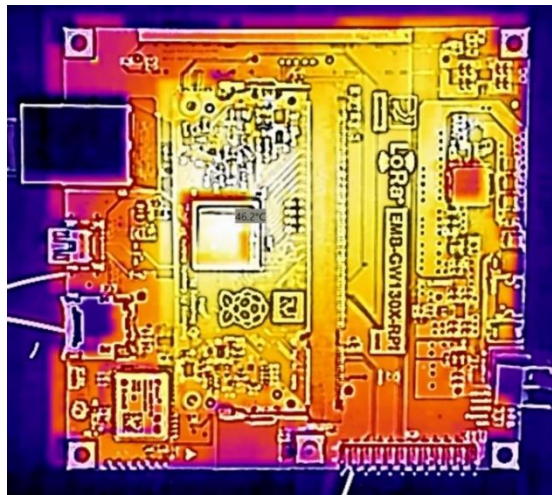


Figure 2 Thermal stress test

The maximum temperature registered has been 46.2 °C on the MCU Core and the maximum current measured is 0.377 A.

3 Gateway Installation Guide

3.1 Pole mounting

In this section, it is described how to mount the **EMB-Fem2GW-130X-O** on a pole. It has to be in a position sufficiently high to guarantee a good communication range.

The **EMB-Fem2GW-130X-O** must be installed vertically, with the cables exposed on the lower side of the gateway (see Figure 6). Otherwise, the correct functioning of the product is not guaranteed.

EMB-Fem2GW-130X-O is provided with the mounting bracket, shown in the following picture.



Figure 5 Mounting Bracket with Gateway

The mounting bracket has to be attached to the back of the **EMB-Fem2GW-130X-O** using screws and washer and attached on the pole as the image below.



Figure 6 EMB-Fem2GW-130X-O on the pole

3.2 Ethernet connection

In order to exploit the Ethernet connection of the **EMB-Fem2GW-130X-O**, you have to simply plug the proper cable (not provided) in the Ethernet port (see Figure 9).

Once the cable is fixed, you have to screw the outdoor IP68 socket adapter (Figure 7) to avoid water leaks.



Figure 7 Waterproof outdoor socket adapter

3.3 ***Power supply and connection***

The gateway must be powered by POE following the standard IEEE 802.3at. We recommend to use certified Power injectors capable to provide at least 20 watt.

3.4 ***Grounding and Cables Section***

The **EMB-Fem2GW-130X-O** does not require ground connection.

Note: The external power supply, of course, must be grounded since it provides the ground reference. Please check that your power supply is properly grounded.

4 Operating System

EMB-Fem2GW-130X-O Operating System is Linux 9.8 Stretch.

It is allowed full SSH root access to the final user, using as username and password:

Username: user

Password: embbit

The final user can install, uninstall, upgrade every single program.

Pay attention, each action may stop irretrievably the functionalities of the system.

5 LoRa[®] 868MHz Feature

In this network Architecture, three main roles are defined:

- **End-Device:** endpoints with sensors embedded;
- **Gateways:** they provide LoRa[®] wireless connectivity to the devices. They are the connection between the devices and the IP backhaul network to the Network Server;

- **Network Server:** the intelligence of the network. It is centralized radio controller, which performs radio management, the provisioning and authentication of devices, and the delivery of the data to one or multiple application servers through a set of Application Programming Interfaces (APIs).

Another role is the **Application Server**. It is managed by the final customer and it is put on top of the Network Server. Full Network Image follows.

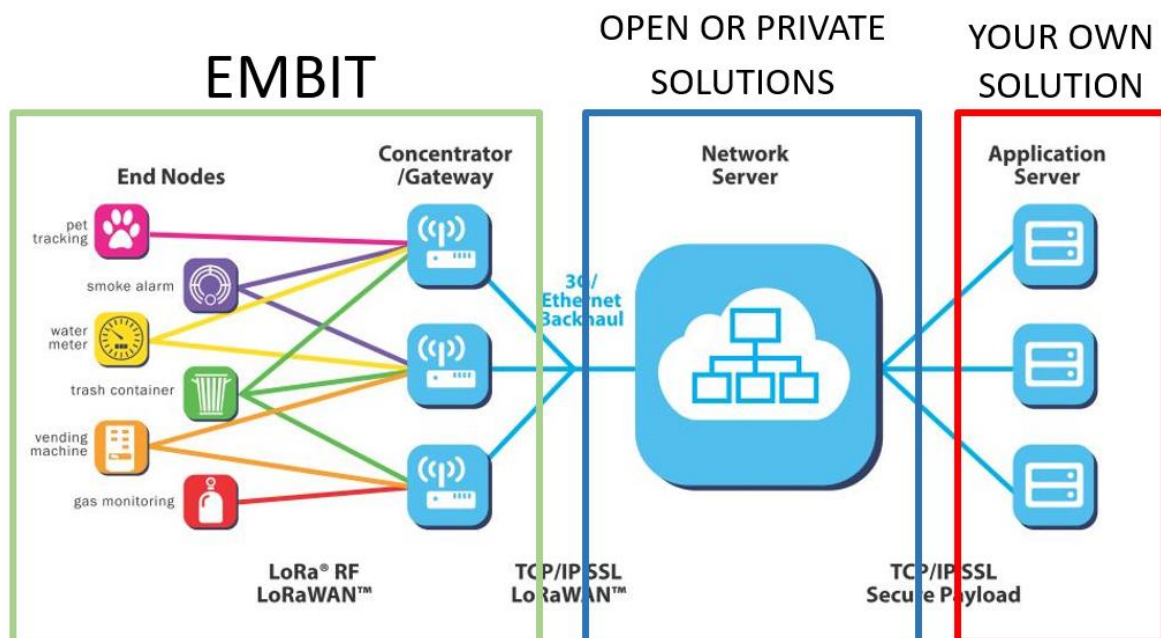


Figure 12 LoRa® Network Architecture

Each communication is fully encrypted with three keys, each one with a length of 128 bits. The algorithm used for it is AES-128. These algorithms have been analysed by the cryptographic community for many years, are NIST approved and widely adopted as a best security practice for constrained nodes and networks.

EMB-Fem2GW-130X-O provides LoRa® 868 MHz connectivity up to 3 km in urban area and up to 15 km in rural environment.

The RF path is fully compliant to Semtech® specifications and it is able to achieve a Receiver Sensitivity up to -141 dBm.

6 Gateway Configuration Web Interface

EMB-Fem2GW-130X-O provides a web interface, which allows to select and configure the desired LoRa® packet forwarder.

It is reachable at `https://[gateway_IP_address]:10000`. The default data access is:

username: user

password: embit

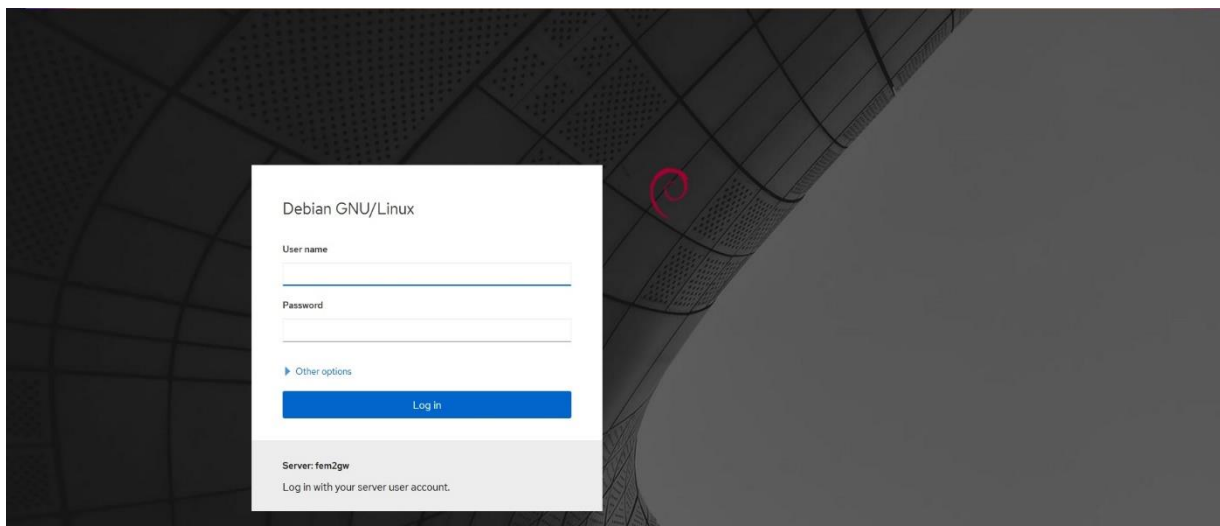


Figure 13 Log In Page

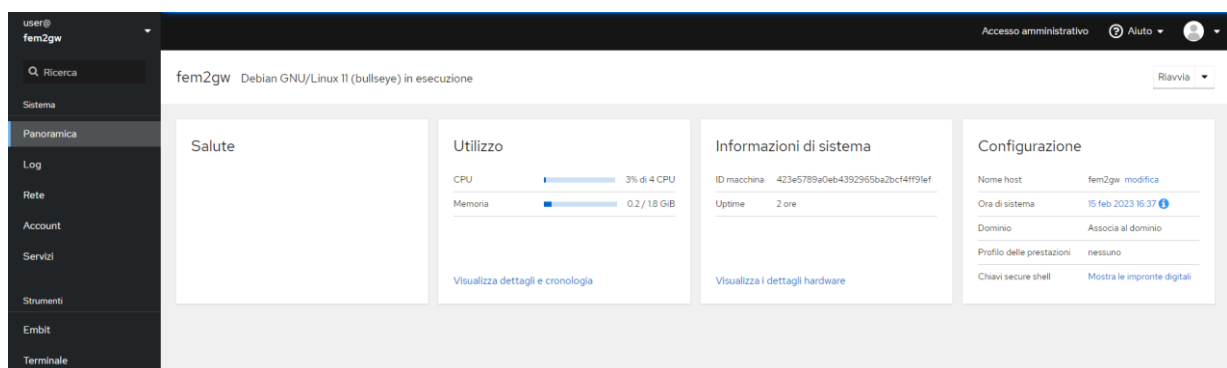


Figure 14 Main Page

Clicking “services” you can reach the “*Packet Forwarder*” page, the system state information is reported. In this page is possible to manage and monitor the LoRa® packet forwarder status.

It is recommended to turn off the packet forwarder before configuring new parameters, and turn it back on afterwards.

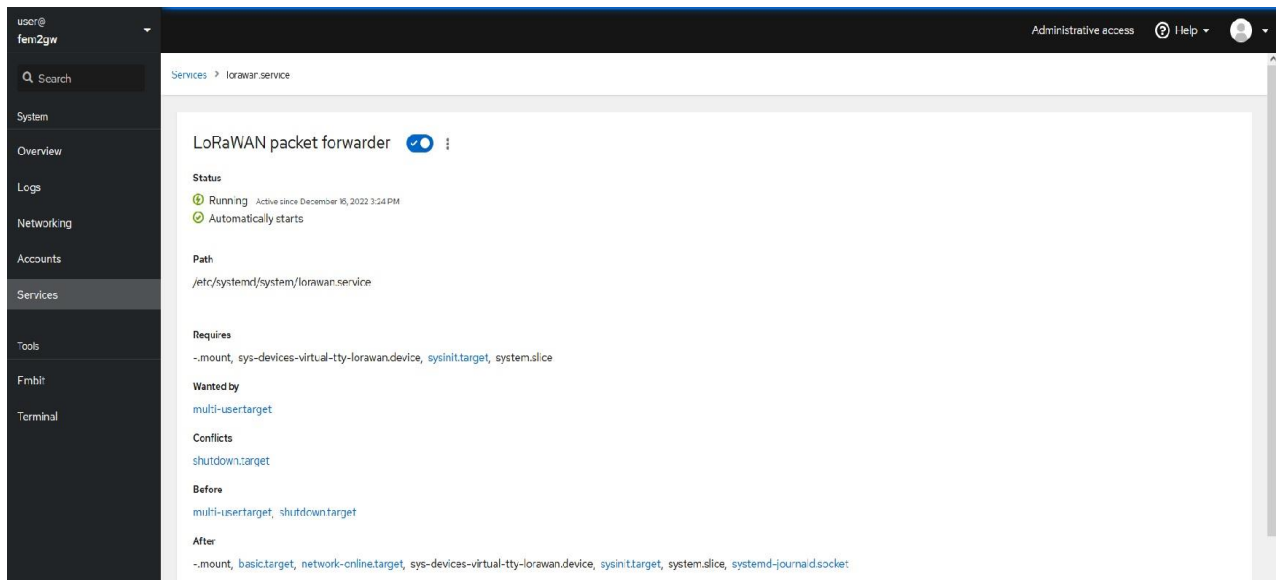


Figure 15 LoRaWAN packet forwarder Tab

“*Embit Gateway Configuration*” is located in the left menu, in the category Tools.

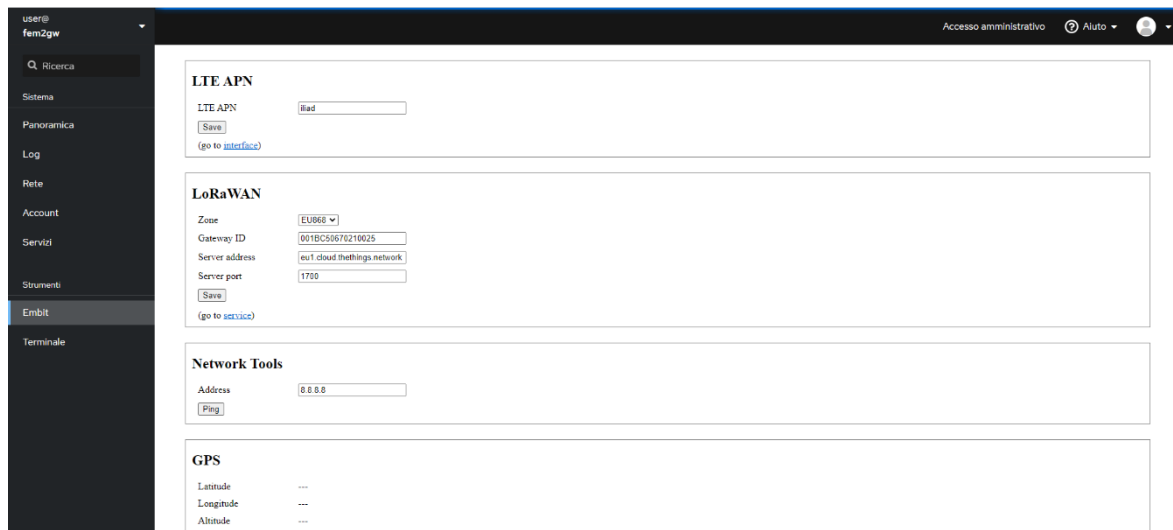


Figure 16 Embit Gateway Configuration Main Tab

In the configuration tab, it is possible to customize the network parameter of the LoRaWAN® packet forwarder:

- Zone → 868 MHz \ 915 MHz \ 490 MHz – (Certified only for Europe 868 MHz)
- Gateway EUI → 8-bytes (hex) – usually Gateway S/N
- Network Server Address
- Network Server Port

Once all parameters are set, click "save" to confirm.

The following figure shows the TTN (The Thing Network) configuration for the European 868 MHz frequency band:

LoRaWAN

Zone	EU868 ▼
Gateway EUI	001BC50670210025
Server address	eu1.cloud.thethings.network
Server port	1700
<input type="button" value="Save"/>	
(go to service)	

Figure 17 EMBit Gateway Configuration Main Tab

7 LoRa® 130X Gateway EUI

EMB-Fem2GW-130X-O connects to the LoRa® network with a Gateway EUI (Extended Unique Identifier) written in the label. Gateway EUI can be changed using the LoRa® 130X Gateway Configuration Web Interface.

Step 1: Take your Unique Gateway EUI

The Unique Gateway EUI is a number which allows the Network Server to identify your gateway. This parameter is written in the label of the **EMB-Fem2GW-130X-O**

Gateway. It can be changed, according to your preferences, through Embit Gateway Configuration Web Interface, under the "Configuration Tab".

8 Example: The Things Network LoRaWAN® Network Server

This section provides a brief explanation to register a new gateway in a LoRaWAN® Network Server.

The LoRaWAN® Network Server taken into account for this example is "The Things Network" network server.

The references to all the complete procedure to be carried out can be found on The Thing Industries website in the "Registering Gateways" tab, at the link: [The Things Industries](#)

Step 1: Sign up with your Account or register a new one

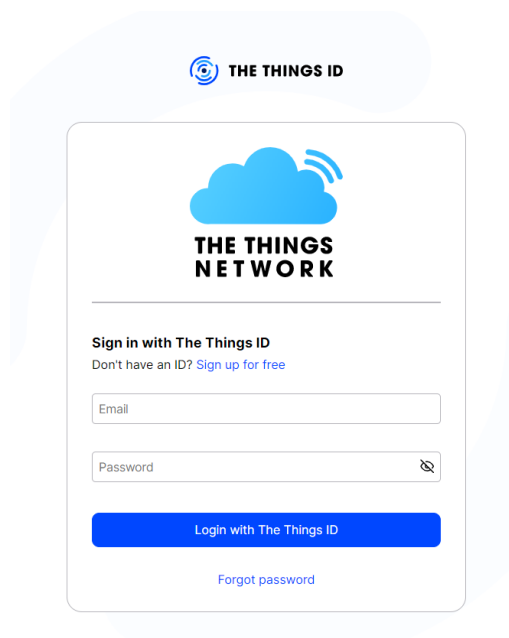


Figure 18 TTN Login Page

Step 2: Add a new gateway

Once you are logged in, click on your profile name, go to "Console" and select your cluster (Example: Europe).

In the next page, click on "Go to gateways" (Figure 19) and then click on "Register gateway" (Figure 20).

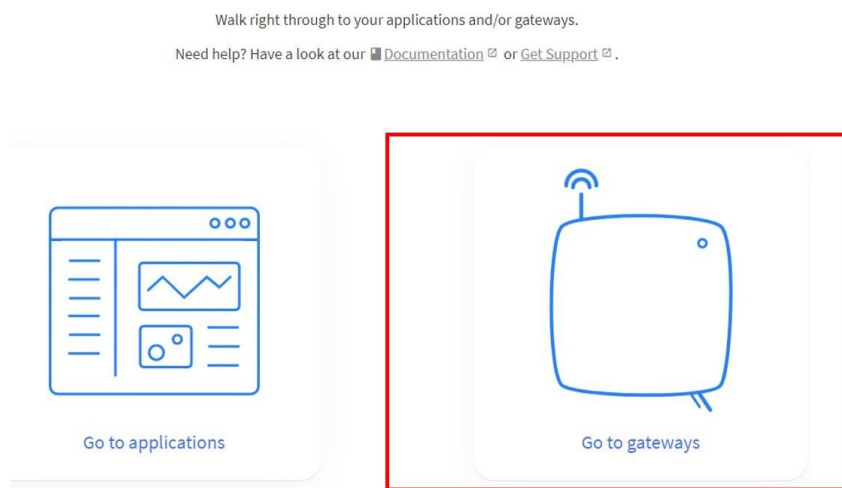


Figure19 Gateway selection



Figure 20 Register gateway button

In the next window, you have to compile all the fields required (Figure 21). The Gateway EUI is the hexadecimal EUI written on the label "Gateway EUI" in the Embit Gateway Configuration Tab from the Gateway Web Interface.

Register gateway

Register your gateway to enable data traffic between nearby end devices and the network.
Learn more in our guide on [Adding Gateways](#).

The screenshot shows a web form for registering a gateway. It contains the following fields and options:

- Owner ***: A dropdown menu with 'embit' selected.
- Gateway EUI ?**: A field showing '00 1B C5 06 70 21 00 25' with a 'Reset' button.
- Gateway ID ? ***: A text field containing 'eui-001bc50670210025'.
- Gateway name ?**: A text field containing 'My new gateway'.
- Frequency plan ? ***: A dropdown menu with 'Select...' selected.
- Require authenticated connection ?**: An unchecked checkbox.

Below the form, there is a section for 'Share gateway information' with two checked options: 'Share status within network ?' and 'Share location within network ?'. At the bottom, there is a blue button labeled 'Register gateway' which is circled in red.

Here your ID name will appear

Configured Gateway EUI

Gateway ID – Auto generated (can be modified)

Gateway name

Can select frequency according to your location

Required for LoRaWAN® Basic-Station (*Figure 21.1*)

Figure 21 Add gateway settings

If your gateway is a LoRaWAN® Basic-Station and you need to generate the API Key for CUPS and LNS, you have to tick the proper check-box as shown in the image below.

- ☒ **Require authenticated connection ?**
Choose this option eg. if your gateway is powered by [LoRa Basic Station](#)
- ☒ **Generate API key for CUPS ?**
- ☒ **Generate API key for LNS ?**

Figure 21.1 Add gateway settings - LoRaWAN® Basic-Station

Once that all the settings are completed, click on “Register gateway” button.

Step 3: Check your connection

After that the adding procedure is completed, a general overview will appear (Figure 22)

The screenshot displays the configuration page for a gateway named **emb-fem2gw-1302-o** with ID `emb-fem2gw-1302-o`. The status is **Disconnected**. The interface is divided into three main sections:

- General information:**
 - Gateway ID: `emb-fem2gw-1302-o`
 - Gateway EUI: `n/a`
 - Gateway description: `None`
 - Created at: `Feb 16, 2023 15:55:34`
 - Last updated at: `Feb 16, 2023 15:55:34`
 - Gateway Server address: `eu1.cloud.thethings.network`
- LoRaWAN information:**
 - Frequency plan: `EU_863_870`
 - Global configuration: [Download global_conf.json](#)
- Live data:** Shows a timestamp `15:55:34` and a [Create gateway](#) button. A link [See all activity →](#) is also present.
- Location:** Features a world map with the text `No location information available` and a link [Change location settings →](#).

At the top right, it indicates **1 Collaborator** and **0 API keys**.

Figure 22 General overview of the added gateway

When your Gateway is connected, a green dot is showed in the upper side of the info. Near the connection status, you can also find the list of the collaborators of the new gateway and, by clicking “Collaborator” you can add a new member.

9 IP Backhaul Connection

EMB-Fem2GW-130X-O supports two kinds of backhaul IP connection:

- Ethernet IP connectivity;
- Cellular connectivity.

The system is connected to the Ethernet Network through Ethernet Cable. IP address is assigned through DHCP.

Cellular connectivity is achieved using Quectel LTE Module. **EMB-Fem2GW-130X-O** supports mini SIM Size, with a Push-Push connector. It automatically guarantees LTE connectivity, and without it switches to 3G/UMTS or to GPRS connection according to the cellular coverage.

10 LTE Connection

In this section is described how **EMB-Fem2GW-130X-O** manages the LTE peripheral.

How to set up an LTE Network is explained. In Linux OS, LTE interface is called ppp0. We setup the OS to start the LTE module at boot time, according to the lte configuration file stored in /etc/ppp/peers.

This file is composed as follows:

#connect is the command to manage the script to launch LTE connection.
The last name, in this case tre.it, is the APN server name.

```
connect "/usr/sbin/chat -v -f /etc/chatscripts/gprs -T tre.it"
```

```
#serial port adopted by the LTE Module  
/dev/ttyUSB3
```

```
#With this option, the peer will have to supply the local IP address  
during IPCP negotiation (unless it specified explicitly on the command  
line or in an options file)
```

```
Noipdefault
```

#Add a default route to the system routing tables, using the peer as the gateway, when IPCP negotiation is successfully completed

defaultroute

replacedefaultroute

#Do not require the peer to authenticate itself

Noauth

Do not exit after a connection is terminated; instead try to reopen the connection

persist

Ask the peer for up to 2 DNS server addresses. The addresses supplied by the peer (if any) are passed to the /etc/ppp/ip-up script in the environment variables DNS1 and DNS2, and the environment variable USEPEERDNS will be set to 1. In addition, pppd will create an /etc/ppp/resolv.conf file containing one or two nameserver lines with the address(es) supplied by the peer.

Usepeerdns

Steps to modify this file follows:

1. Enter through SSH Connection in the Gateway using as username root and password raspberry

2. Move to the proper folder using the command
`cd /etc/ppp/peers`

```

root@192.168.131.182:22 - Bitvise xterm
GNU nano 2.7.4 File: lte
connect "/usr/sbin/chat -v -f /etc/chatscripts/gprs -T tre.it"
/dev/ttyUSB3
noipdefault
defaultroute
replacedefaultroute
#lcp-echo-interval 30
#lcp-echo-failure 4
noauth
persist
#mtu 1492
#maxfail 0
#holdoff 20
usepeerdns
#Optionale, far sempre apparire come ppp2:
#unit 2
  
```

Figure 23 /etc/lte file view

3. Open a Linux File editor to modify the file using the command
`nano lte`
The following screen appears
4. Change tre.it with your APN address
5. Press Ctrl+O to save, confirming the name of the file pressing ENTER
6. Restart the LTE network using the commands
`ifdown lte`
`ifup lte`

11 End Device configuration on Network Server

In case you want to build a complete network consisting of a gateway and end devices (only with end devices "Embit Development Kit"), the additional configurations to be made on the Network Server are as follows:

11.1 Create New Application

Once you have configured your gateway, click on your profile name and then go to "Console". In this page, click on "Go to applications" (Figure 27) and in the next page click on "Create application" (Figure 28).

Walk right through to your applications and/or gateways.

Need help? Have a look at our [Documentation](#) or [Get Support](#).

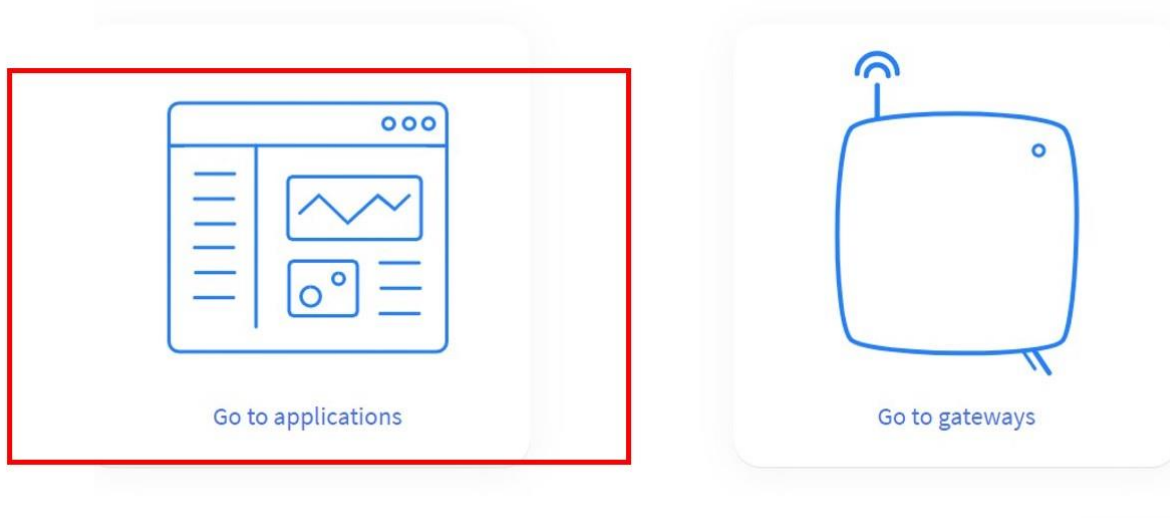


Figure 27 TTN Console view



Figure 28 Add application button

A window like the one in Figure 29 will be opened.

Add application

Owner *

Your ID

← Here your ID name will appear

Application ID *

my-new-application

→ Here you have to indicate the ID of the new application

Application name

My new application

← Here you can write the name of the new application

Description

Description for my new application

→ Here you can write a brief description of what your new app will do

Create application

Optional application description; can also be used to save notes about the application

Figure 29 Add new application procedure

“Application ID” and “Description” are human-readable string. Fill all the fields with your personal information and then press “Create application” button.

11.2 Add New Device

Once that your application is created, in the relative box you can find all the information related to the selected application and add a new device, by clicking on the “Register end device” button (Figure 30).

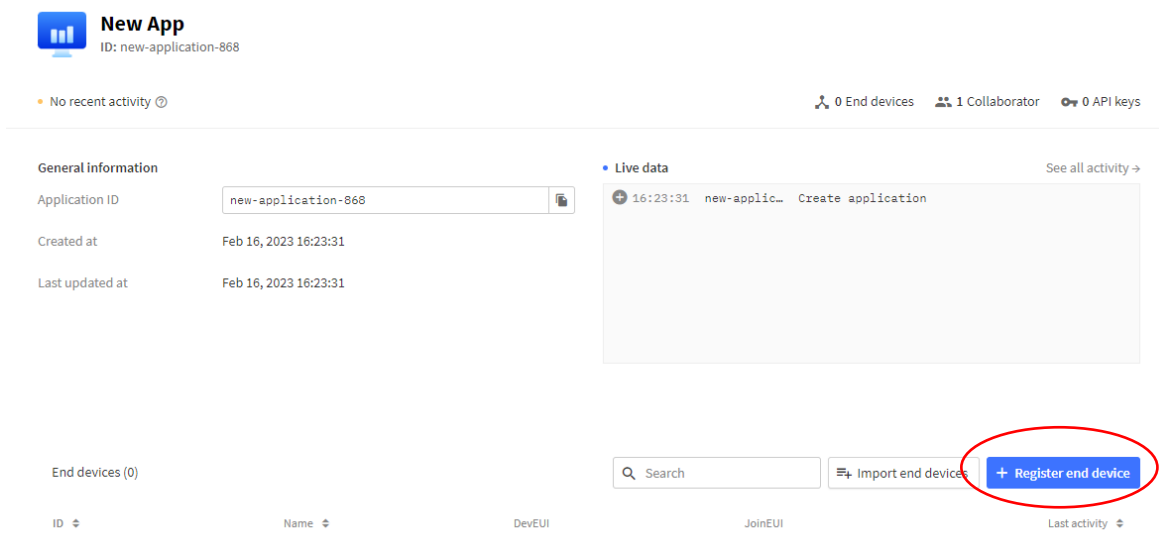


Figure 30 Add a new end device

In the next window, select “Enter end device specifics manually” (Figure 31)

Register end device

Does your end device have a QR code? Scan it to speed up onboarding.



End device type

Input Method ?

- ☒ Select the end device in the LoRaWAN Device Repository
- ☐ Enter end device specifics manually

End device brand ? *

Cannot find your exact end device? [Get help here](#) and try **enter end device specifics manually** option above.

Figure 31 Register end device window

Now further settings will be proposed. Select a proper “frequency plan” and 1.0.3 LoRaWAN version. If the correct parameters have been selected, the ability to add advanced settings for configuration will be displayed (Figure 32)

Frequency plan ⓘ *

Europe 863-870 MHz (SF12 for RX2) | ▼

LoRaWAN version ⓘ *

LoRaWAN Specification 1.0.3 | ▼

Regional Parameters version ⓘ *

RP001 Regional Parameters 1.0.3 revision A | ▼

Show advanced activation, LoRaWAN class and cluster settings ▼

Figure 32 New device initial settings

Using the “advanced settings” section, you will be able to select OTAA (Over-The-Air-Activation), and the end-device LoRaWAN Class. (Figure 33)

Activation mode ⓘ

☒ Over the air activation (OTAA)

☐ Activation by personalization (ABP)

☐ Define multicast group (ABP & Multicast)

Additional LoRaWAN class capabilities ⓘ

None (class A only) | ▼

Network defaults ⓘ

☒ Use network's default MAC settings

Cluster settings ⓘ

☐ Skip registration on Join Server

Figure 33 New device advanced settings

In the "Provisioning Information" section below the advanced settings you have to configure the device specific parameters and addresses (Figure 33):

- "JoinEUI" (formerly "App EUI") is an 8-bytes (hex) value used by the server for the join procedure. It is related to your application (it can be the same for every device registered for the application) and, if it is not provided by the manufacturer, it can be generated through to the appropriate button.
- "Dev EUI" is a unique 8-bytes (hex) value given by the manufacturer.
- "AppKey" is a 16-bytes (hex) key used by the network server for encrypt operation. It can be generated or directly created by the user and can be the same for every device registered for the application).

Provisioning information

JoinEUI ⓘ *

11 22 33 44 55 66 77 88 Reset

This end device can be registered on the network

DevEUI ⓘ *

70 B3 D5 7E D0 05 AA C3 Generate 2/50 used

AppKey ⓘ *

72 43 0F E7 C7 11 49 A6 B4 AE 15 CC 92 68 0B 2A Generate

End device ID ⓘ *

eui-70b3d57ed005aac3

This value is automatically prefilled using the DevEUI

After registration

☒ View registered end device

☐ Register another end device of this type

Register end device

Figure 34 Provisioning Information Setting

The "End device ID" is automatically generate from the "Dev EUI" but it can be modified using any name.

Once all parameters have been set, you can complete the registration clicking on "Register end device" (Figure 34).

Now an overview page will open. Please, check if all the parameters are correctly set (Figure 35).

After that the configuration is finished, in “Live data” section is possible to see all the packets which we are sending/receiving to/from the network server.

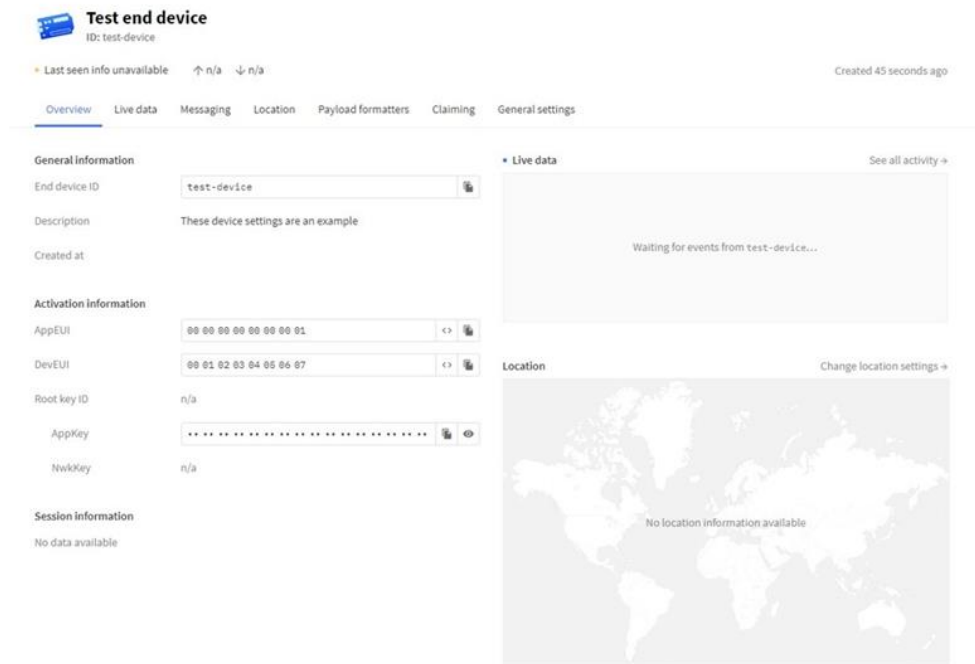


Figure 35 End device overview

13 Disclaimer of liability

The information provided in this and other documents associated to the product might contain technical inaccuracies as well as typing errors. Regulations might also vary in time. Updates to these documents are performed periodically and the information provided in these manuals might change without notice. The user is required to ensure that the documentation is updated and the information contained is valid. Embit reserves the right to change any of the technical/functional specifications as well as to discontinue manufacture or support of any of its products without any written announcement.

13.1 Disclaimer of liability

The user must read carefully all the documentation available before using the product. In particular, care must be taken in order to comply with the regulations (e.g., power limits, duty cycle limits, etc.).

13.2 Handling Precautions

This product is an ESD sensitive device. Handling precautions should be carefully observed.

13.3 Limitations

Every operation involving a modification on the internal components of the module will void the warranty.

13.4 Trademarks

Embit is a registered trademark owned by Embit s.r.l.

All other trademarks, registered trademarks and product names are the sole proprietary of their respective owners.