

## Tool Specification


1. Part Number: YC-390R

Terminal: BZF-01T-0.7, BZM-01T-0.7

### 3. Application

Crimp Position	Wire Size KV	Tensile Strength N (kgf)	Strip Length mm
Α	0.3mm²	44.1(4.5) min.	4.0
Α	(0.4mm²)	(53.9(5.5) min.)	4.0
В	0.5mm <sup>2</sup>	63.7(6.5) min.	4.0

# Crimp Position

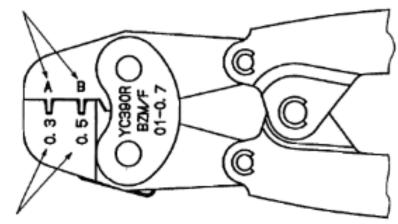

#### Wire size

- · Check the crimp appearance and tensile strength prior to use.
- Select the appropriate crimp position based on the wire size that will be used.
- The wire size in ( ) above could cause excessive crimping.
  Check the tensile strength and crimp appearance to confirm an acceptable crimp.
- The insulation barrel is set for type of wire listed and in not adjustable.



# YC-390R Calibration

- 1. Visually inspect crimp sections A and B checking for abnormal wear, chips, or damage.
- 2. Strip a 22awg, UL1015 wire to 4.0mm.
- 3. In crimp position A, crimp an BZF-01T-0.7 OR BZM-01T-0.7 terminal onto the 22awg wire.
- 4. Visually inspect the crimp for defects and large burrs.
- 5. Check the tensile strength and verify it meets the tensile strength requirement.
- 6. Strip a 20awg, UL1015 wire to 4.0mm.
- 7. In crimp position B, crimp an BZF-01T-0.7 OR BZM-01T-0.7 terminal onto the 20awg wire.
- 8. Visually inspect the crimp for defects and large burrs.
- 9. Check the tensile strength and verify it meets the tensile strength requirement.
- 10. If both sections pass the visual and tensile strength requirements the tool is within calibration requirements.