



## ■ Features

- Supporting connection to fuel generators
- Ultra-wide input voltage range: 110V to 300Vac
- Input power factor  $\geq 0.99$
- Input current harmonic distortion  $\leq 5\%$
- Output power factor of 1
- 50Hz/60Hz frequency conversion mode
- Emergency power-off function (EPO)
- USB/RS-232 communication interfaces
- LCD display panel
- Intelligent charging mode, adjustable charging current
- 3-year warranty

## ■ Applications

- Data center
- Financial institution
- Smart Buildings
- Industrial automation

## ■ Global Trade Item Identifier


- MW Search: <http://www.meanwell.com.cn/serviceGTIN.aspx>

## ■ Description

ES-SU3K is a 3KVA online UPS power supply, providing rack type and tower type two appearance structures, using advanced digital control technology, combined with high integrated circuits and optimized design, enhance anti-interference ability, and ensure stable performance. The product has a full load efficiency of up to 94%, an input power factor of over 0.99, and a current harmonic of less than or equal to 5%, which can effectively prevent additional energy loss and reduce grid pollution. Its ultra-wide voltage input range is compatible with unstable power grids and fuel generators, which can easily cope with harsh power environments, reduce the need for frequent switching to battery power, and accurately match the needs of highly sensitive loads such as servers and medical equipment. In addition, the product has built-in EPO emergency power-off function and USB/RS-232 dual communication interfaces, which further strengthens the system security and remote control capabilities. It provides efficient, stable and flexible power protection solutions for key scenarios such as data centers, intelligent manufacturing, and communication base stations.

## ■ Drive Model Encoding


**ES - SU3K - TH**

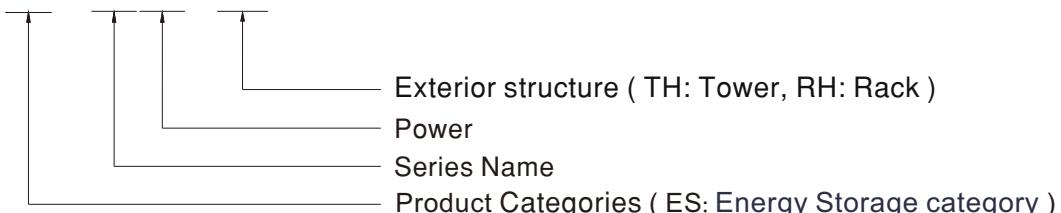

Specification	ES-SU3K-TH	ES-SU3K-RH		
<b>INPUT</b>				
<b>Nominal Voltage</b>	110~300Vac(Based on load at 50%); 160~300Vac(Based on load at 100%)			
<b>Frequency Range</b>	40~70Hz			
<b>Power Factor</b>	$\geq 0.99$ @nominal voltage(100%load)			
<b>THDi</b>	$\leq 5\%$ @100% resistive load			
<b>Battery</b>				
<b>Numbers</b>	6			
<b>Charging Voltage (FV)</b>	72V			
<b>Low-Voltage Protection Point</b>	67.7V			
<b>High-Voltage Protection Point</b>	90V			
<b>Charing Current (CC)</b>	8A(1/2/4/6/8A adjustable through LCD)			
<b>OUTPUT</b>				
<b>Power</b>	3KVA/3KW			
<b>Output Voltage</b>	200/208/220/230/240Vac			
<b>AC Voltage Regulation</b>	$\pm 1\%$			
<b>Frequency</b>	<b>AC Mode</b>	47~53Hz/57~63Hz		
	<b>Battery Mode</b>	50/60 $\pm 0.1$ Hz		
<b>Waveform</b>	<b>Battery Mode</b>	Pure Sinewave		
<b>Harmonic Distortion</b>	$\leq 2\%$ THD(Linear Load); $\leq 5\%$ THD(Non-linear Load)			
<b>Transfer Time</b>	<b>AC to Battery</b>	0		
	<b>Online to Bypass</b>	4ms(Typical)		
	<b>ECO to Battery</b>	8ms(Typical),10ms(max)		
<b>Efficiency</b>	<b>ECO Mode@full charged battery</b>	97%		
	<b>AC Mode @full charged battery</b>	94%		
	<b>Battery Mode</b>	91%		
<b>SAFETY &amp; EMC</b>				
<b>SAFETY STANDARDS</b>	EN IEC 62040-1:2019/A11:2021,YD/T1095-2018			
<b>EMC EMISSION</b>	Parameter	Standard		
	Conducted emission	EN IEC 62040-2:2018		
	Radiated emission	EN IEC 62040-2:2018		
	Harmonic current	EN IEC 61000-3-12:2011		
	Voltage flicker	EN IEC 61000-3-11:2019		
<b>EMC IMMUNITY</b>	Parameter	Standard		
	ESD	EN 61000-4-2:2008		
	RS	EN 61000-4-3:2006		
	EFT	EN 61000-4-4:2012		
	Surge	EN 61000-4-5:2014		
	Conducted	EN 61000-4-6:2013		
	Magnetic Field	EN 61000-4-8:2009		
	Voltage Dips and Interruptions	EN IEC 61000-4-11:2020 100% residual voltage for 0.5cycle; 100% residual voltage for 1cycle; 100% residual voltage for 250cycle; 30% residual voltage for 25cycle		
<b>OTHER</b>				
<b>Communication interface</b>	RS232/USB			
<b>Phase</b>	single phase with groudn			
<b>Display</b>	LCD			
<b>Operating temperature</b>	0~40°C			
<b>Humidity</b>	20-90% relative humidity(non-condensing)			
<b>Elevation</b>	1000m			
<b>Struture</b>	Tower	Rack		
<b>Weight</b>	7.4kg	10.5kg		
<b>Size</b>	426*190*338mm			
<b>NOTE</b>				
1. Derate capacity to 80% when the output voltage is adjusted to 200VAC/208VAC 2. if the UPS is installed or used in a place where the altitude is above than 1000m. the outout power must be derated one percent per 100m. ※ Product Liability Disclaimer : For detailed information ,please refer to <a href="https://www.meanwell.com/serviceDisclaimer.aspx">https://www.meanwell.com/serviceDisclaimer.aspx</a>				


### ■ Mechanism Dimension

#### ■ ES-SU3K-TH

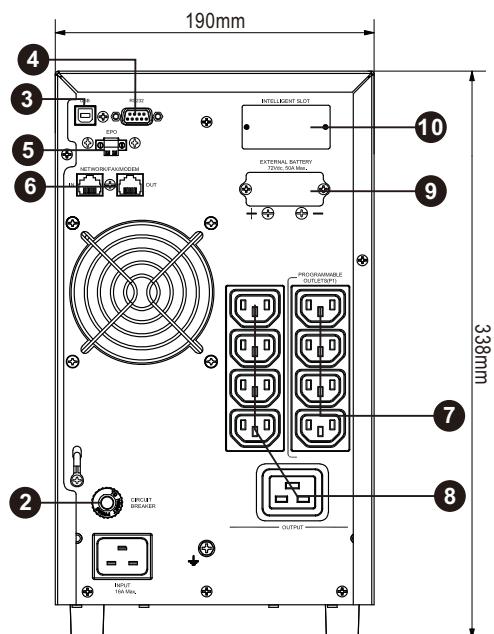

(426\*190\*338mm)

#### ■ ES-SU3K-RH

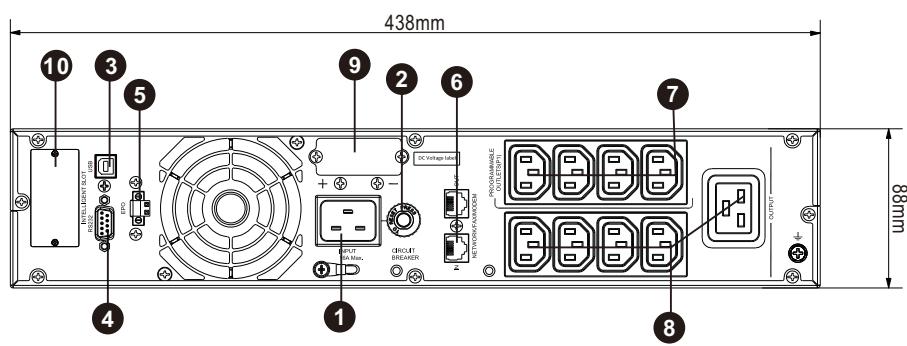


(630\*438\*88mm)


1. AC input
2. Input circuit breaker
3. USB communication port
4. RS-232 communication port
5. EPO port
6. Modem/Phone/Network surge protection
7. Programmable outlets: connect to non-critical loads
8. Output receptacles
9. External battery interface
10. Control Card Slot

Connecting the battery: When connecting the battery box, be sure to confirm that the polarity of the battery is correctly connected.

Required specifications of circuit breaker: voltage  $\geq 1.25 \times$  battery voltage / number of groups, current  $\geq 50A$   
 Please select the appropriate battery size and connection quantity according to the needs of the birth time and the specifications of the UPS.

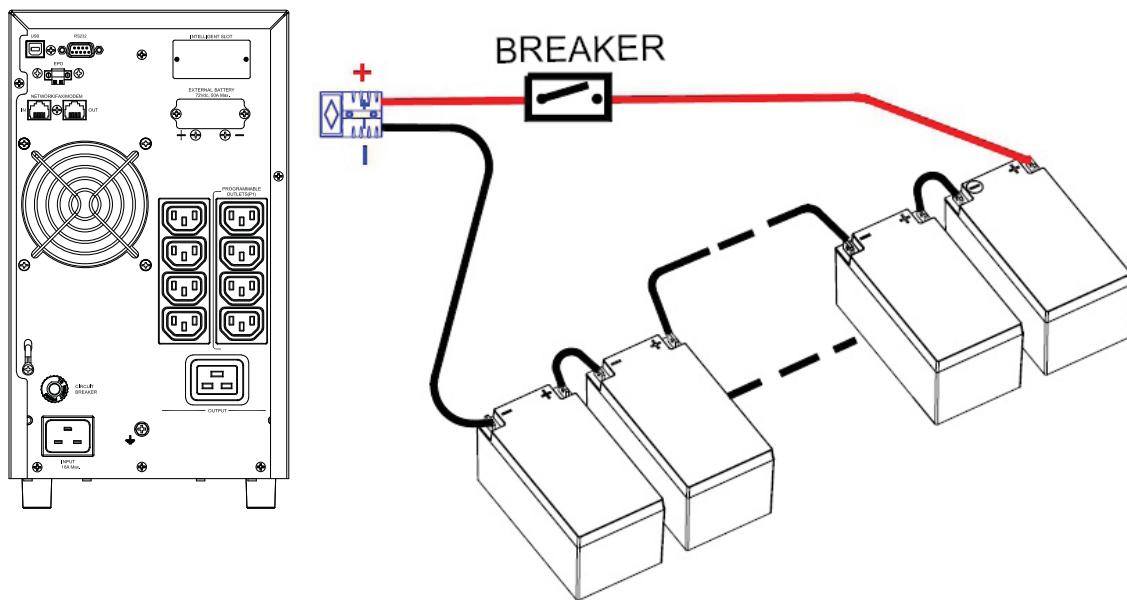

### ■ LCD Panel

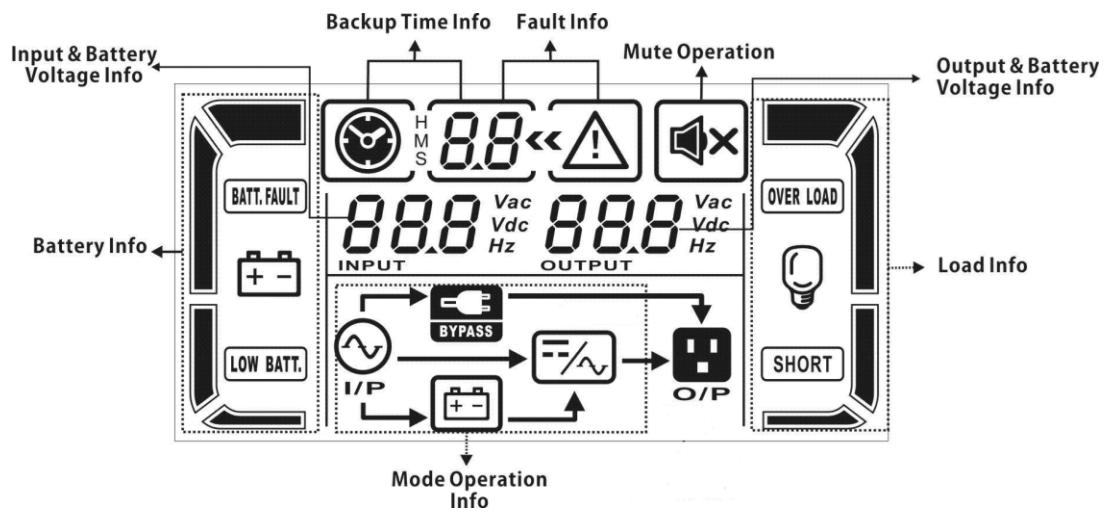

Display	Function
Backup time information	
 <b>88</b>	Indicates battery diacharge time in munber H:hours, M: mintes, S: seconds
Fault information	
 <b>88</b>	Indicates that the warning and fault occurs
 <b>88</b>	Indicates the fault codes
Mute operation	
 <b>88</b>	Indicates that the UPS alarm is disabled
Output & Battery voltage information	
 <b>888</b>	Indicates the output voltage, frequency or battery voltage Vac: output voltage, Vdc: battery voltage, Hz: frequency
Load information	
 <b>88</b>	Indicates the load level by 0-25%、26-50%、51-75%、and 76-100%。
 <b>OVER LOAD</b>	Indicates overload
 <b>SHORT</b>	Indicates the load or the output is short
Load information	
 <b>P1</b>	Indicates that programmable management outlets are working
Mode operation information	
 <b>88</b>	Indicates the UPS connected to the mains
 <b>88</b>	Indicates thebattery is working
 <b>88</b>	Indicates the bypass circuit is working
 <b>ECO</b>	Indicates the ECO mode is enabled
 <b>88</b>	Indicates the Inverter circuit is working
 <b>88</b>	Indiactes the output is working
Battery information	
 <b>88</b>	Indicates the battery capacity by 0-25%、26-50%、51-75%、和 76-100%。
 <b>BATT. FAULT</b>	Indicates the battery is not connected
 <b>LOW BATT.</b>	Indicates low battery level and low battery voltage
Input & Battery voltage information	
 <b>888</b>	Indicates the input voltage or frequency or battery voltage Vac: Input voltage, Vdc: battery voltage, Hz: input frequency

**■ Audible Alarm**

Description	Buzzer status
Battery Mode	Sounding every 4 seconds
Low Battery	Sounding every second
Overload	Sounding twice every second
Fault	Continuosly sounding
Bypass Mode	Sounding every 10 seconds

**■ LCD display wording index**

Abbreviation	Display content	Meaning
ENA	ENR	Enable
DIS	DIS	Disable
ESC	ESC	Escape
HLS	HLS	High loss
LLS	LLS	Low loss
BAT	BAT	battery
CF	CF	Converter
TP	TP	Temperature
CH	CH	Charger
FU	FU	Bypass frequency untable
EE	EE	EEPROM error
EP	EP	EPO

**■ Accessories List**

	Object	Number
1	User Manual	1
2	Monitoring software CD-ROMs	1
3	USB cable	1
4	Computer cables	1
5	Battery cable	1
6	Vertical tripod (only Rack)	2
7	Cabinet mounting brackets (only Rack)	2

## ■ Optional accessories(Need to be ordered separately)

Model	Item	Description	Function
PSWG-ES-SNMP		SNMP Communication Card	<ul style="list-style-type: none"> <li>Multiple UPS systems can be controlled and monitored via the RJ-45 interface.</li> <li>UPS data (voltage, frequency, load level, battery capacity) is displayed in a real-time and dynamic graphical interface.</li> <li>Warning notifications can be sent via audible and visual alarms, broadcasts, mobile messengers, SNMP traps, and emails.</li> <li>Historical data can be stored in the database of the terminal computer.</li> <li>Simple firmware update.</li> <li>It has the functions of password security protection and remote access management.</li> </ul>
PSWG-ES-Modbus		Modbus Card	<ul style="list-style-type: none"> <li>Multiple UPS systems can be controlled and monitored via the RS-485 interface.</li> <li>It supports the MODBUS RTU communication protocol.</li> <li>Data reading and writing operations can be performed via registers.</li> <li>It provides surge protection.</li> </ul>
PSWG-ES-AS400-9		Relay Card(9-Pin wire-locking terminal)	<ul style="list-style-type: none"> <li>It provides contact signals to enable remote monitoring of the UPS.</li> <li>To meet different environmental requirements, the signal status (open circuit or closed circuit) of the dry contacts can be set via jumpers.</li> </ul>
PSWG-ES-AS400-D		Relay Card(DB9 connector)	