Max. 190 m³/h

DC centrifugal fans

Ø 101 x 52 mm



Impeller: GRP1) Material: Direction of air flow: Axial: Intake,

Centrifugal: Exhaust

Direction of rotation: Clockwise,

looking towards rotor

Connection: via single wires AWG 22, TR 64 Highlights: Backward-curved impeller

Weight:

- Possible special versions:


(See chapter DC fans - specials)

- Speed signal
- Go / NoGo alarm
- Alarm with speed limit
 - External temperature sensor
 - Internal temperature sensor
 - PWM control input
 - Analog control input

 - Moisture protection

1) Fiberglass-reinforced plastic


Series RER 101 N Nominal data	Air flow	Air flow	Nominal voltage	Voltage range	Sound power level	Sintec sleeve bearings Ball bearings	Power consumption	Nominal speed	Temperature range	Service life L ₁₀ (40 °C) ebm-papst standard Service life L ₁₀ (T _{max}) ebm-papst standard	Life expectancy L _{10IPC} (40 °C) see page 17	Curve
Туре	m³/h	cfm	VDC	VDC	Bel(A)	■/■	Watts	rpm ⁻¹	°C	Hours	Hours	
RER 101-36/12 NH	162	95	12	913.6	6.9		13.0	5 000	-20+70	65 000 / 32 500	110 000	2
RER 101-36/12 NHH	190	112	12	913.6	7.2		20.5	6 000	-20+70	60 000 / 30 000	102 500	1
RER 101-36/14 NHH	190	112	24	1827.2	7.2		22.5	6 050	-20+70	60 000 / 30 000	102 500	1
RER 101-36/18 NHH	190	112	48	3660	7.2		19.4	5 850	-20+70	60 000 / 30 000	102 500	1
Subject to change												

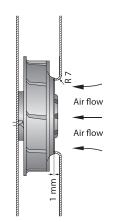

The air flow and sound level of the centrifugal fans without external housing depend on their individual installation conditions.

The stated air flow and sound level were recorded under the following measurement parameters: Centrifugal fan mounted on a foundation plate 148 x 148 mm.

Cover plate 148 x 148 mm, with an air inlet opening Ø 66 mm, arranged concentrically to the

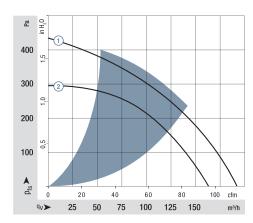

Air performance measured according to: ISO 5801. Installation category A, with ebm-papst inlet ring without contact protection.

Noise: Total sound power level L_WA ISO 103002 measured on a hemisphere with a distance of 2 m;

fan axis.
The values given are applicable only under the specified measuring conditions and may differ depending on the installation conditions.

In the event of deviation from the standard configuration. the parameters must be checked after installation! For detailed information see

http://www.ebmpapst.com/general conditions

